


## ETLS 66

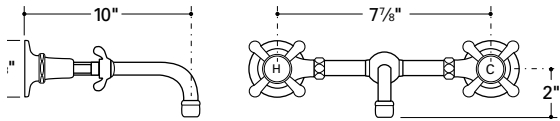

1/2" Female NPT inlets

Supplied with 1/4" lift-and-turn drain

All dimensions are approximate. The center spread will vary, and for this reason, it is strongly recommended that rough-in be done with product on-site.

## INSTALLATION GUIDELINES

Use only a protected, smooth-jawed, or strap wrench on any finished surface.

Inlet connections are 1/2" female NPT.

Well-supported 1/2" nipples should be stubbed-out at the proper center spread.

Be sure that the supplies are level, secure, and on proper centers.

Be sure that the gaskets (provided) are used on the connections from the valve bodies to the spout.

The upper waste assembly can be set with putty.

Check for leaks.

After installation, unscrew and remove the aerator assembly. Carefully open the hot and cold valves fully to flush out any debris in the supply lines. Once the lines have been flushed, close the valves and reinstall the aerator assembly.

The spout projects 10" from wall.

The unit is supplied with 1/4" lift-and-turn drain.

To service valve stem: Unscrew the index assembly to expose the screw for the handle. The cover should be hand tight.

If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST).

These guidelines have been prepared for the professional contractor to aid in the installation of:  
**ETOILE WALL MOUNTED LAVATORY FAUCET (ETLS 66)**

1/00

All dimensions are based on original specifications and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S