

INSTALLATION GUIDELINES



STYLE No. OTPF01, OT01PF

On Tap Wall Mounted Articulated Pot Filler with Metal Wheel Handle

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor and must be onsite prior to rough-in, this allows the installer to visualize the installation.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

TECHNICAL DETAILS:


DETAIL	SPECIFICATION
FITTING HOLE DIAMETER	1-1/4" [32mm]
HANDLE TURN ANGLE	QUARTER TURN
INLET CONNECTION	1/2" FEMALE NPT †
SPOUT SWIVEL	YES
WATER PRESSURE RANGE	20psi [1.4 bar] MIN 80psi [5.5 bar] MAX
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]

† UK Style No. **OT01PF** is supplied with 1 **BSPP** adapter, assembly required.

ROUGH-IN:

- Determine the ideal location based on the client's preference and rough-in a wall supported 1/2" NPT NIPPLE (not supplied).
- Adequate blocking in the wall is required to support inlet supply and MOUNTING HARDWARE.

DIMENSION	VALUE
A	1-1/4" [32mm]
B	1/2" [13mm]

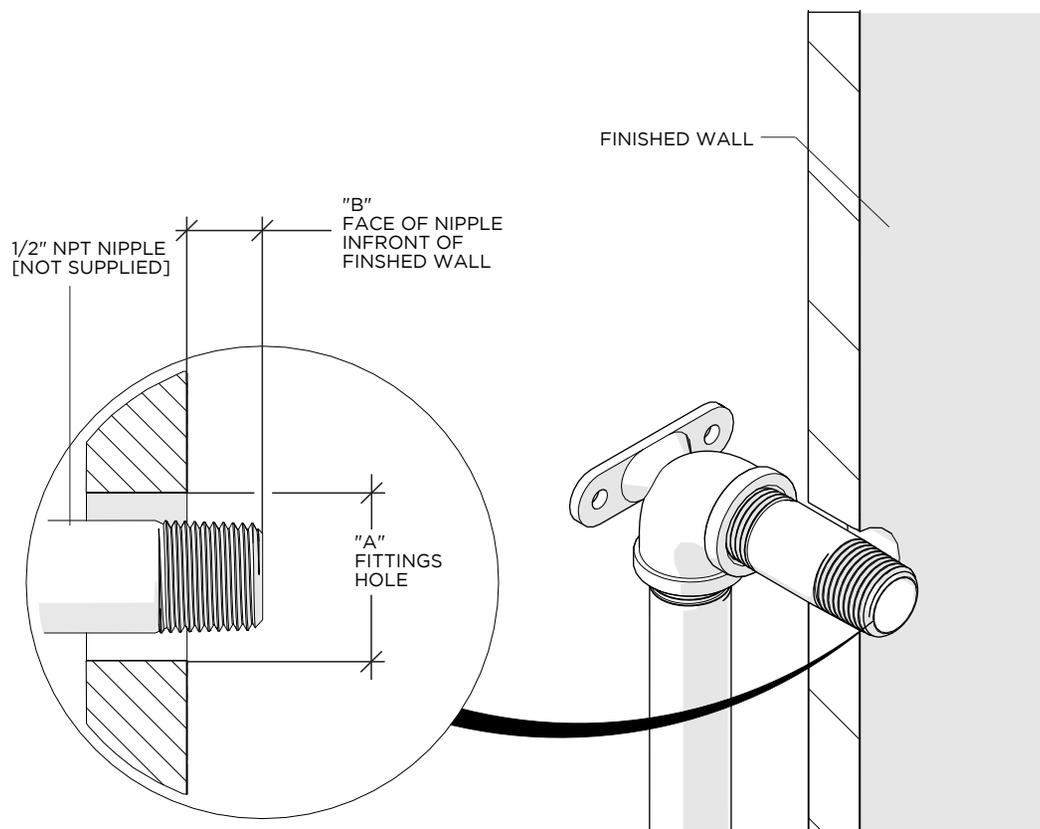


WATERWORKS

INSTALLATION GUIDELINES




STYLE No. OTPF01, OT01PF
On Tap Wall Mounted Articulated Pot Filler with Metal Wheel Handle

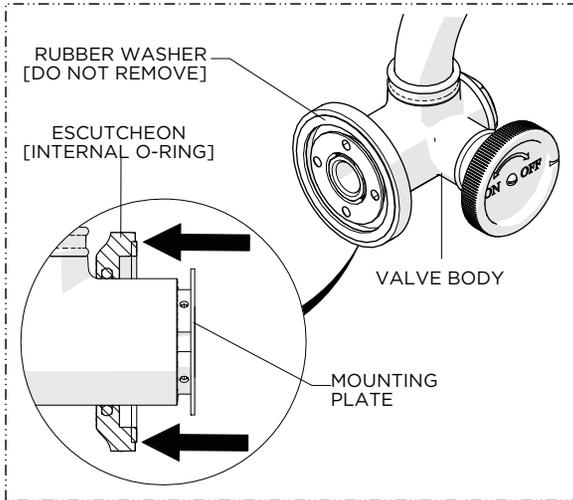


- Slide the ESCUTCHEON against the VALVE BODY to expose the SET SCREWS.

NOTE: Do NOT remove the RUBBER WASHER from the ESCUTCHEON.

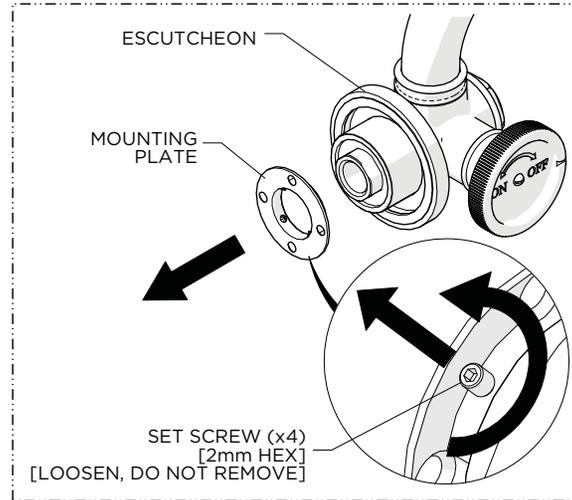


- Loosen, but do **NOT** remove, the SET SCREWS (x4) using a 2mm HEX KEY then remove the MOUNTING PLATE from the VALVE BODY.

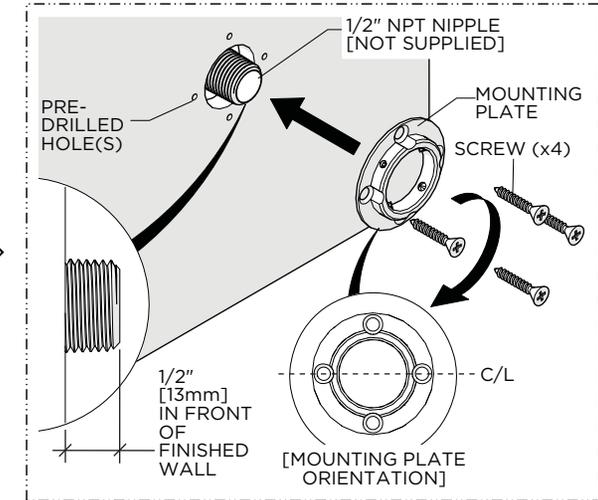


- Ensure the NIPPLE (not supplied) protrudes 1/2" [13mm] in front of the finished wall then install the MOUNTING PLATE, in the proper orientation, using the SCREWS (x4) provided.


NOTE: Adequate **BLOCKING** required.

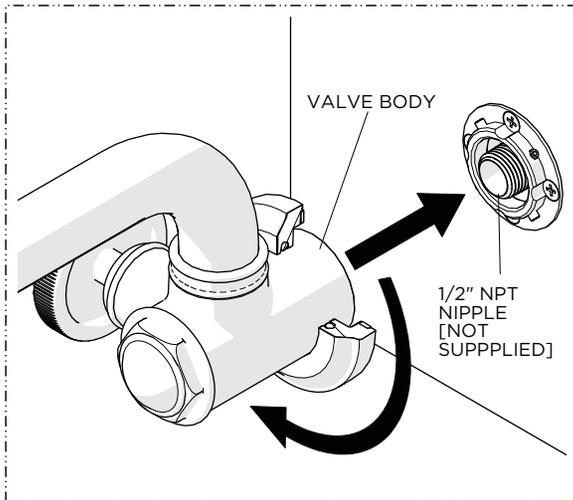

- Thread and securely tighten the VALVE BODY onto the NIPPLE (not supplied).

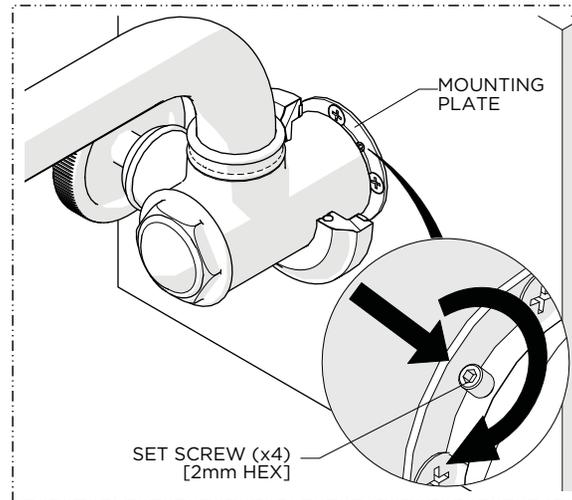

- Securely tighten the SET SCREWS (x4) on the MOUNTING PLATE using a 2mm HEX KEY to secure the SPOUT and prevent it from rotating.

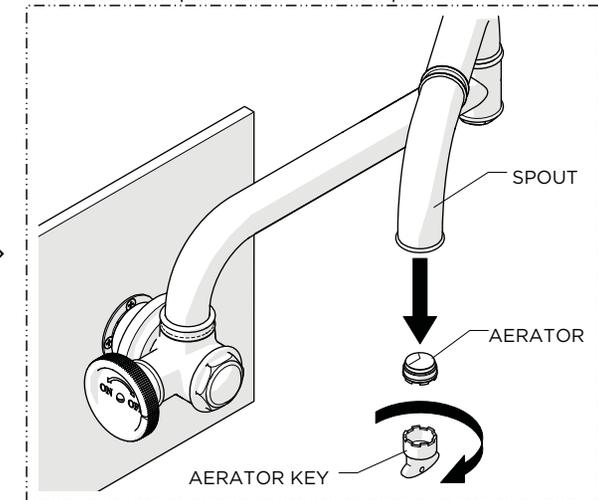


- Unthread and remove the AERATOR from the SPOUT using the AERATOR KEY provided.

WATERWORKS


INSTALLATION GUIDELINES




STYLE No. OTPF01, OT01PF
On Tap Wall Mounted Articulated Pot Filler with Metal Wheel Handle

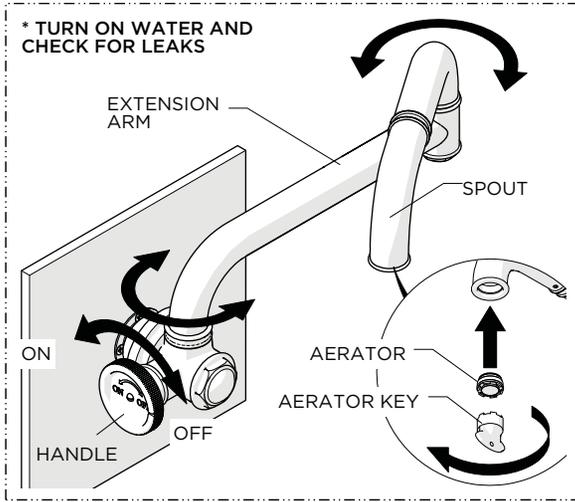

7. Turn on the water and operate the HANDLE to flush out any debris in the supply line and check for leaks then turn off water and re-install the AERATOR.

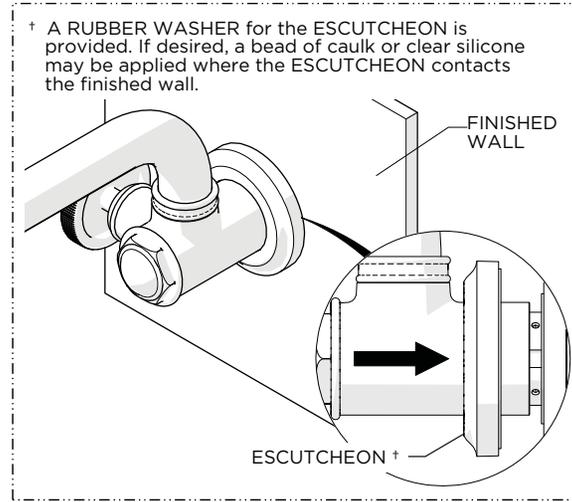


8. Slide the ESCUTCHEON down the VALVE BODY until it contacts the finished wall.

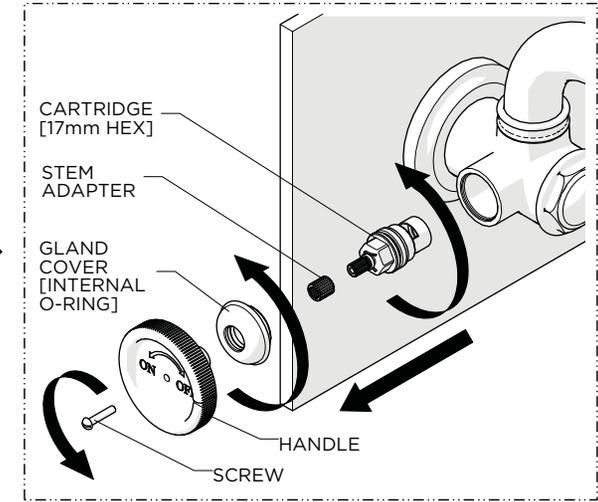

SERVICING THE CARTRIDGE:


1. Remove the SCREW, HANDLE and GLAND COVER to expose the CARTRIDGE then unthread and remove the CARTRIDGE.

NOTE: Do NOT discard the STEM ADAPTER.

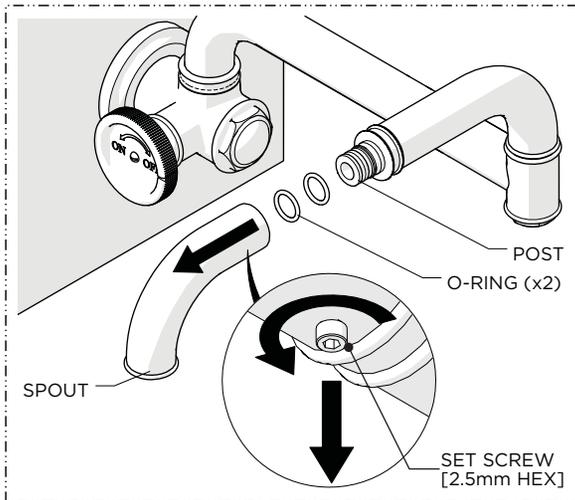


SERVICING THE SPOUT:

1. Loosen, but do NOT remove, the SET SCREW using a 2mm HEX KEY then remove the SPOUT to expose the POST and access the O-RINGS.

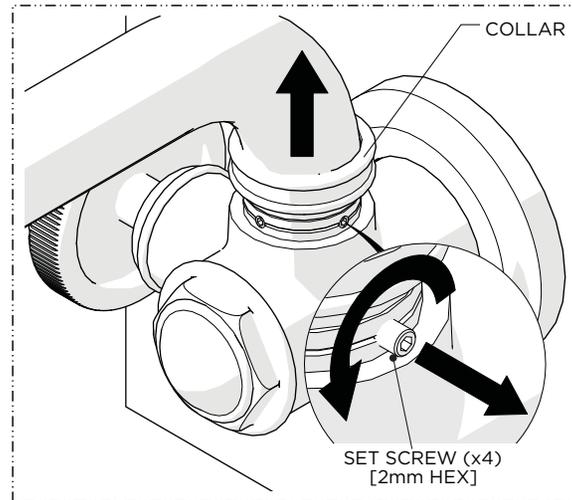

SERVICING THE ARTICULATED ARM:

1. Slide the COLLAR up to expose the SET SCREWS then loosen, but do NOT remove, the SCREWS using a 2mm HEX KEY.

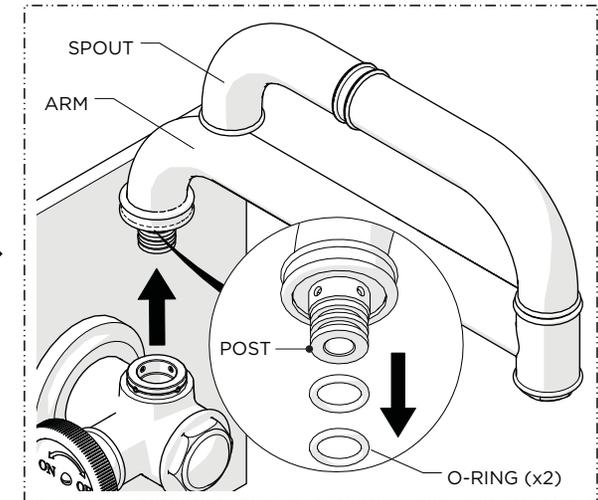

2. Remove the ARM to expose the POST and access the O-RINGS.