

FINISH:

Before installing this faucet the supply lines must be flushed out to prevent clogging of the aerator screens and damage to the ceramic disc cartridges.

4. Remove the caps from the temporary pipe nipples and turn on the water supply to flush out the lines. Once the lines are flushed, turn off the water supply.
 5. Determine the appropriate length for the pipe nipples. They should extend beyond the finish wall approximately 3/8".
 6. Apply thread sealant to both ends of the pipe nipple and thread one end of the nipple into the drop ell and the other end into the wall union (16). Thread the wall unions in a clockwise direction until the assembly is tight and the union nuts (15) are facing upwards to accept the faucet body.
 7. Hold the faucet in place and attach to the wall unions using the washers (12) provided. Be sure that the setscrew (8) is facing towards the wall.
 8. Turn on the water supply and check all connections for leaks. Once the supply connections are confirmed to be watertight slide the escutcheons (17) back until they are tight against the wall.
 9. To service the cartridge (9,10) simply unscrew the cover (25) and pull off the handle and cover together. The cover should only be hand tight. Once the handle assembly is removed and the water supply is shut off use an adjustable wrench to remove the cartridge in a counter-clockwise direction.
- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST).