


INSTALLATION GUIDELINES

GOOSENECK LAVATORY FAUCET

EASTON GOOSENECK LAVATORY FAUCET WITH CROSS OR LEVER HANDLES

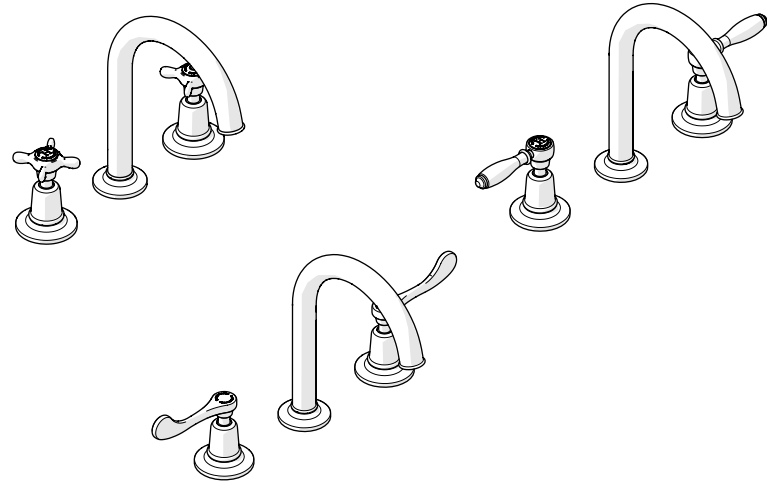

STYLES			
ELS210 [SHOWN]	ELS220 [SHOWN]	ELS260 [SHOWN]	ELS22W
ELS22B	ELS22V	ELS22K	ELS2R1
ELS2R2	ELS2R3		


IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation.
- Product is **sold partially** assembled but shown fully disassembled for illustrative and service purposes only.
- **CAUTION:** Use only a strap wrench or protected/smooth-jaw wrench on ANY finished surface.
- **CAUTION:** Flushing the SUPPLY VALVES (**sold separately**) prior to installing the LAVATORY FAUCET is recommended. Flushing can prevent damage to the CARTRIDGES and other internal components.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.

TECHNICAL DETAILS:

DETAIL	SPECIFICATION
DECK THICKNESS	1-11/16" [43mm] MAXIMUM
	5/16" [8mm] MINIMUM
DRAIN DEPTH	2" [51mm] MAXIMUM
	3/8" [10mm] MINIMUM
DRAIN HOLE DIAMETER	Ø1-1/2" [38mm]
DRAIN STYLE	PUSH-TOUCH
FITTINGS HOLE DIAMETER	Ø1-3/8" [35mm]
HANDLE SPREAD	12" [305mm] MAXIMUM
	8" [203mm] MINIMUM
HANDLE TURN ANGLE	QUARTER TURN
INLET CONNECTION	1/2" MALE WITH SUPPLY NUT
SPOUT REACH	6-1/16" [154mm] [GOOSENECK]
WATER PRESSURE	85psi [6.0 bar] MAXIMUM
	20psi [1.5 bar] MINIMUM
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]


ROUGH-IN:

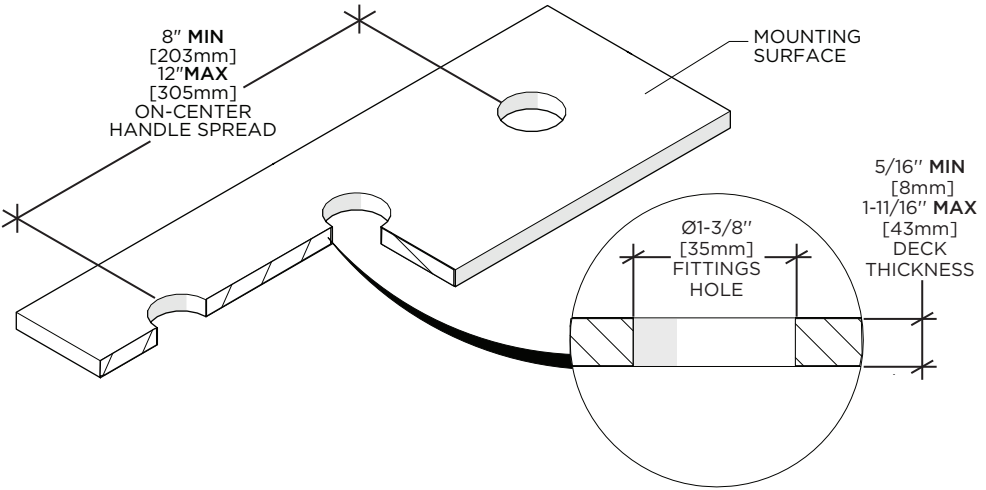

INSTALLATION GUIDELINES


GOOSENECK LAVATORY FAUCET

WATERWORKS

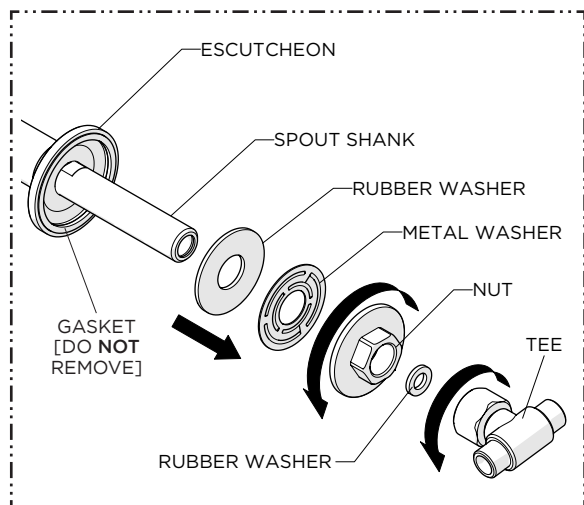


1. Remove the TEE, NUT and LOWER DECK WASHERS from the SPOUT SHANK.


NOTE: Do **NOT** remove the GASKET beneath the ESCUTCHEON or discard the RUBBER WASHER provided with the TEE.

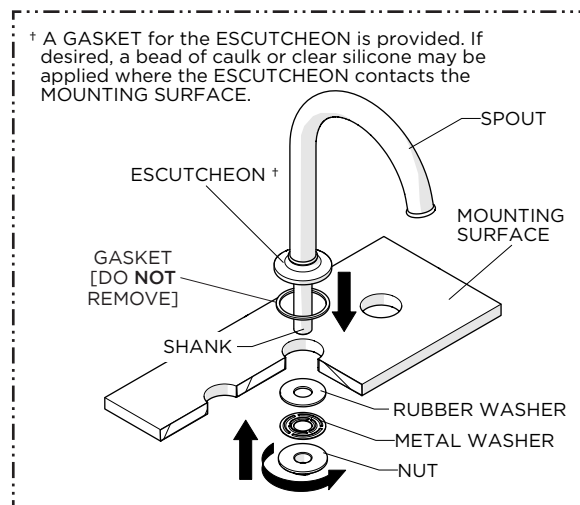

2. Insert the SHANK through the hole on the MOUNTING SURFACE, making sure the GASKET is beneath the ESCUTCHEON, then re-install the LOWER DECK WASHERS and securely tighten the NUT.

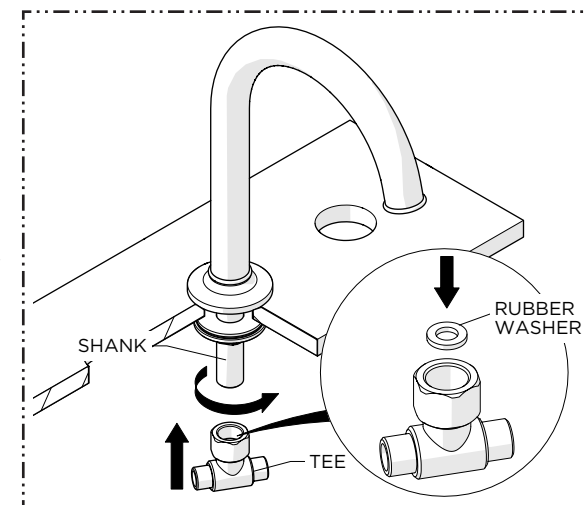


3. Thread and securely tighten the TEE onto the SHANK making sure to use the RUBBER WASHER provided.

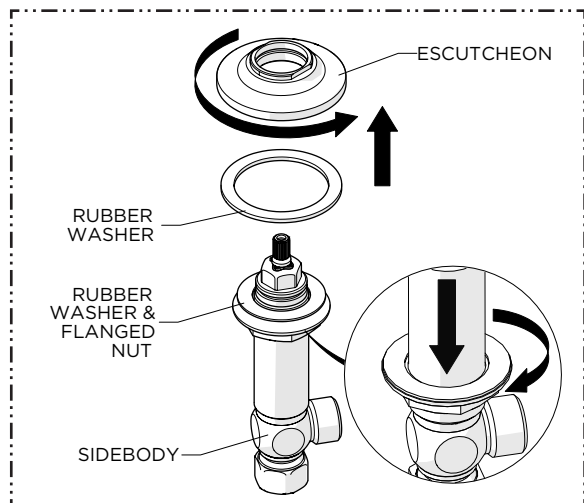


4. Remove the ESCUTCHEON and RUBBER WASHER from the SIDEBODY then fully thread the NUT down the SIDEBODY.

NOTE: Do **NOT** discard the RUBBER WASHER.

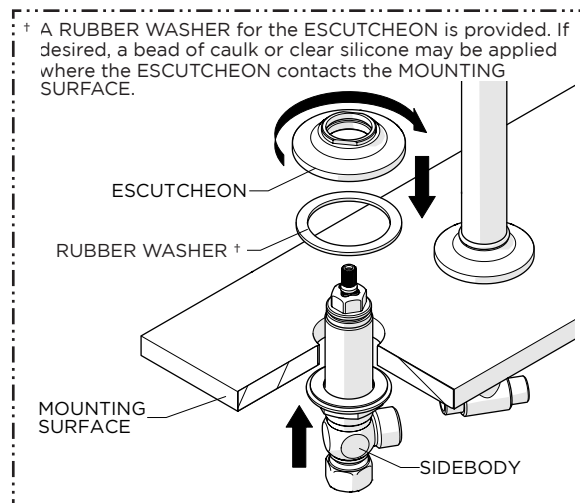

5. Using the GASKET provided, thread the ESCUTCHEON back onto the SIDEBODY until snug then let it rest on the MOUNTING SURFACE.

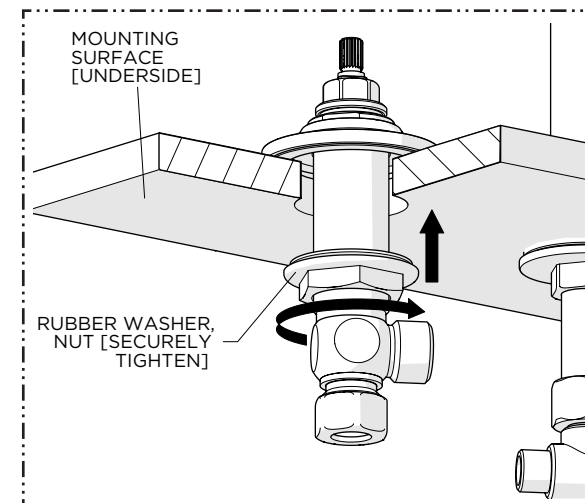


6. Ensure the SIDEBODY is positioned so the SUPPLY HOSE can be easily connected to the TEE then thread and securely tighten the NUT against the underside of the MOUNTING SURFACE.

NOTE: Repeat steps 4 - 6 to install the second SIDEBODY.

INSTALLATION GUIDELINES


GOOSENECK LAVATORY FAUCET

WATERWORKS

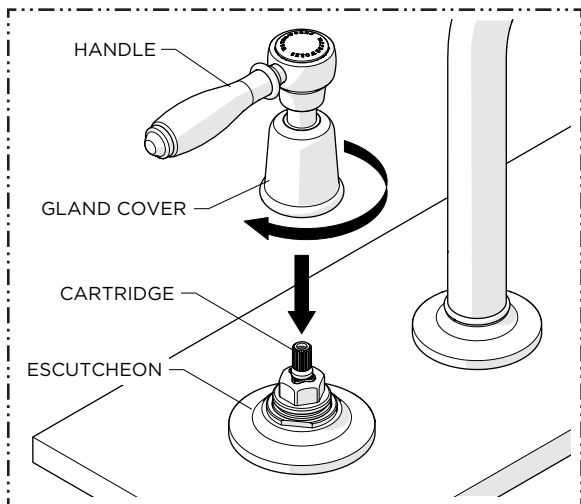


7. With the HANDLE in the required orientation, thread the GLAND COVER onto the ESCUTCHEON until snug.

NOTE: Repeat step no. 7 for (2nd) HANDLE.

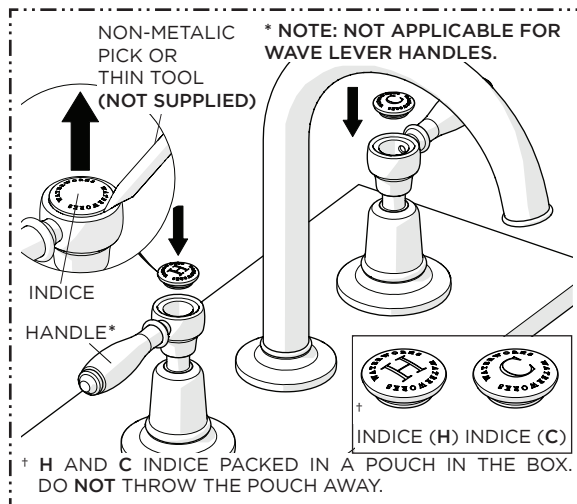


8. Remove the INDICE from the HANDLES using a NON-METALIC PICK or THIN TOOL (not supplied), and install the H (HOT) and C (COLD) INDICE in their respective places with proper orientation.


NOTE: Position the H marking INDICE on the LEFT side and the C marking INDICE on the RIGHT side.

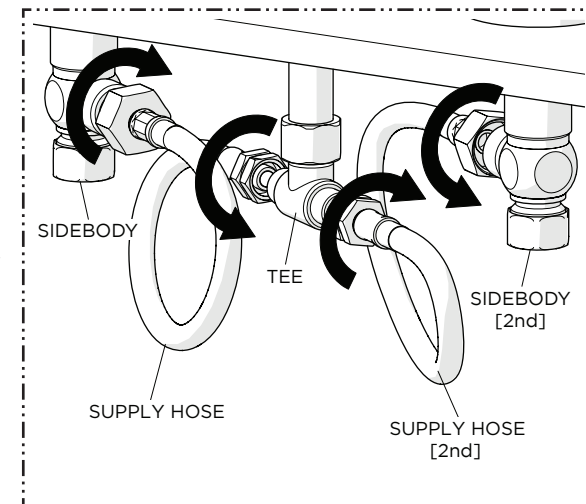

9. Connect the SIDEBODIES to the TEE using the SUPPLY HOSES provided. Securely tighten the HOSES and ensure they are not pinched/kinked.

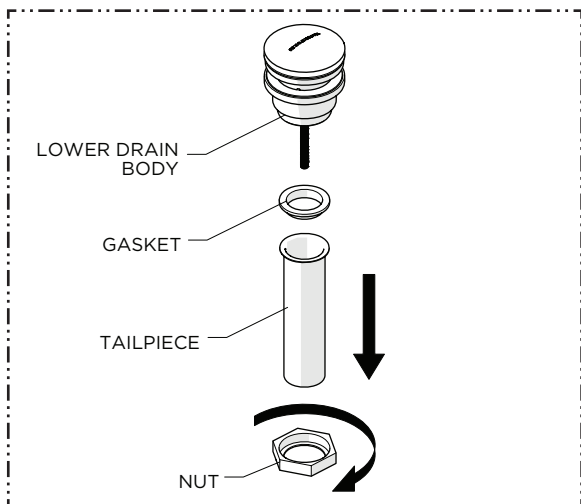


10. Unthread and remove the NUT, TAILPIECE, and GASKET from the LOWER DRAIN BODY.

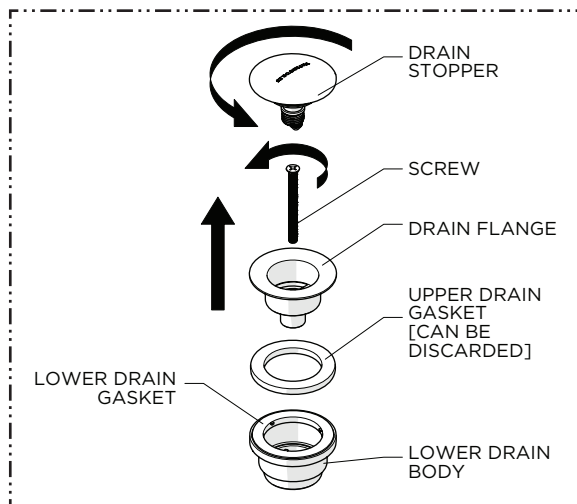

11. Remove the DRAIN STOPPER from the DRAIN FLANGE then unthread the SCREW from the LOWER DRAIN BODY.

NOTE: Do **NOT** remove or discard the LOWER DRAIN GASKET.

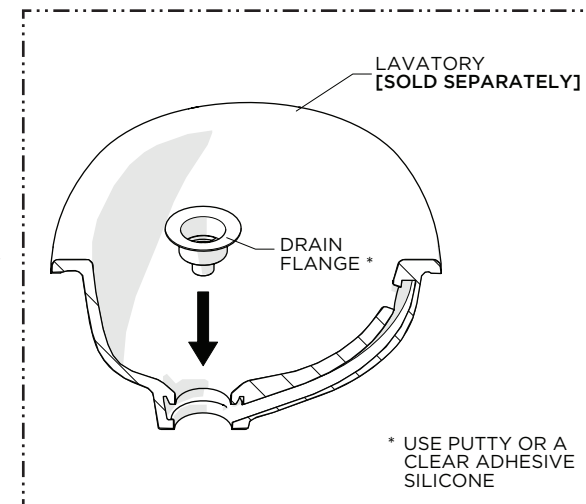


12. Set the DRAIN FLANGE into the LAVATORY (sold separately) using putty or a clear silicone.

NOTE: DRAIN can be installed on LAVATORY with/without an overflow.



INSTALLATION GUIDELINES

GOOSENECK LAVATORY FAUCET



WATERWORKS

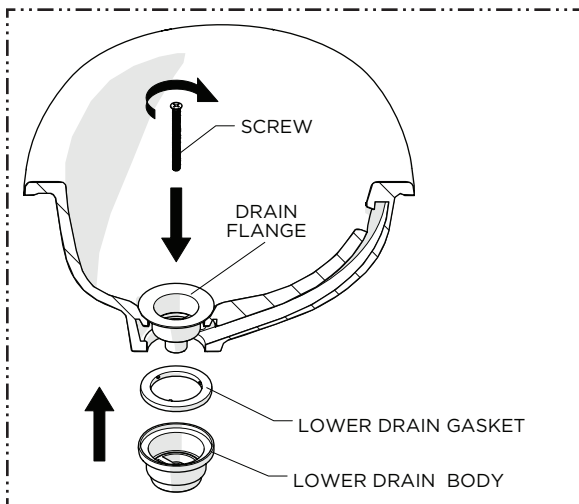

 
13. Insert the SCREW provided into the FLANGE then thread and securely tighten the SCREW into the LOWER DRAIN BODY making sure the LOWER DRAIN GASKET makes a full seal on the underside of the LAVATORY.

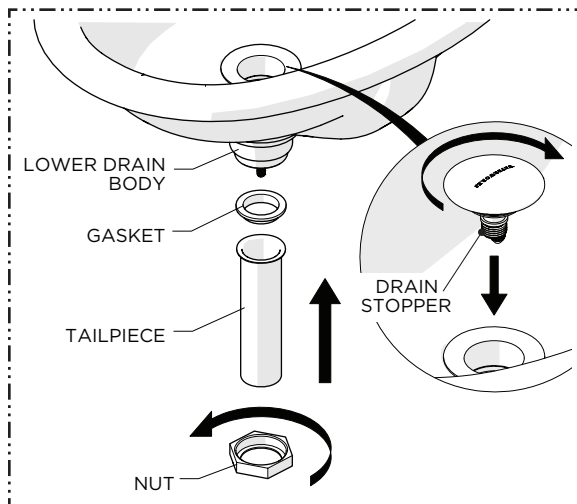


 
14. Re-install the DRAIN STOPPER and TAILPIECE using the GASKET and NUT provided.

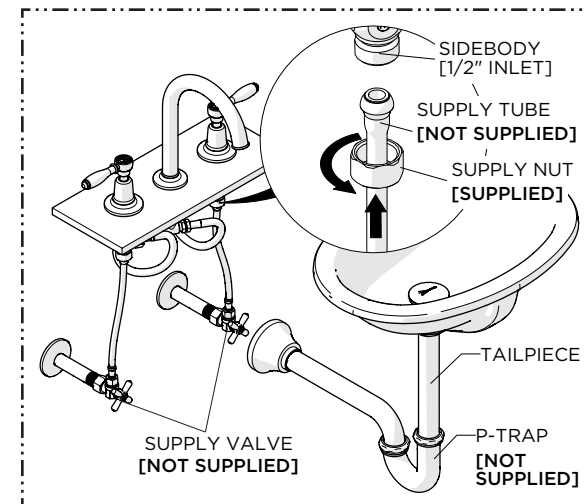

15. Make final P-TRAP (sold separately) and SUPPLY VALVE (sold separately) connections.

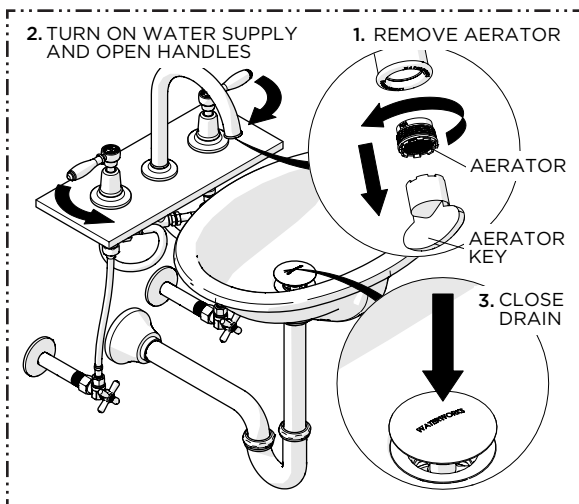

 16. Remove the AERATOR, turn on the water supply and open the HANDLES to flush out the SUPPLY LINES, and inspect all connections for leaks, then close the DRAIN to ensure it functions properly.

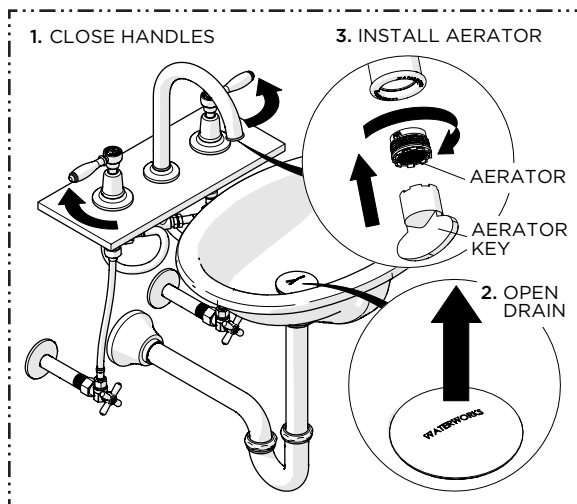

17. Close the HANDLES, open the DRAIN to drain the water, and re-install the AERATOR.