

## INSTALLATION GUIDELINES

### UNIVERSAL TRANSITIONAL 5" SHOWERHEAD WITH ADJUSTABLE SPRAY

**IMPORTANT:**

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor and must be on-site prior to rough-in, this allows the installer to visualize the installation.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- For use with VALVES rated at 1.3gpm [4.9L/min] or higher.
- The USH305 showerhead is not intended to comply with the EPA WaterSense when it is used with a wall mounted 45 degree shower arm.


**TECHNICAL DETAILS:**

INLET CONNECTION	1/2" FEMALE THREADS
INTEGRATED DIVERTER	NO
PIVOT	YES
WATER PRESSURE RANGE	20psi [1.5 bar] <b>MIN</b> 85psi [6.0 bar] <b>MAX</b>
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]


**SHOWERHEAD OPERATION:**

- Small TABS on the FACEPLATE can be used to rotate the FACEPLATE and change spray positions.
- The user will feel slight haptic feedback as they rotate the FACEPLATE which will indicate each spray position is fully engaged.
- The SHOWERHEAD has 3 different spray positions

- 1 Rain Spray
- 1 Massage Spray
- 1 Jet Spray

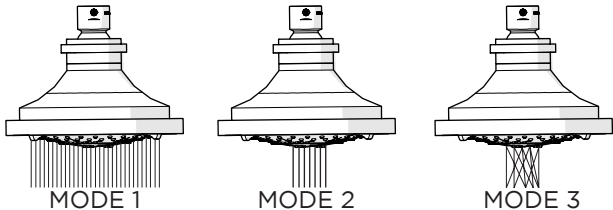

**WALL INSTALLATION SHOWN:**

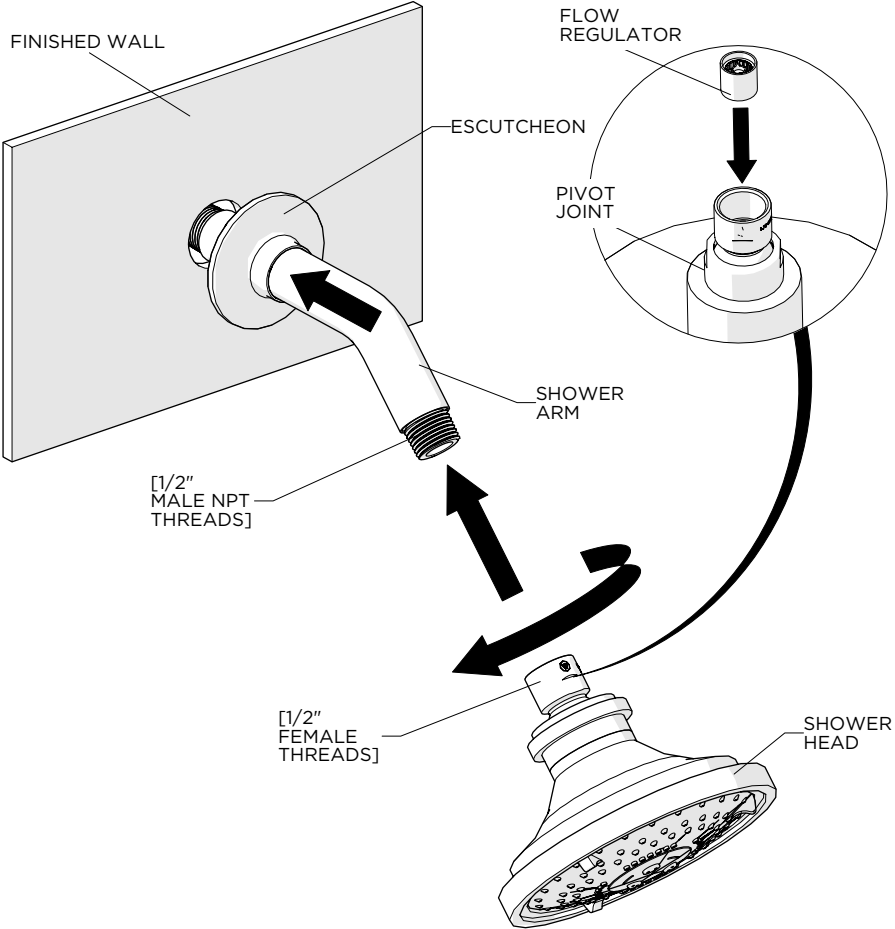

1. Flush out the supply line prior to installing the SHOWERHEAD.
2. On the 1/2" male NPT thread end of the SHOWER ARM, use plumbers tape or Pipe Thread Sealant to ensure water tight seal.
3. Thread and securely tighten the PIVOT JOINT onto the SHOWER ARM.  
**NOTE:** A FLOW REGULATOR is located inside the PIVOT JOINT.
4. Run water through the SHOWERHEAD and ensure it pivots and functions properly.
5. Check for leaks and complete the installation.