
Installation Guidelines

STYLE No. COWO75

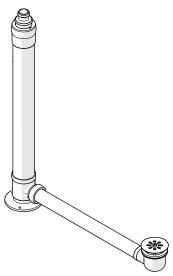

SPECIFICATIONS:

Outlet Connection Size & Type: 1 1/2" Tailpiece

Waste & Overflow Horizontal Spread: 5" - 27 15/16"


IMPORTANT:

- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- Proper blocking is recommended to ensure adequate support.
- > Inspect this product to assure you have all the parts required for proper installation.
- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- ➤ This product must be installed by a professional licensed contractor. Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.

INSTALLATION:

 Position the stand pipe in the desired location and mark where the screws will be installed. NOTE: BLOCKING IS RECOMMENDED TO ENSURE ADEQUATE SUPPORT.

- 2. Remove the stand pipe then drill the holes.
- 3. Attach the tailpiece to the stand pipe and install it using the screws provided.
- 4. Position the tub in the desired location. The recommended distance from the outside edge of the tub to the stand pipe is 2".
- 5. Slide the nut and compression ring onto the drain ell. Place the drain ell into the stand pipe and position the drain ell in-line with the drain hole in the tub. It is best to dry-fit the drain-ell prior to cutting the drain ell and making final connections.
- 6. Place the grid into the drain hole in the tub and attach it to the drain ell using the screw provided. Ensure that the rubber gasket is in place between the tub and drain ell.
- 7. Tread the nut onto the stand pipe and securely tighten.
- 8. After completing final drain connections below the floor; fill the tub with water to make sure the overflow operates and seals properly.
- 9. Drain the tub while checking for leaks.
- ➤ If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).

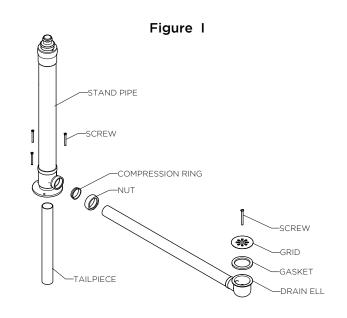

These guidelines have been prepared for the professional contractor to aid in the installation of: DOW075). All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS