


FRLT04 (FR04LT)

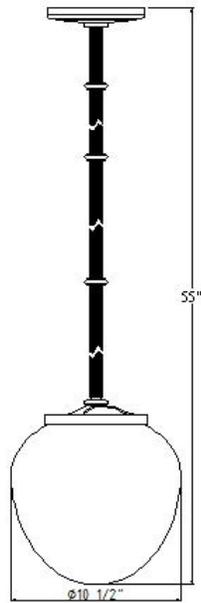

Notes:

- Bulbs: A19, E26(E27)base , 100 watt max.
- Outlet box: 3³/₅" x 3³/₅" switch type.
- All items in (BRACKETS) refer to CE styles.

INSTALLATION

- **IMPORTANT:** Check to ensure the power supply has been turned off prior to start installation.
1. Install an outlet box (3³/₅" x 3³/₅" switch type) vertically for vertical mounting making sure to use supply connection wire that meets local codes.
 2. Inspect this product to assure you have all parts required for proper installation.
 3. Install the tube A/B/C to the fixture body.
 4. Put the canopy and lock collar into tube D, install the assembled tube D to the assembled tube C.
 5. Mount the mounting plate to wall outlet box using 2pcs screw(supplied).
 6. Install the assembled tube D to the mounting plate.
 7. Connect the wires from the fixture to the wires in the outlet-box as shown in Figure 1
 8. Install the canopy to the mounting plate using lock collar.
 9. Install the 100 watt max. A19 standard bulb(not included) into the fixture body.
 10. Install the glass shade into the bottom of fixture body using the ball screw to fix tightly.
 11. Installation is completed, turn on power.

Figure 1


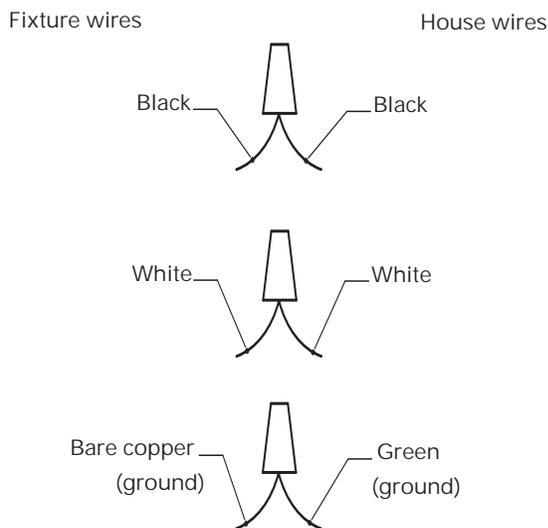


Figure 2

Vertical Mounting,
Vertical Mount shown

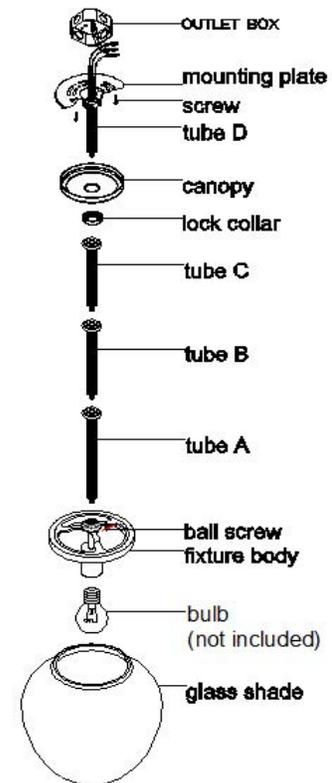

These guidelines have been prepared for the professional contractor to aid in the installation of: **Foro Pendant FRLT04(FR04LT)**

All dimensions are based on original specifications and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S