

INSTALLATION GUIDELINES

WARNING

- This product is extremely heavy. It is **STRONGLY** recommended that 2 or more persons install this product.
- If no blocking has been installed **STOP** this installation until structural blocking is available.

IMPORTANT

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- This product must be on-site prior to rough-in. This allows the installer to visualize the installation and verify dimensions.
- Adequate blocking behind the finished wall to secure the sink is mandatory.
- Inspect this product to ensure you have all the parts required for proper installation.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

SUGGESTED PLUMBING


STYLE	DESCRIPTION
103693	Euro-Style Push-Touch Drain with 'Waterworks' Logo

TECHNICAL DETAILS

DETAIL	SPECIFICATION
DRAIN HOLE DEPTH	1" [25mm]
DRAIN HOLE DIAMETER	1-3/4" [44mm]
OVERFLOW OPENING	NO
ROUGH-IN WASTE HEIGHT RECOMENDED	19" [483mm]
WEIGHT	130 lbs -160 lbs [59 kg - 73 kg] [Varies by material]


ROUGH-IN

IMPORTANT: 2x6 blocking to secure the SINK to the wall is mandatory.

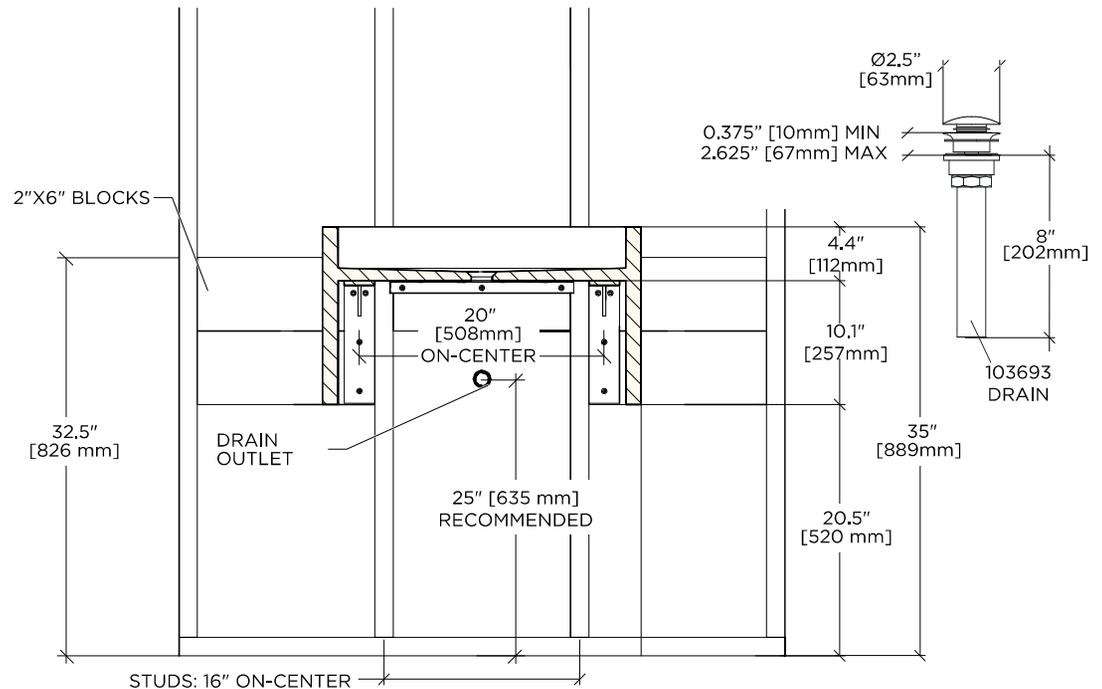


Note: This blocking scheme installs the sink top 35" from the floor.

INSTALLATION GUIDELINES

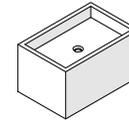


STYLE No. ANLV01


Andro Rectangular Single Wall Mounted Marble Lavatory Sink

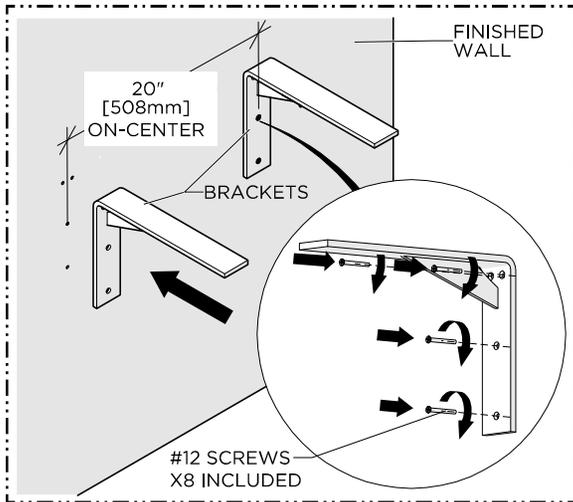


1. Dry fit the BRACKETS to the FINISHED WALL and mark the location of the mounting holes. Make sure to hold the BRACKETS level. Drill pilot holes for the #12 WOOD SCREWS provided. Secure the BRACKETS using the #12 WOOD SCREWS.

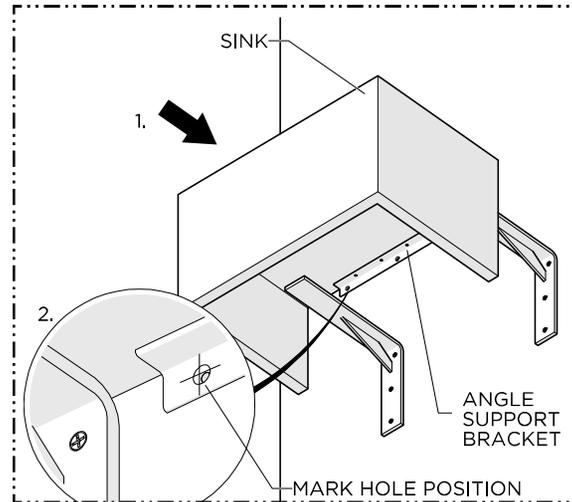


2. Dry fit the SINK with ANGLE SUPPORT BRACKET ensuring it is level and re-adjust or shim (not included) if necessary. Mark the three holes locations for the ANGLE SUPPORT BRACKET. Remove the SINK and drill pilot holes for #12 WOOD SCREWS.

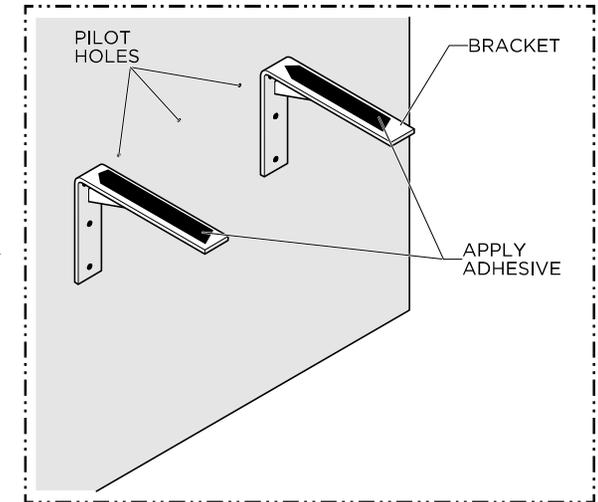

3. Apply adhesive silicone to the top surfaces of the BRACKETS.

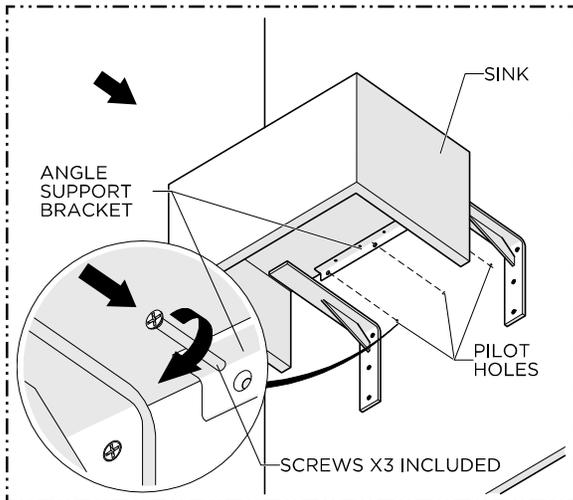


4. Place the SINK on top of the BRACKETS and push it against the wall making sure the silicone does not wipe off. Remove any excess silicone around the SINK. Fasten the ANGLE SUPPORT BRACKET with the #12 WOOD SCREWS provided.

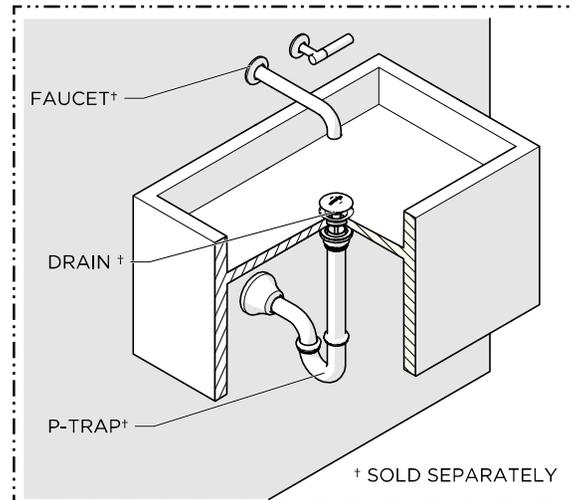

5. Install the FAUCET, DRAIN and P-TRAP [sold separately].

NOTE: The use of certain plumber's putty may stain stone or tile surfaces.

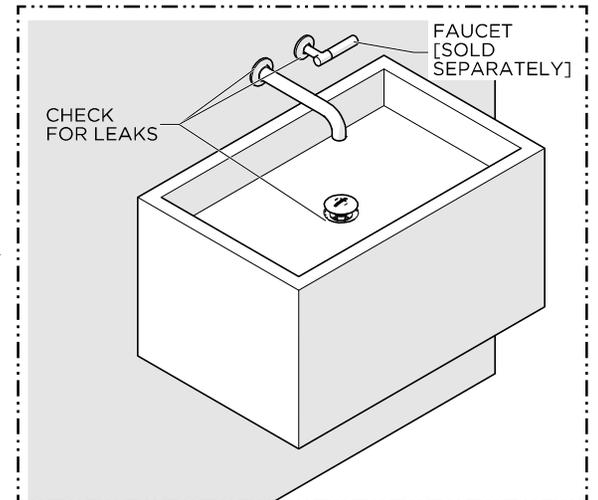

6. Turn on the water and operate the drain and faucet [sold separately] to ensure proper operation. Check all connections for leaks. If desired, a bead of caulk or clear silicone may be applied where the SINK contacts the finished wall.