


JUHS11-K (metal handle)
JUHS12-K (white porcelain handle)
JUHS13-K (black porcelain handle-MTO)

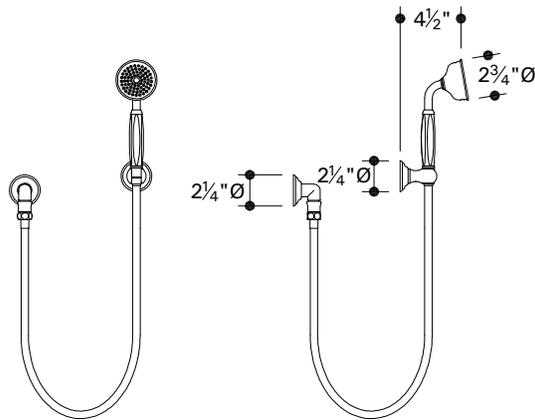

ROUGH IN:

1. Install a wall valve or diverter valve(sold separately) at the desired location.
2. Finish the rough in by installing a well supported 1/2" female IPS elbow.
3. Determine the ideal location of the hook assembly based on the clients preference and install wood blocking or position over a stud to properly secure the hook.

HOOK AND ELBOW INSTALLATION:

4. The inlet elbow (2) is 1/2" female IPS; install the elbow using a nipple of appropriate length.
5. Drill holes to accommodate the screw anchors (5e) and mounting screws (5c).
6. Loosen the 2.5 mm set screw (5a) and pull the hook (5) off of the mounting bracket (5d).
7. Slide the escutcheon (5b) from the mounting bracket.
8. Secure the mounting bracket (5d) to the wall using the anchors (5e) and screws (5c) provided.
9. Reattach the escutcheon and hook.
10. Install the hand shower onto the conical end(4b) of the hose


If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST).

IMPORTANT

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to local codes.
- A wall valve or diverter valve (sold separately) controls on/off/volume and must be installed for proper operation of this product.
- This product must be installed by a professional contractor.
- Refer to the specification and assembly drawings attached. This product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- Inspect this product to assure you have all parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface

These guidelines have been prepared for the professional contractor to aid in the installation of: **JULIA HANDSHOWER ON HOOK (JUHS11-K, JUHS12-K, JUHS13-K)** All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S

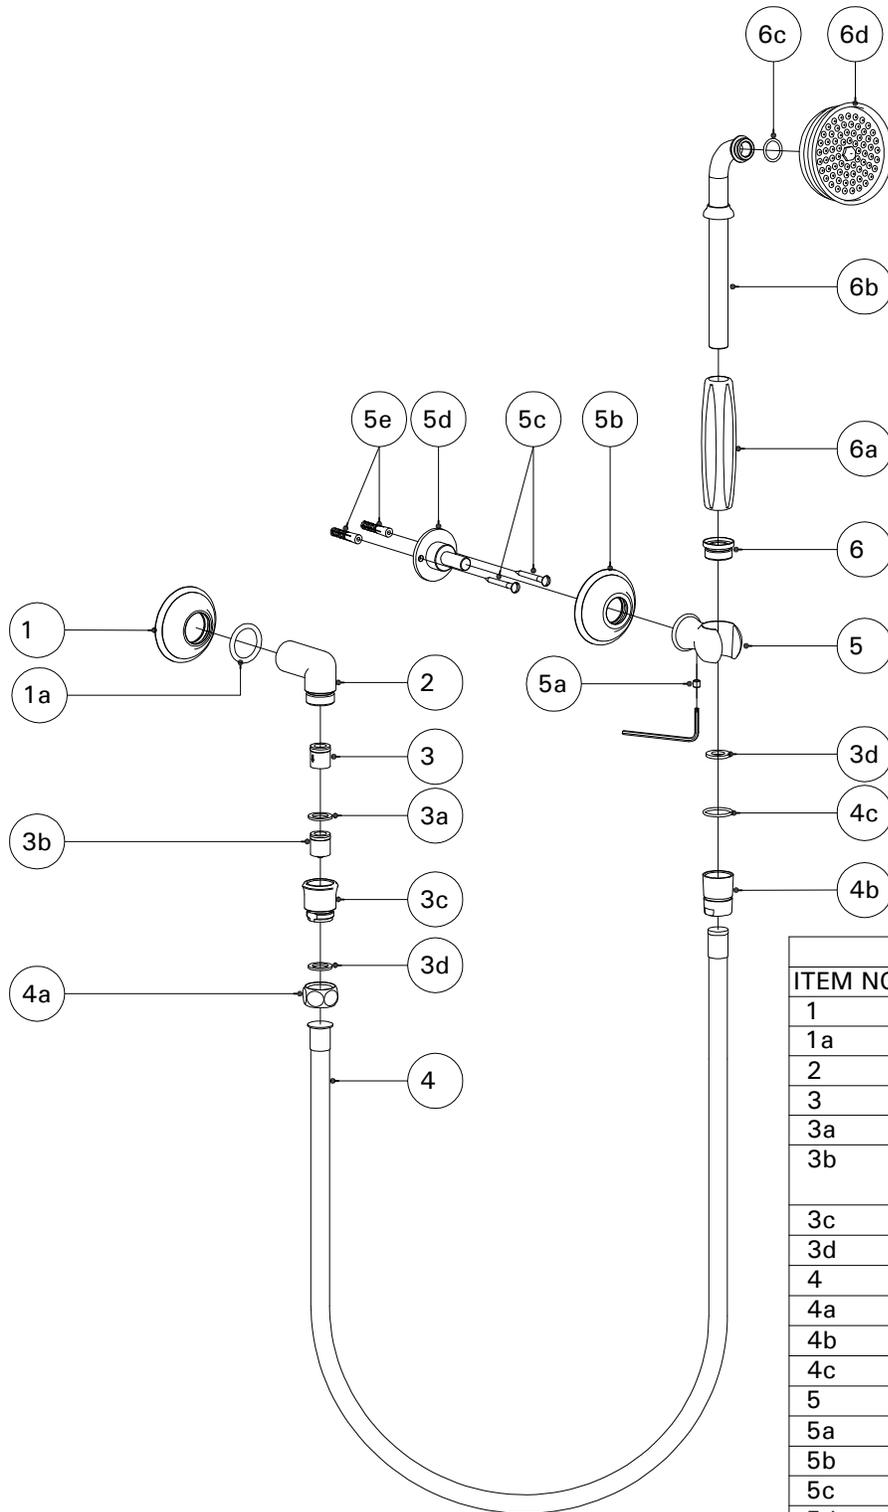

3b FLOW REGULATING CHECK VALVE, 2.5 GPM

PARTS TABLE		
ITEM NO.	DESCRIPTION	QTY.
1	ESCUTCHEON	1
1a	O-RING, INNER	1
2	ELBOW, 1/2" NPT	1
3	CHECK VALVE	1
3a	WASHER	1
3b	FLOW REGULATING CHECK VALVE, 2.5 GPM	1
3c	CHECK VALVE HOUSING	1
3d	WASHER, RUBBER- 1/2"	2
4	HOSE	1
4a	NUT	1
4b	NUT, CONICAL	1
4c	O-RING, OUTER	1
5	HOOK	1
5a	HEX SET SCREW, 2.5MM	1
5b	ESCUTCHEON	1
5c	SCREWS	2
5d	MOUNTING BRACKET	1
5e	ANCHORS	2
6	HANDSHOWER INLET BASE	1
6a	HANDLE	1
6b	HANDSHOWER INLET PIPE	1
6c	O-RING	1
6d	HANDSHOWER HEAD	1

These guidelines have been prepared for the professional contractor to aid in the installation of: **JULIA HANDSHOWER ON HOOK (JUHS11-K, JUHS12-K, JUHS13-K)** All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

W A T E R W O R K S