


ELTU 52 wall mount

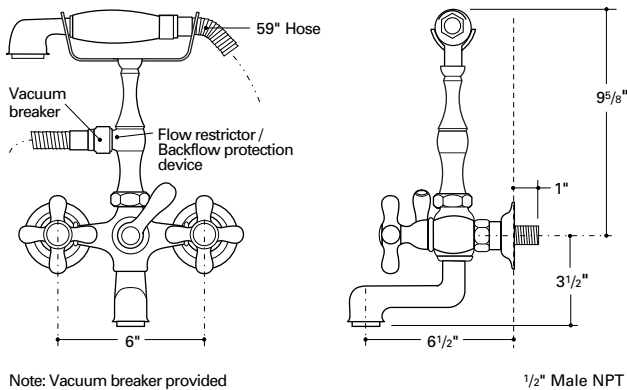

Note: Vacuum breaker provided
Consult your local building codes
for anti-scald requirements

INSTALLATION GUIDELINES

- Use only a protected, smooth-jawed, or strap wrench on any finished surface.
- Rough-in is 6" ø, non-adjustable.
- The tub filler should be on-site prior to rough-in. This allows the installer to visualize the installation and verify the center spread.
- Run 3/4" supply lines for maximum water flow.
- Accessible shut-off valves, which will facilitate servicing, are recommended for the hot and cold feed lines.
- Well-supported 1/2" female adapter elbows should be installed at the proper center spread.
- Be sure that the supplies are level, secure, and on proper centers.
- After the wall treatment is complete, assemble the wall mount unions to the piping, then assemble the valve to the unions using the gaskets provided.
- Be sure the gaskets are in place at all joints. Also, be sure the connections are tightened.
- With the diverter lever to the left, turn on the water fully to flush out the lines through the spout before transferring the flow to the handshower.
- Check for leaks at all the joints.
- For servicing valve stem: Pull out the index assembly (held in place by friction O-ring) exposing a screw for the handle. The cover should be hand tight.
- NOTE: After use, the diverter lever may be positioned vertically to quickly drain the residual water from the unit. After draining, reposition the lever to the left for the next use.
- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am–7pm EST).