




STYLE No. TOLT01 [TO01LT]
Wall Mounted Sconce with Glass Shade

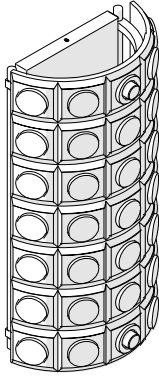

Style No. TOLT03
[TO03LT]
Ceiling Mounted Small
Pendant with Glass Shade

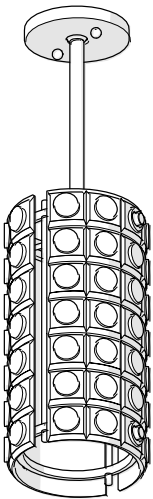

Style No. TOLT04
[TO04LT]
Ceiling Mounted Large
Pendant with Glass Shade

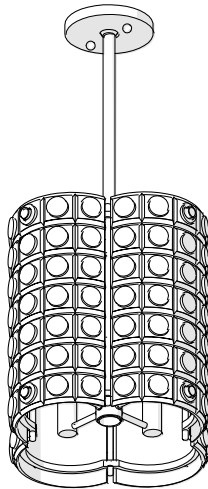

* All items in [BRACKETS] refer to UK styles

SPECIFICATIONS:

Bulb Base Size for TOLT01 [TO01LT] and TOLT03
[TO03LT]: E26 [E27]

Bulb Base Size for TOLT04 [TO04LT]: E12 [E14]

Bulb Type for TOLT01 [TO01LT] and TOLT03
[TO03LT]: 8.5" T10

Bulb Type for TOLT04 [TO04LT]: Candelabra

Junction Box Orientation: Any

Junction Box Size: Standard 3-1/2"

Max Wattage: 60 Watt

Orientation for TOLT01 [TO01LT]: Wall Mounted Up

Orientation for TOLT03 [TO03LT] and TOLT04 [TO04LT]:
Ceiling Only

Shade Material: Glass

Voltage: 120 [240]

Required Electrical Feeds:

US: Black "Hot" wire; White "Neutral" wire; Green or Bare
"Ground" wire

UK: [Brown "Line" wire; Blue "Neutral" wire; Green/Yellow
Striped or Bare "Earth" wire]

IMPORTANT:


- **WARNING:** The power supply must be turned off prior to installation. Turn off the main electrical supply to the junction box from the fuse box/circuit breaker. Turning power off at the switch is not sufficient.
- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- TOLT01, TOLT03 and TOLT04 are U.L. certified and is suitable for damp or dry locations. The U.L. listing mark can be found on the inside of the cover plate.
- TO01LT, TO03LT and TO04LT are CE rated. Proof of CE compliance will be provided upon request.
- Be sure your installation conforms to all federal, state, and local codes.
- This product must be installed by a professional licensed electrical contractor.
- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purpose only.
- Max wattage for TOLT01 [TO01LT] and TOLT03 [TO03LT] is 60 watts for incandescent T10 base light bulbs. Max wattage for TOLT04 [TO04LT] is 60 watts for incandescent Candelabra base light bulbs.

These guidelines have been prepared for the professional contractor to aid in the installation of:
TORREY WALL MOUNTED SCONCE WITH GLASS SHADE (STYLE No. TOLT01 [TO01LT]) & TORREY CEILING
MOUNTED SMALL PENDANT WITH GLASS SHADE (STYLE No. TOLT03 [TO03LT]) & TORREY CEILING MOUNTED
LARGE PENDANT WITH GLASS SHADE (STYLE No. TOLT04 [TO04LT])
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.


WATERWORKS

SCONCE INSTALLATION:


- **REQUIRED:** Install a 3-1/2" octagonal electrical junction box at the desired height.
- See Figure - 01 for Steps 1 - 2.

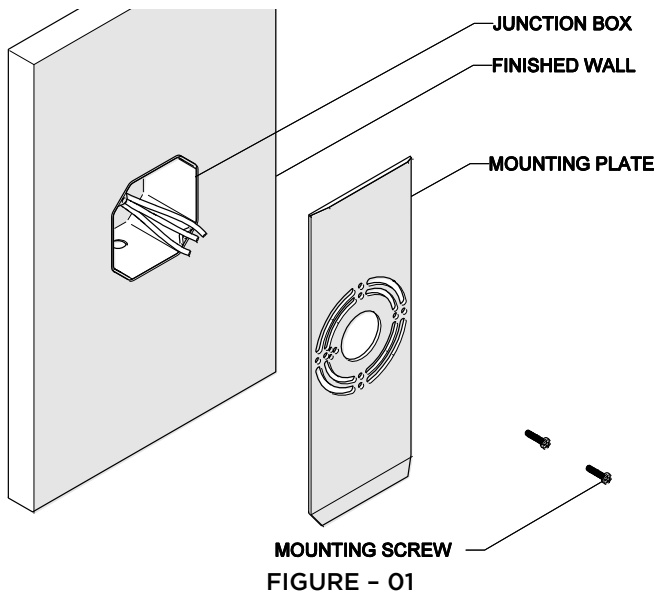

1. Remove the MOUNTING PLATE by unthreading the SET SCREW from the back plate.
 2. Pull the wires in the JUNCTION BOX through the center hole of the MOUNTING PLATE. Attach the MOUNTING PLATE to the JUNCTION BOX using the MOUNTING SCREWS making sure to keep the proper alignment of the plate.
- See Figure - 02 for Steps 3 - 6.

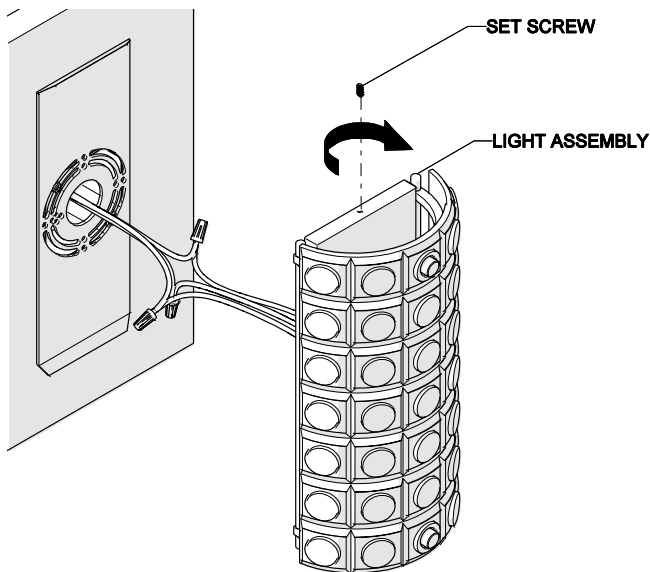

3. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the MOUNTING PLATE with the ground screw provided.
 4. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
 5. Repeat previous step with the black fixture wire and the black wire from the junction box. Make sure the wires are pushed into the junction box.
 6. Attach the LIGHT ASSEMBLY to the MOUNTING PLATE on the wall by reinserting the SET SCREW.
- See Figure - 03 for Step 7.

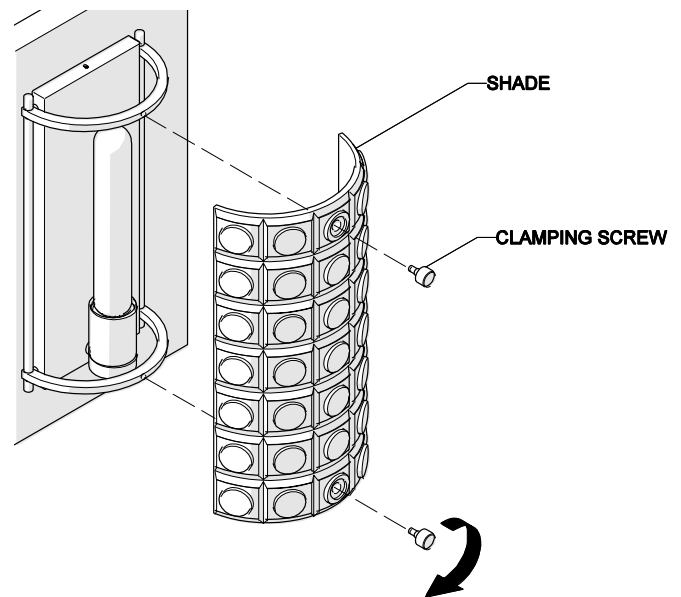

7. Attach the SHADE by screwing it to the LIGHT ASSEMBLY with the CLAMPING SCREWS.

PENDANT INSTALLATION:

- **REQUIRED:** Install a 3-1/2" octagonal electrical junction box at the desired location.
- See Figure - 04 for Step 8.

These guidelines have been prepared for the professional contractor to aid in the installation of:
 TORREY WALL MOUNTED SCONCE WITH GLASS SHADE (STYLE No. TOLT01 [TO01LT]) & TORREY CEILING
 MOUNTED SMALL PENDANT WITH GLASS SHADE (STYLE No. TOLT03 [TO03LT]) & TORREY CEILING MOUNTED
 LARGE PENDANT WITH GLASS SHADE (STYLE No. TOLT04 [TO04LT])
 All dimensions are based on original specification and are subject to change and variation.
 Please consult your Design Associate for current specifications.

WATERWORKS

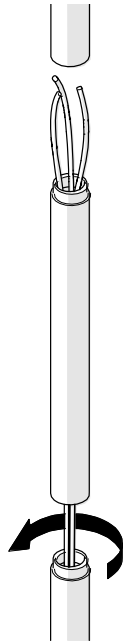


FIGURE - 04

8. To adjust the height of the light fixture, add or remove the included tube linkages until the desired height is achieved.

➤ See Figure - 05 for Steps 9 - 12.

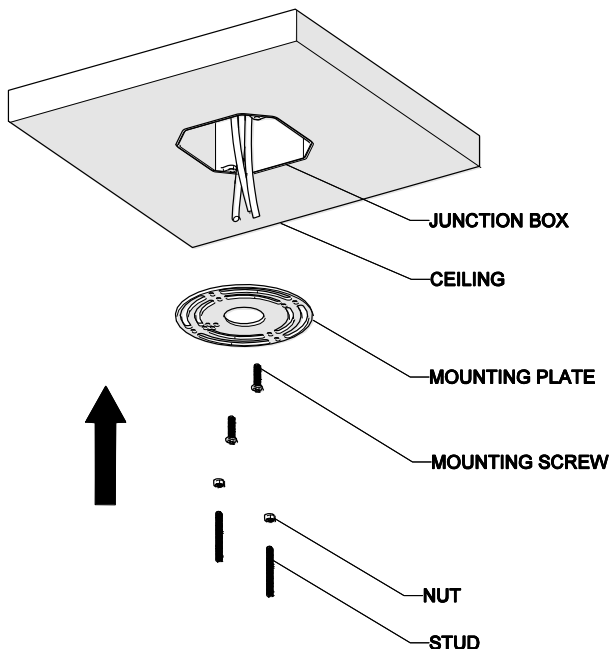


FIGURE - 05

9. Pull the wires in the JUNCTION BOX through the center of the MOUNTING PLATE. Attach the MOUNTING PLATE to the JUNCTION BOX using the MOUNTING SCREWS making sure to keep the proper alignment of the plate.

10. Fasten the bare copper fixture wire to the green or bare copper wire in the box with a wire nut or fasten it to the MOUNTING PLATE with the ground screw provided.
11. Fasten the white fixture wire to the white wire in the box with a wire nut. Tightly wrap the connection with electrical tape beginning 1" [25mm] below the wire nut to ensure the tape seals the end of the nut. Make sure that there are no exposed wires that could cause a short circuit.
12. Repeat previous step with the black fixture wire and the black wire from the junction box. Make sure the wires are pushed into the junction box.

➤ See Figure - 06 for Step 13.

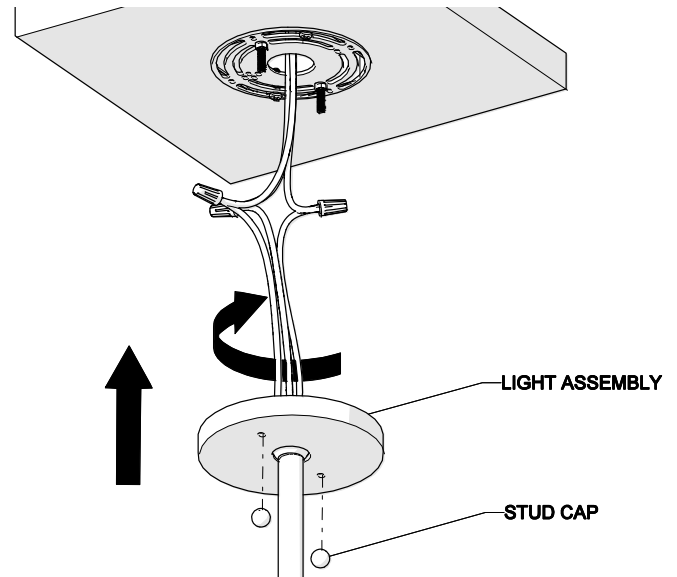


FIGURE - 06

13. Thread the LIGHT ASSEMBLY to the STUDS on the MOUNTING PLATE with the STUD CAPS making sure it's secure.

SERVICING THE LIGHT:

14. Unscrew the RETAINING SCREWS and remove the SHADE to gain access to the BULB for cleaning and servicing.
- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).

These guidelines have been prepared for the professional contractor to aid in the installation of:
TORREY WALL MOUNTED SCONCE WITH GLASS SHADE (STYLE No. TOLT01 [TO01LT]) & TORREY CEILING
MOUNTED SMALL PENDANT WITH GLASS SHADE (STYLE No. TOLT03 [TO03LT]) & TORREY CEILING MOUNTED
LARGE PENDANT WITH GLASS SHADE (STYLE No. TOLT04 [TO04LT])
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

WATERWORKS