WATERWORKS

INSTALLATION GUIDELINES

IMPORTANT:

- > To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for future reference.
- > This product must be installed by a professional licensed contractor.
- > Inspect this product to ensure you have all the parts required for proper installation.
- DRYWALL ANCHORS for a typical drywall installation are provided. Do NOT use the ANCHORS if mounting directly onto wood blocking or a stud.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am
 6pm EST.
- > Refer to the separate Service Parts Documents for available replacement parts.


TECHNICAL DETAILS:

DETAIL	SPECIFICATION
PRIMARY MATERIAL	BRASS
TUBE DIAMETER	3/4" [19mm]

ON-CENTER SPREAD:


STYLE	DIM "A"
BTB018	18" [457mm]
BTB024	24" [610mm]



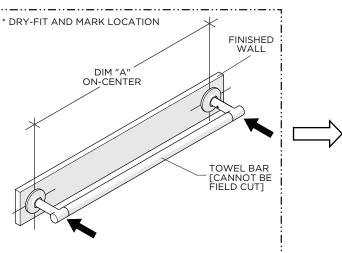


 Dry-fit the TOWEL BAR to the finished wall and mark the ideal location making sure to hold the BAR level.

NOTE: Verify the on-center spread, DIM "A".

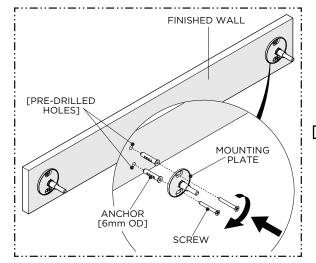

Using the previous marks as a reference, install the MOUNTING PLATES using the ANCHORS, if necessary, and SCREWS provided.

NOTE: Ensure the MOUNTING PLATES are level and at the correct on-center spread, **DIM "A"**.

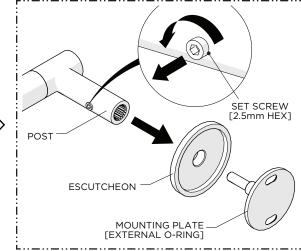


STYLE No. BTB024

Bond 24" Towel Bar

Loosen, but do NOT remove, the SET SCREW on the POST and remove the MOUNTING PLATE and ESCUTCHEON.

NOTE: Do NOT remove the O-RING on the MOUNTING PLATE.

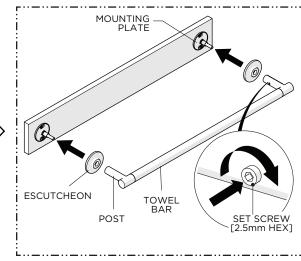

 Slide the ESCUTCHEONS and POSTS onto the MOUNTING PLATES then thread and securely tighten the SET SCREWS.