
WATERWORKS

HENRY SINGLE METAL TOWEL BAR

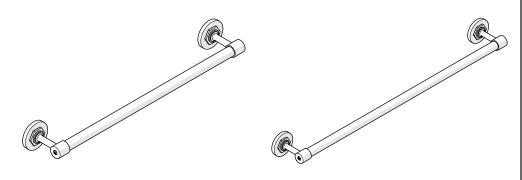


| STYLES | |
|--------|--------|
| HNTB18 | HNTB24 |

IMPORTANT:


- > To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- > This product must be installed by a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The mounting SCREWS and ANCHORS provided are intended for use in a typical 1/2" drywall nstallation.
- ➢ If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am − 6pm EST.
- > Refer to the separate Service Parts Documents for available replacement parts.

TECHNICAL DETAILS:

| DETAIL | SPECIFICATION |
|------------------|---------------|
| PRIMARY MATERIAL | BRASS |
| TUBE DIAMETER | 13/16" [20mm] |

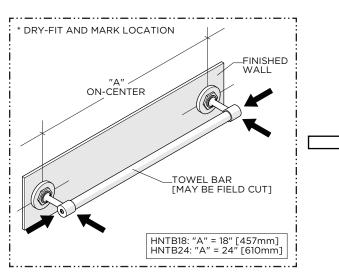


- Dry-fit the product to the finished wall and mark the ideal location making sure to hold the product level.
 - NOTE: Verify the on-center spread, Dimension "A".

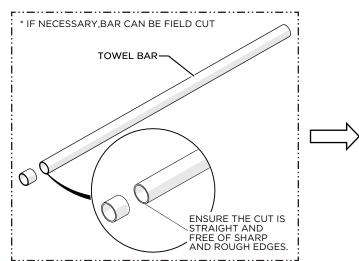


OPTIONAL: If necessary, the BAR may be field cut. Ensure

2. Cut the BAR to the desired length then repeat STEP 1, marking the new on-center spread.

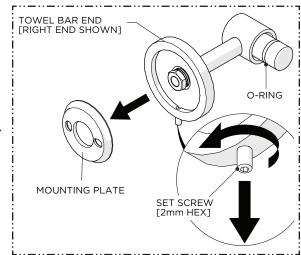


 Loosen, but do NOT remove, the SET SCREW on the bottom of each TOWEL BAR END using a 2mm HEX KEY and remove the MOUNTING PLATES.

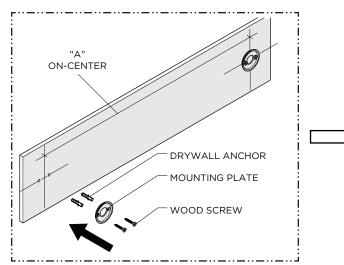

 Using the previous marks as a reference, install the MOUNTING PLATES using the SCREWS and ANCHORS provided.

CAUTION: Ensure the MOUNTING PLATES are level and at the desired on-center spread, **Dimension "A"**.

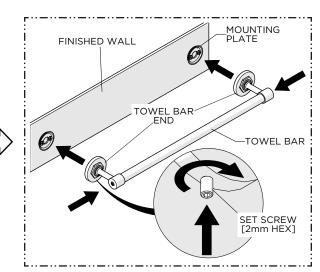

5. Holding the ENDS and BAR together, place both ENDS over the MOUNTING PLATES and securely tighten the SET SCREWS.

 $\ensuremath{\text{NOTE:}}$ The SET SCREWS should face towards the bottom.