


INSTALLATION GUIDELINES

ONE HOLE FAUCET

REGULATOR ONE HOLE GOOSENECK BAR OR LAVATORY FAUCET WITH
BLACK/METAL WHEEL HANDLE

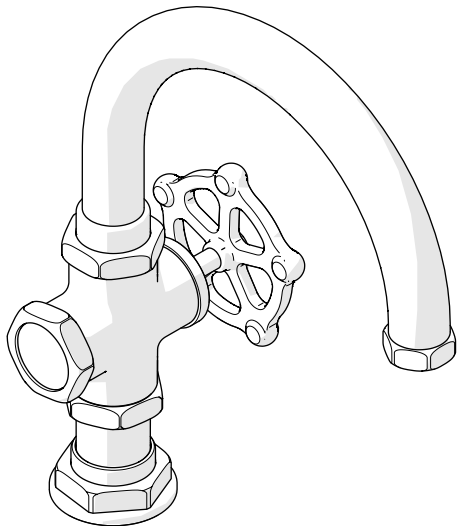

STYLES	
RGKM11	RGKM12
RGLS13	RGLS14

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation. Product is **sold partially** assembled but shown fully disassembled for illustrative and service purposes only.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber’s putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

TECHNICAL DETAILS:


DETAIL	SPECIFICATION
DECK THICKNESS	1/4" [6mm] MINIMUM
	2-3/16" [55mm] MAXIMUM
FITTINGS HOLE DIAMETER	Ø1-3/4" [44mm]
HANDLE TURN ANGLE	QUARTER TURN
INLET CONNECTION	3/8" COMPRESSION CONNECTOR HOSES †
SPOUT REACH	8-1/4" [210mm]
WATER PRESSURE RANGE	20psi [1.5 bar] MINIMUM
	85psi [6.0 bar] MAXIMUM
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]

FOR STYLE RGLS13 OR RGLS14 ONLY!

DETAIL	SPECIFICATION
DRAIN DEPTH	3/8" [10mm] MINIMUM
	2" [51mm] MAXIMUM
DRAIN HOLE DIAMETER	Ø1-3/4" [44mm]
DRAIN STYLE	PUSH TOUCH

† For **INTERNATIONAL USE ONLY**, two 9/16" 24 UNEF MALE x 3/8" FEMALE BSPP ADAPTERS (STYLE No. UNUK08) and RUBBER WASHERS are provided.


ROUGH-IN:

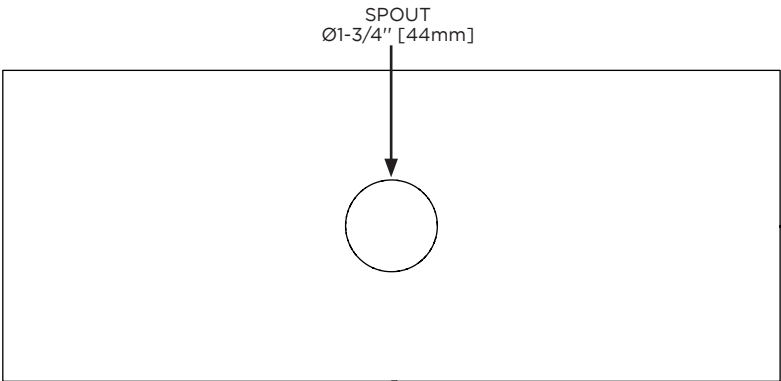

INSTALLATION GUIDELINES



ONE HOLE FAUCET

WATERWORKS

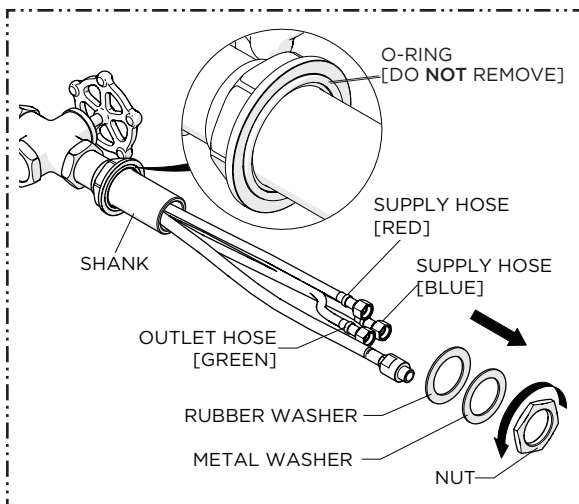



1. Remove the NUT, METAL and RUBBER WASHERS from the SPOUT SHANK.

NOTE: Do **NOT** remove the O-RING beneath the ESCUTCHEON.

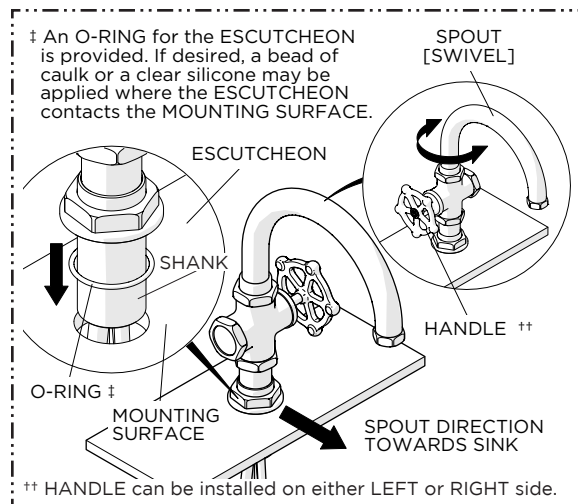


2. Ensure the SUPPLY HOSES are properly connected, and then insert the SPOUT SHANK through the hole on the MOUNTING SURFACE making sure the O-RING provided is beneath the ESCUTCHEON.

NOTE: The SPOUT can swivel and the HANDLE can be installed on either the LEFT or RIGHT side.


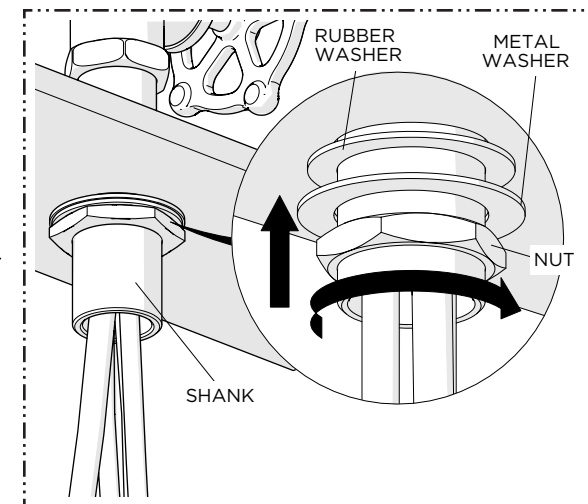


3. Re-install the RUBBER and METAL WASHERS then thread and securely tighten the NUT onto the SHANK.

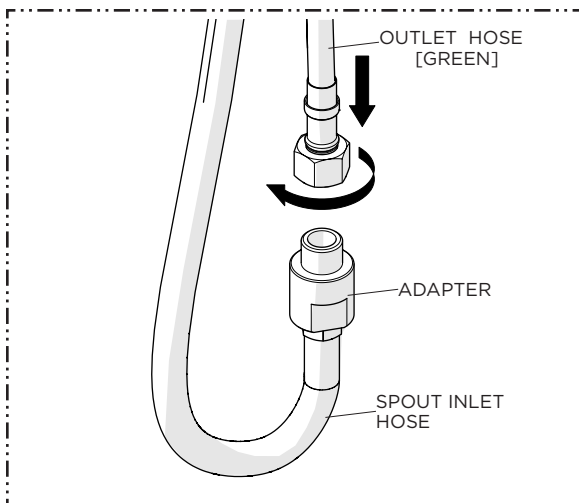



4. Thread and connect the OUTLET HOSE to the ADAPTER attached to the SPOUT INLET HOSE.

NOTE: The HOSE is labeled GREEN for mixed.

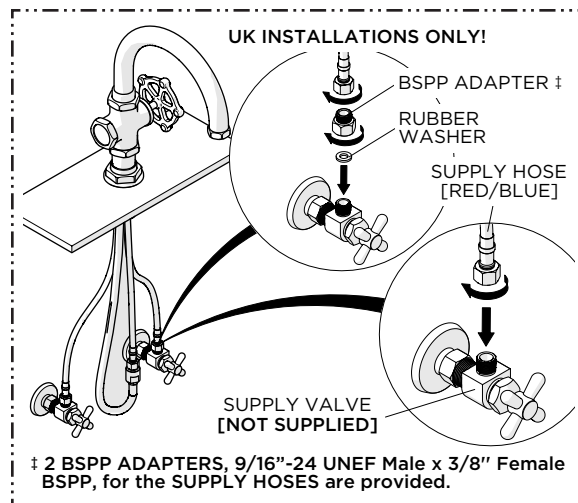

5. Connect the SUPPLY HOSES to the SUPPLY VALVES [sold separately] making sure the HOSES are not pinched/kinked.

NOTE: The HOSES are labeled RED for HOT and BLUE for COLD.

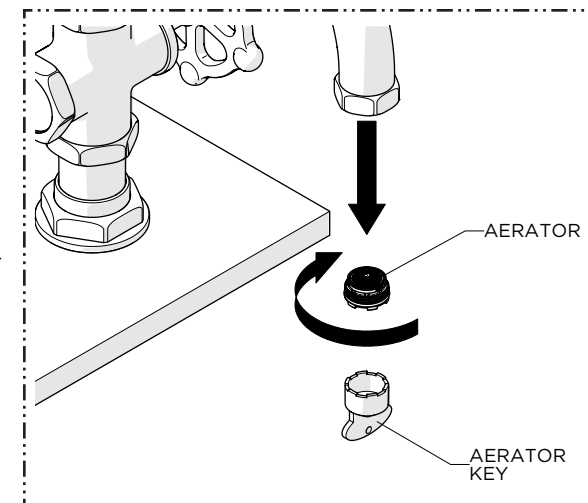


6. Remove the AERATOR using the AERATOR KEY provided.

➤ **STOP! PROCEED TO STEP 13 FOR STYLE RGKM11 OR RGKM12.**

INSTALLATION GUIDELINES


ONE HOLE FAUCET

WATERWORKS

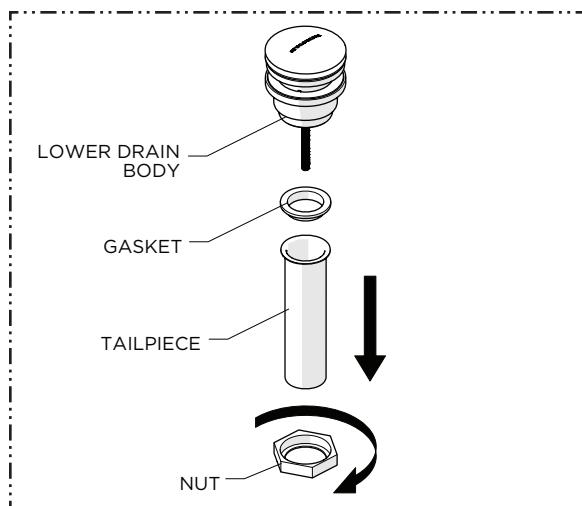


➤ **STOP! STEPS 7 - 12 FOR STYLE RGLS13 OR RGLS14 ONLY!**

7. Remove the TAILPIECE from the LOWER DRAIN BODY.

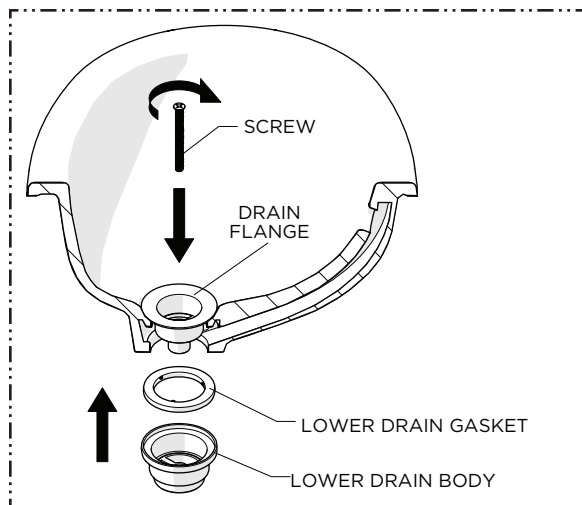


10. Re-install the LOWER DRAIN BODY making sure to use the GASKET provided. Ensure the GASKET makes a full seal on the underside of the lavatory then securely tighten the SCREW.

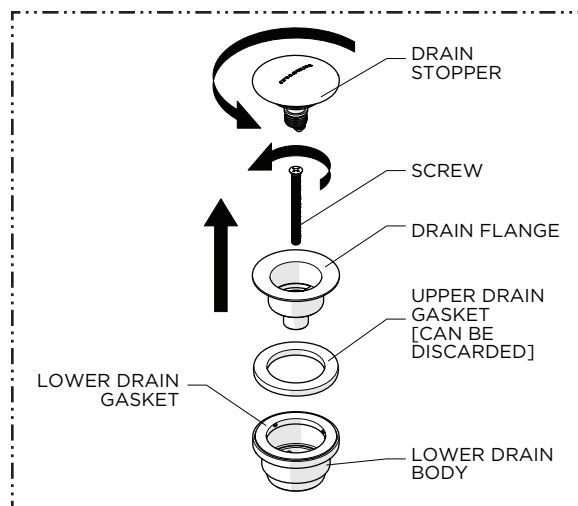


8. Unthread and remove the DRAIN STOPPER and LOWER DRAIN BODY from the DRAIN FLANGE. The UPPER DRAIN GASKET can be discarded.


CAUTION: Do **NOT** discard the LOWER DRAIN GASKET.

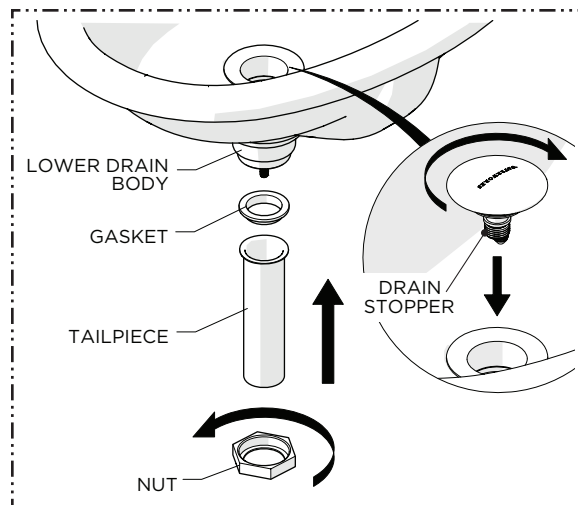

11. Re-install the DRAIN STOPPER then the TAILPIECE using the WASHER and NUT provided.

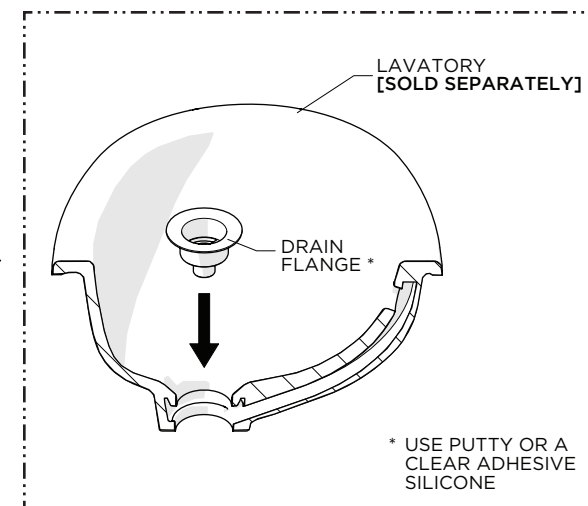


9. Set the DRAIN FLANGE in the lavatory [sold separately] using putty or a clear adhesive silicone.

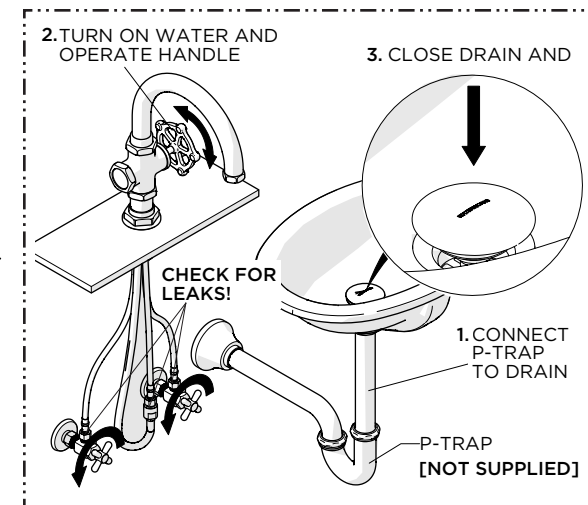


12. Make final P-TRAP [sold separately] connections then turn on the water to flush out the SUPPLY LINES, and inspect all connections for leaks. Close the DRAIN to ensure it functions properly then turn off the water.

INSTALLATION GUIDELINES

ONE HOLE FAUCET

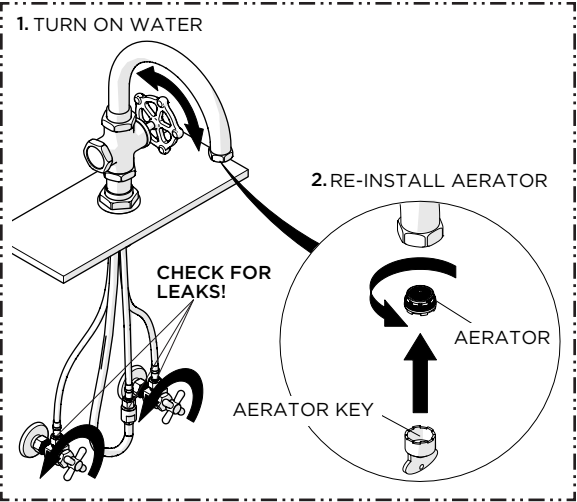


13. Turn on the water to flush out the SUPPLY LINES and inspect all connections for **leaks** then turn off the water and re-install the AERATOR.
- NOTE:** 2-3 Seconds of residual water is typical on large gooseneck faucets.

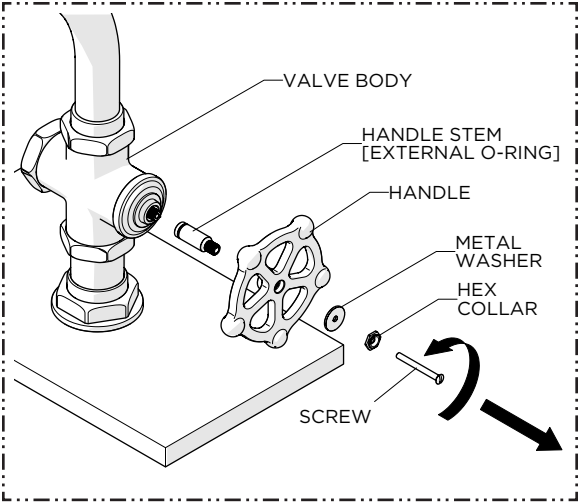

SERVICING CARTRIDGE:

1. Unthread and remove the SCREW, HEX COLLAR, METAL WASHER, HANDLE and HANDLE STEM.

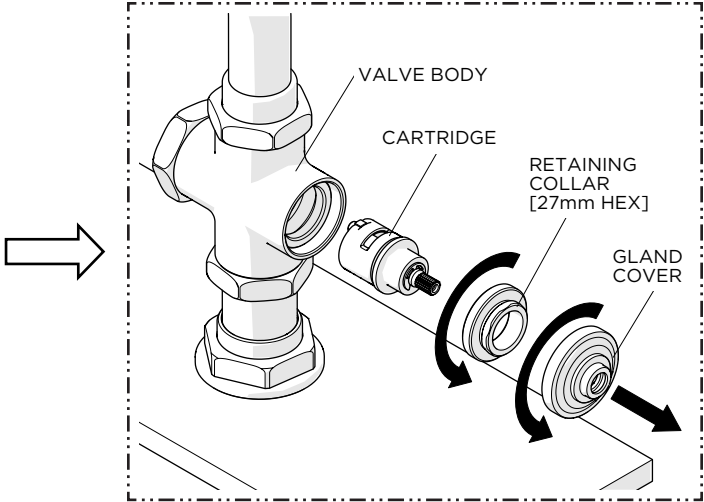

2. Unthread and remove the GLAND COVER and RETAINING COLLAR to expose and remove the CARTRIDGE.