


STYLE No. FMTS01

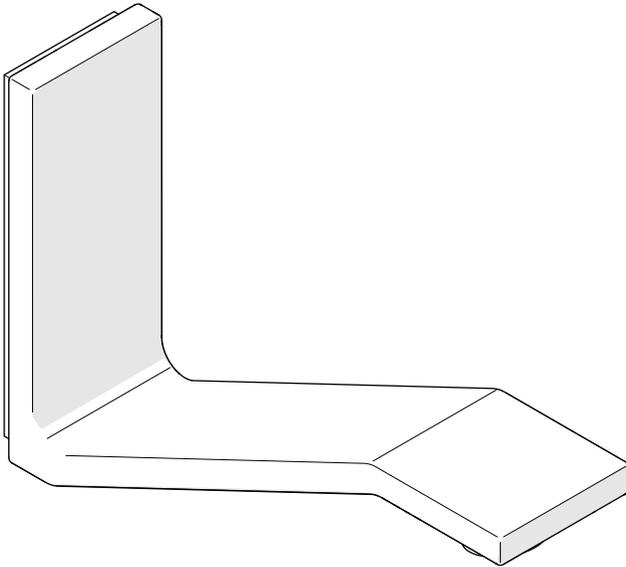

SPECIFICATIONS:

Fittings Hole Diameter: \varnothing 1-1/4"
Inlet Connection Size: 1/2"
Inlet Connection Type: Female NPT
Integrated Diverter: No
Water Pressure Minimum: 20psi
Water Pressure Maximum: 80psi
Water Pressure Recommended: 45psi

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to all federal, state, and local codes.
- In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- Inspect the product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.

- DO NOT use putty. Putty contains oil and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.

TRIM INSTALLATION:

- The inlet of the SPOUT is 1/2" Female NPT.
1. Install a 1/2" NPT NIPPLE (NOT INCLUDED) as shown in Figure - 01.

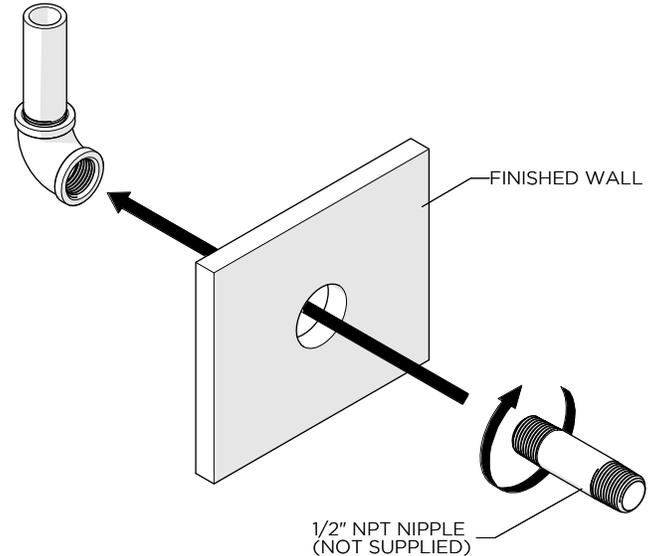


FIGURE - 01

2. Ensure the front face of NIPPLE is 3/16" from the finished wall as shown in Figure - 02.

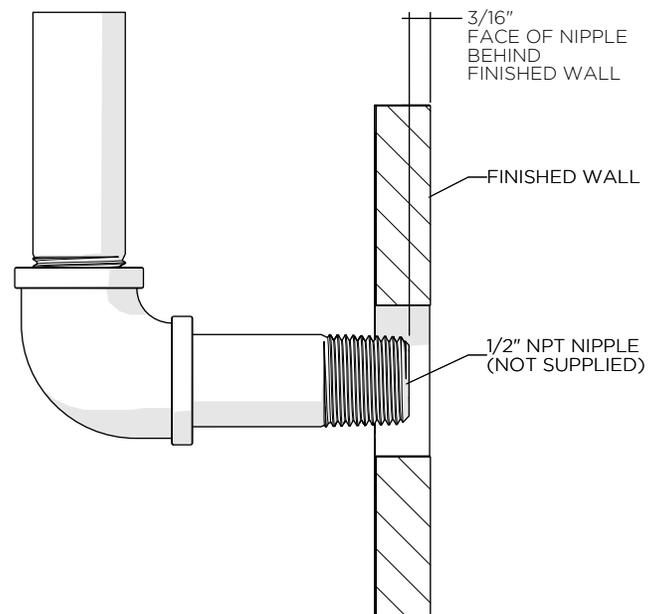


FIGURE - 02

These guidelines have been prepared for the professional contractor to aid in the installation of:
FORMWORK WALL MOUNTED TUB SPOUT (STYLE No. FMTS01)
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

WATERWORKS

3. Hold the ESCUTCHEON up to the finished wall and thread the SPOUT onto the NIPPLE. Do not tighten the SPOUT onto the NIPPLE. Mark where to drill the required $\varnothing 1/2"$ hole using the pre-drilled hole on the ESCUTCHEON as shown in Figure - 03.

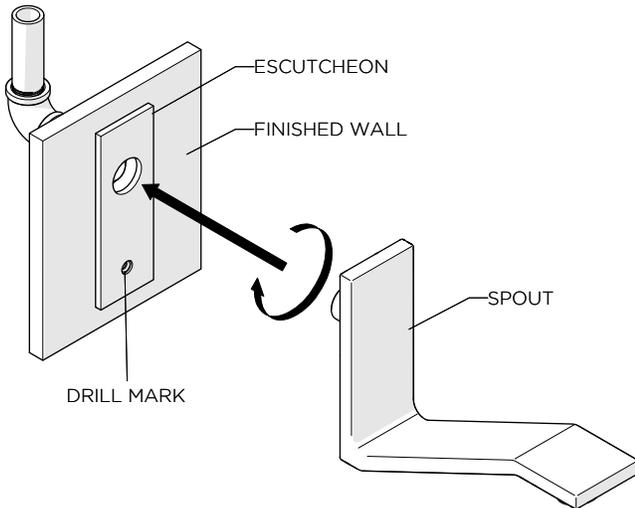


FIGURE - 03

4. Remove the SPOUT and ESCUTCHEON and drill the $\varnothing 1/2"$ hole using the mark made in Step 3.
 5. Install the TOGGLE ANCHOR in the $\varnothing 1/2"$ hole drilled in Step 4 then install the ESCUTCHEON using the SCREW provided as shown in Figure - 04. Make sure to use the RUBBER WASHERS provided to create a seal between the finished wall and the ESCUTCHEON.
- If desired, a bead of caulk or a clear silicone may be applied where the ESCUTCHEON contacts the finished wall. DO NOT use putty.*

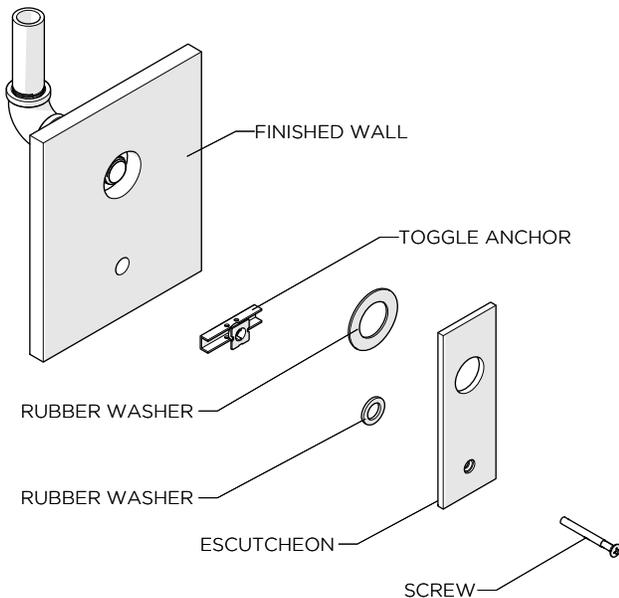


FIGURE - 04

6. Thread the SPOUT onto the NIPPLE making sure the RUBBER WASHER is between the SPOUT and the ESCUTCHEON as shown in Figure - 05. Securely tighten the SPOUT to create a proper seal.

➤ NOTE: The SPOUT has an AERATOR installed.

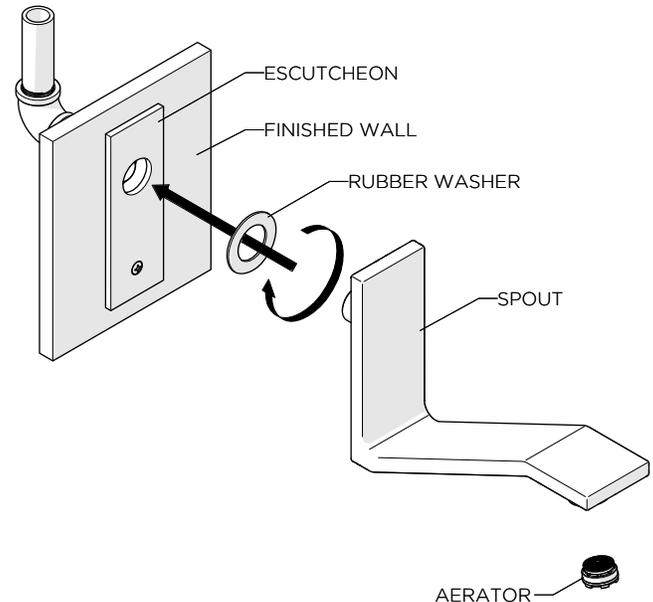


FIGURE - 05

FINISH & INSPECT THE INSTALLATION:

7. Remove the AERATOR using the tool provided then turn on the water supply to flush out any debris in the supply lines.
 8. Inspect all connections for leaks then turn off the water supply.
 9. Re-install the AERATOR
- If further assistance is required, please contact Product Support at 1-800-927-2120 Ext 2 Monday through Friday, 8am - 6pm EST.
- See the service part document for parts ordering, available on WATERWORKS.COM.
- * Putty contains oil and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.

These guidelines have been prepared for the professional contractor to aid in the installation of:
FORMWORK WALL MOUNTED TUB SPOUT (STYLE No. FMST01)
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

WATERWORKS