
INSTALLATION GUIDELINES
HARDWARE

WATERWORKS


EASTON BACK-TO-BACK SHOWER DOOR PULL

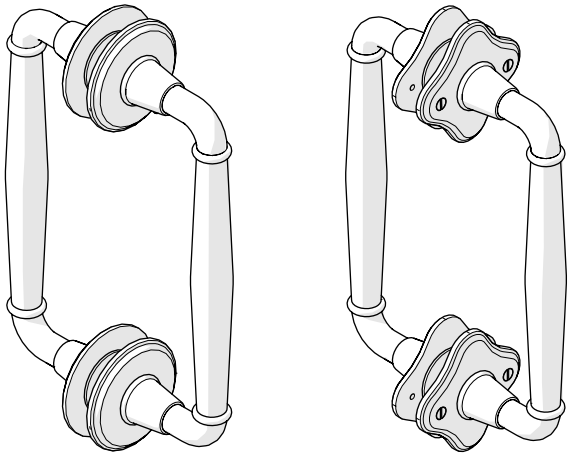

STYLES	
EAHW88	EHW88C

IMPORTANT:


- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to all federal, state, and local codes.
- This product must be installed a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- To avoid damaging the product, do **NOT** use power tools during installation.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.

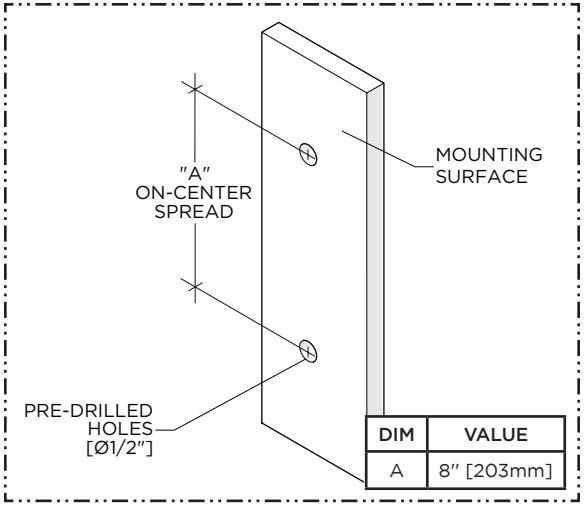

DIM	VALUE
A	8" [203mm]


1. Drill two 1/2" diameter holes on the MOUNTING SURFACE at the required on-center spread (DIM-A).

   NOTE: Ensure the holes are level and verify the on-center spread (DIM-A).

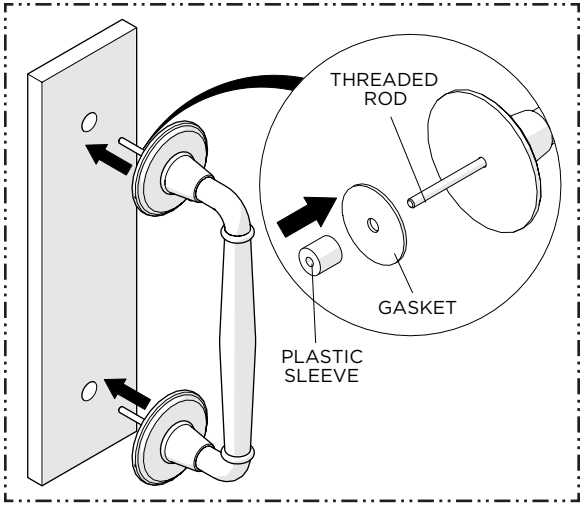


2. Pre-assemble GASKET and PLASTIC SLEEVES onto THREADED RODS on the PULL, then insert into pre-drilled holes.

   NOTE: The PLASTIC SLEEVE can be cut to accommodate the glass thickness of 3/8" [9mm], 1/2" [12mm] or 3/4" [19mm].

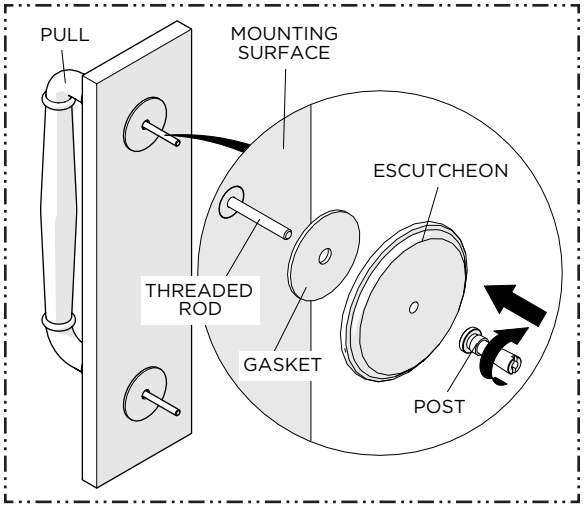

3. Slide the GASKET and ESCUTCHEON on the THREADED ROD and securely tighten the RETAINING POST.

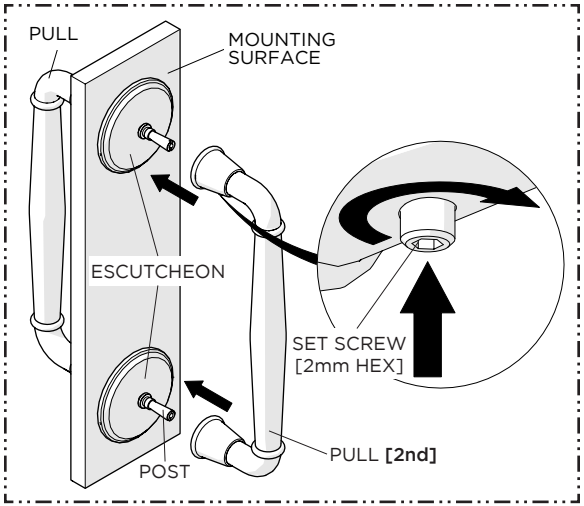

4. Slide the **second (2nd)** PULL onto the RETAINING POSTS until it fully contacts the ESCUTCHEONS, then thread and securely tighten the SET SCREWS.