


FORMWORK


Three Hole Deck Mounted Lavatory Faucet

INSTALLATION GUIDELINES

Style No. FMLS01
with Metal Knob Handles

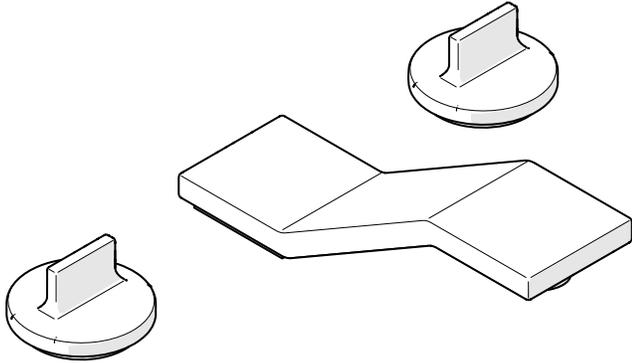

Style No. FMLS10
with Metal Lever Handles

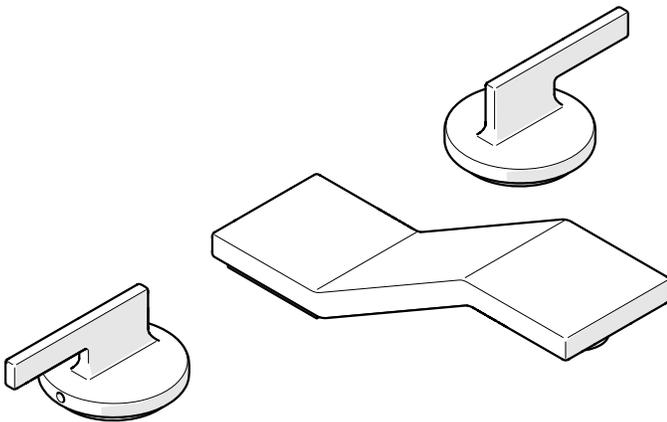

SPECIFICATIONS:

Drain Depth: 1-1/2" MIN - 1-3/4" MAX

Drain Hole Diameter: Ø 1-3/4"

Drain Style: Push Touch (Drain Included)

Fitting Hole Diameter: 1-3/8"

Handle Spread: 8" MIN - 12" MAX

Inlet Connection Size: 1/2"

Inlet Connection Type: Male with Supply Nut

Maximum Deck Thickness: 1/2" MIN - 2" MAX

Water Pressure: 20 psi MIN - 80 psi MAX

Recommended Water Pressure: 45 psi

Restricted Maximum Flow Rate: 2.2 gpm

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- Be sure your installation conforms to federal state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.

- This product must be installed by a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty may stain stone or tile surfaces.

SPOUT INSTALLATION:

- See Figure 1. for Steps 1-3.
1. Remove the NUT, METAL WASHER, RUBBER WASHER & PLASTIC SPACER from the bottom of the SPOUT SHANK.
 2. Insert the SPOUT and SPOUT SHANK through the hole on the mounting surface making sure the RUBBER GASKET is underneath the spout.
 3. Re-install the PLASTIC SPACER, RUBBER WASHER, METAL WASHER & NUT (in that order). Tighten the NUT to secure the spout.

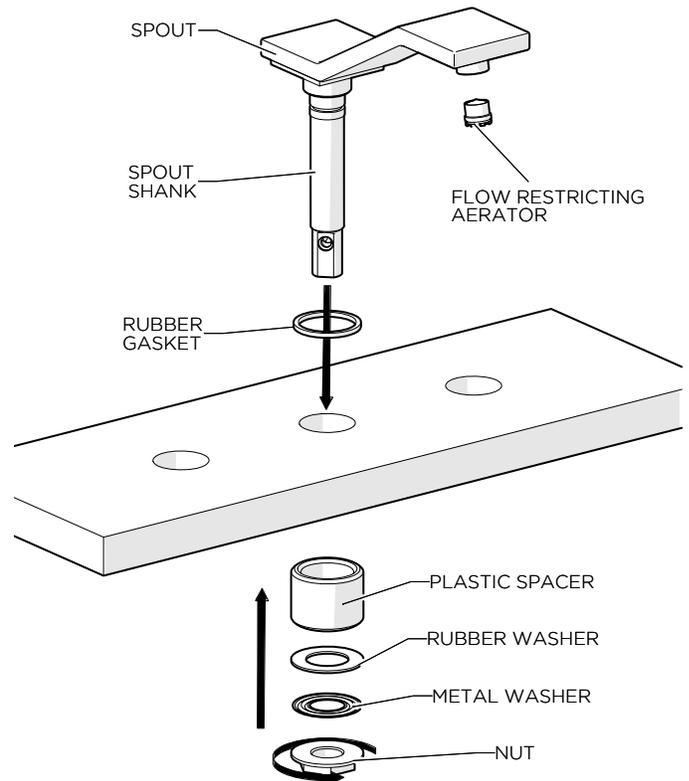


FIGURE - 01

These guidelines have been prepared for the professional contractor to aid in the installation of: FORMWORK DECK MOUNTED LAVATORY FAUCET WITH METAL KNOB HANDLES (STYLE# FMLS01) & METAL LEVER HANDLES (STYLE# FMLS10). All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS

FORMWORK

Three Hole Deck Mounted Lavatory Faucet

INSTALLATION GUIDELINES

HANDLE INSTALLATION:

- See Figure 2. for Steps 4-7.
- 4. Remove the TRIM CONNECTOR from the VALVE BODY.
- 5. Thread the NUT as far down as possible on the VALVE BODY, moving the METAL WASHER, RUBBER WASHER & PLASTIC SPACER along with it.
- 6. From under the mounting surface, place the VALVE BODY with mounting hardware through the hole in the deck. From above the deck, thread the TRIM ADAPTER down on valve body until it stops.
- 7. Hand tighten NUT to secure the TRIM CONNECTOR to the deck. Note: This will allow for handle alignment.

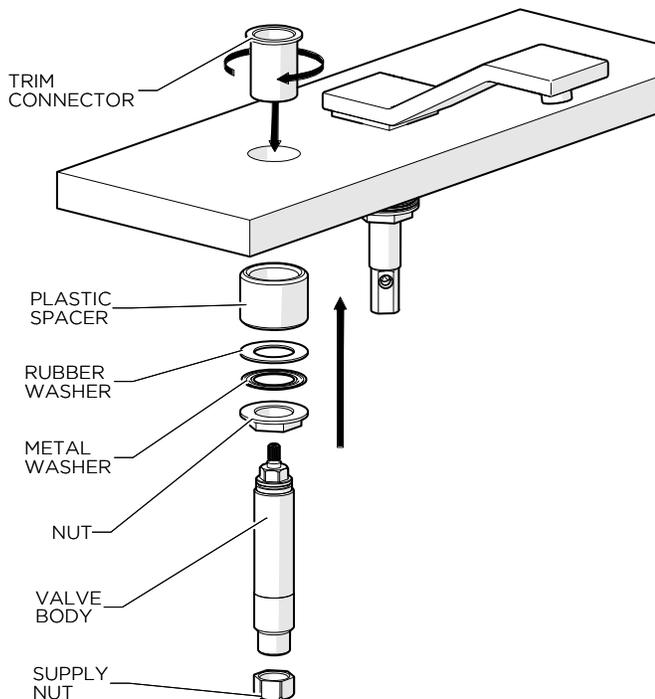


FIGURE - 02

- See Figure 3. for steps 8 - 10.
- 8. Tighten the ESCUTCHEON into the TRIM CONNECTOR, making sure the O-RING is between it and the mounting surface.
- 9. Make sure the PLASTIC WASHER is fit into the groove on the top of the ESCUTCHEON, then place HANDLE onto the base and press firmly until it is fully seated onto the stem of the handle base. Tighten SET SCREW to fix the HANDLE onto HANDLE BASE.

- 10. Verify the handle alignment and then tighten the NUT, below the surface, to secure this assembly.

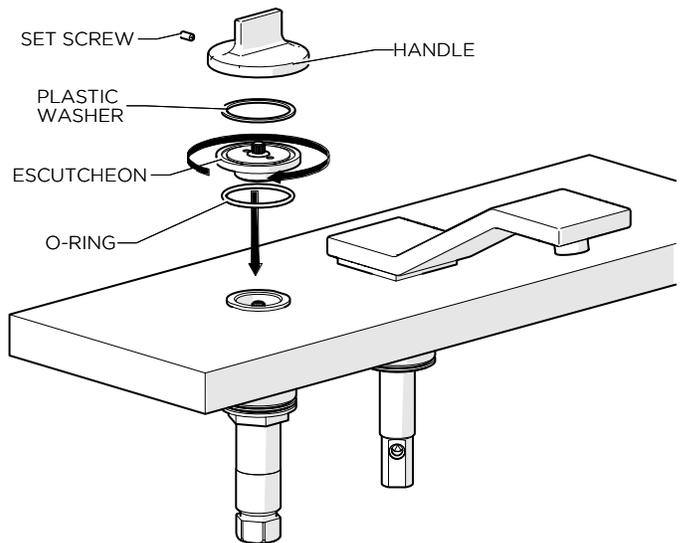


FIGURE - 03

- See Figure 4. for step 11

- 11. First, thread the male end of the OUTLET HOSE into the SPOUT SHANK, then thread the female hex end of the OUTLET HOSE into the side outlet of the VALVE BODY.

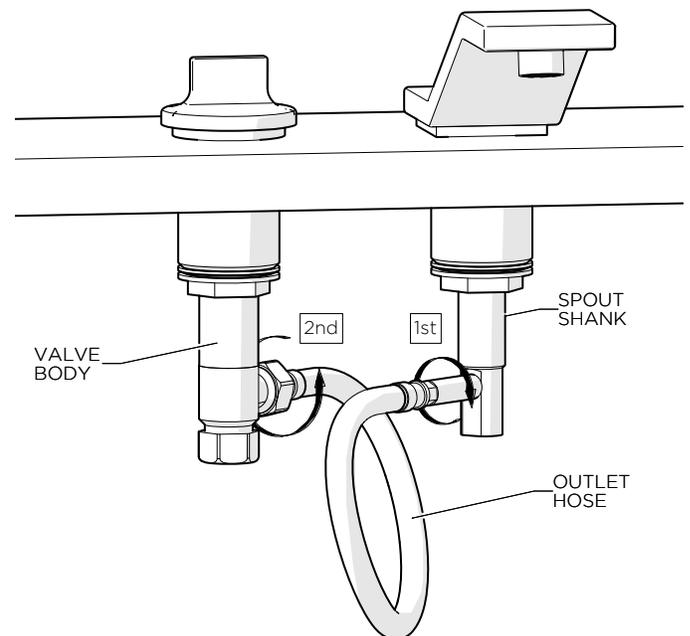


FIGURE - 04

These guidelines have been prepared for the professional contractor to aid in the installation of: FORMWORK DECK MOUNTED LAVATORY FAUCET WITH METAL KNOB HANDLES (STYLE# FMLS01) & METAL LEVER HANDLES (STYLE# FMLS10). All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS

FORMWORK

Three Hole Deck Mounted Lavatory Faucet

INSTALLATION GUIDELINES

12. Attach SUPPLY KIT [SOLD SEPARATELY] to inlet on VALVE BODY, using the supply nut.
13. Repeat steps 4-12 to install the second handle assembly.

DRAIN INSTALLATION:

- See Figure 5 for steps 14 - 17.
14. Remove the DRAIN FLANGE from LOWER DRAIN BODY and remove the RUBBER GASKET.
 15. Set the DRAIN FLANGE in the drain hole using putty or a clear adhesive silicone depending on the mounting surface material.*
 16. Making sure the RUBBER GASKET and PLASTIC WASHER are on the LOWER DRAIN BODY, thread the LOWER DRAIN BODY onto the DRAIN FLANGE. Securely tighten the LOWER DRAIN BODY, making sure the RUBBER GASKET makes a full seal on the underside of the lavatory. Putty or a clear adhesive silicone may be used to ensure a water tight seal between the RUBBER GASKET and lavatory.*
 17. Attach the TAILPIECE to the LOWER DRAIN BODY using the DRAIN NUT, making sure the RUBBER WASHER is in between the LOWER DRAIN BODY and TAILPIECE.

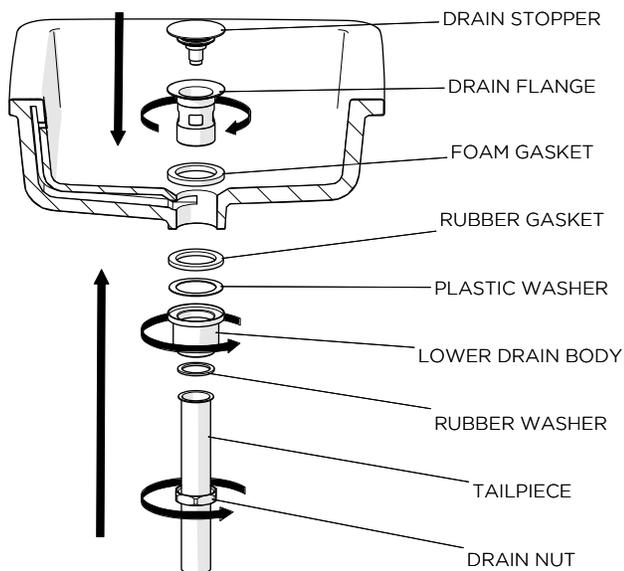


FIGURE - 05

INSPECT THE INSTALLATION:

18. Remove the flow restricting AERATOR using the tool provided, then carefully open the hot and cold valves to flush out any debris in the supply lines. See Figure 1.
19. Inspect all connections for leaks.

20. Close the drain and fill the sink with water to make sure the drain stopper and gasket operates and seals properly.
21. Re-install the flow restricting aerator.
 - If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).
 - See service part document for parts ordering, available on WATERWORKS.COM.
- * Putty contains oils and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.

These guidelines have been prepared for the professional contractor to aid in the installation of: FORMWORK DECK MOUNTED LAVATORY FAUCET WITH METAL KNOB HANDLES (STYLE# FMLS01) & METAL LEVER HANDLES (STYLE# FMLS10). All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS