


INSTALLATION GUIDELINES

ROBE HOOK

EASTON DOUBLE SIDED GLASS MOUNTED HOOKS

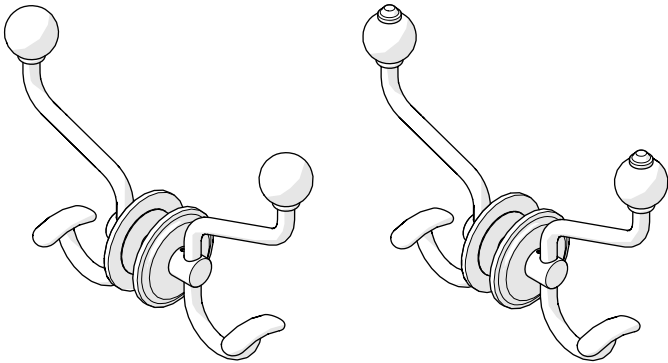

STYLES		
EARHG2 [SHOWN]	ERHG2B [SHOWN]	ERHG2R
ERHG2V	ERHG2W	


IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- This product can be installed on glass that ranges from 1/4" [6mm] - 7/8" [22mm] thickness using the hardware (or SET SCREWS) provided.


LENGTH:

SET SCREW	GLASS THICKNESS RANGE
25mm	1/4" [6mm] - 3/8"[10mm]
30mm	1/2" [13mm] - 5/8" [16mm]
35mm	3/4" [19mm] - 7/8" [22mm]


- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

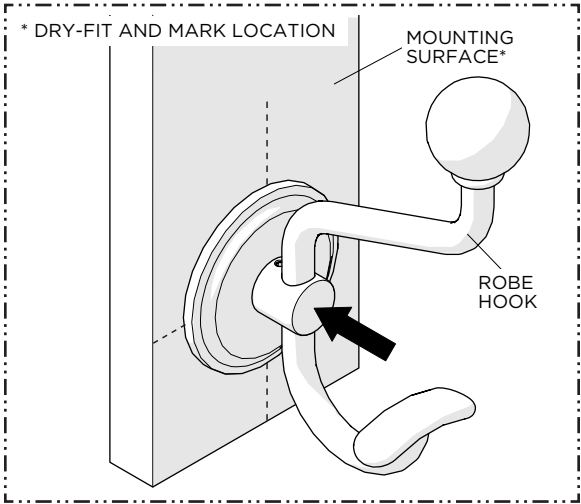


1. Dry-fit the ROBE HOOK to the FINISHED WALL and mark the ideal location.

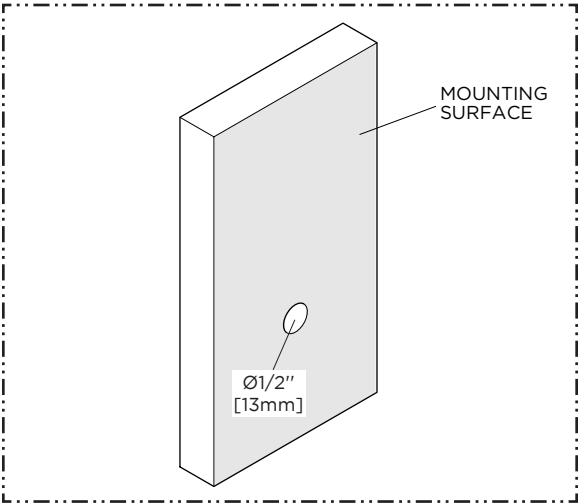

2. Ensure any pre-drilled hole is a 1/2" [13mm] on the MOUNTING SURFACE.

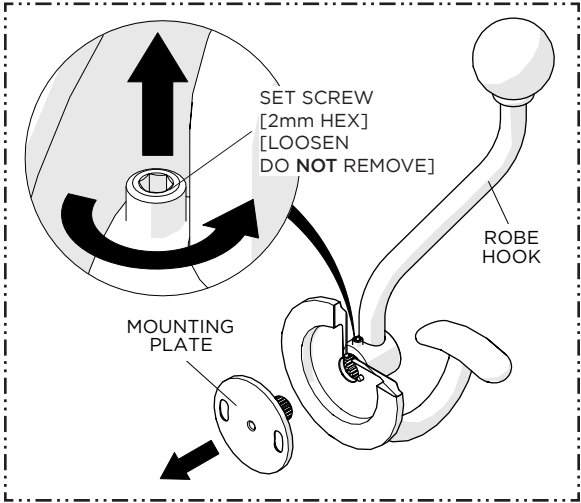

3. Loosen, but do NOT remove, the SET SCREW on the top of the ROBE HOOK END using a 2mm HEX and remove the MOUNTING PLATE.

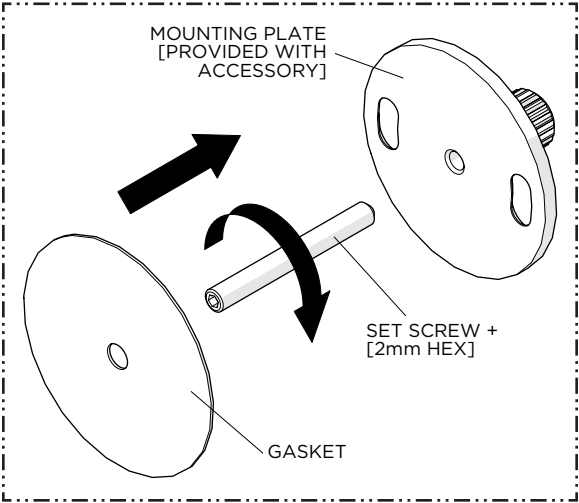


4. Thread the appropriate length SET SCREW into the MOUNTING PLATE then slide the GASKET over the SCREW.

NOTE: 3 different length SET SCREWS are provided.



INSTALLATION GUIDELINES

ROBE HOOK



WATERWORKS

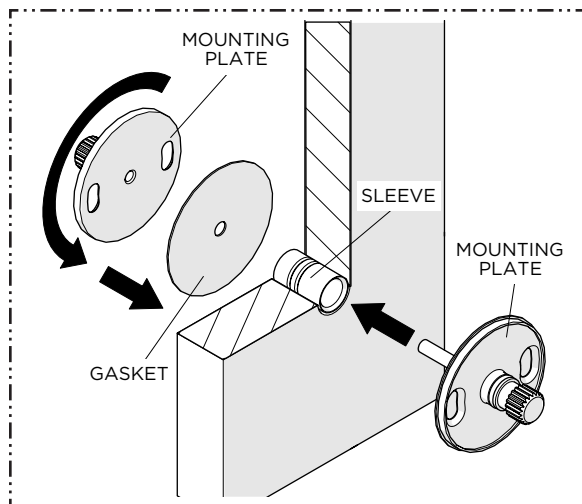

5. Insert the SLEEVE into the pre-drilled hole, insert the SET SCREW through the SLEEVE, install the second GASKET, then thread the second MOUNTING PLATE to the SET SCREW.

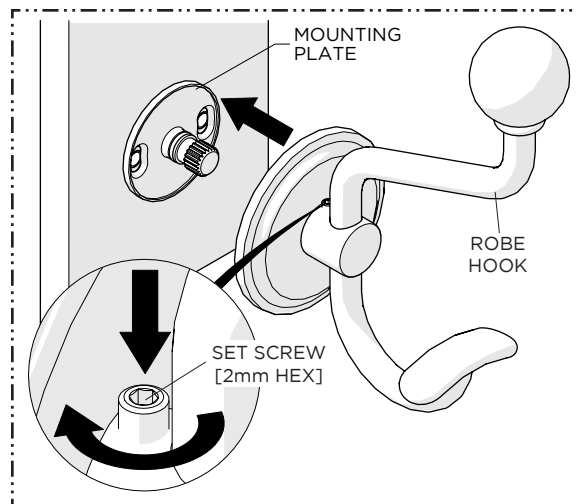

6. Slide the ROBE HOOK onto the MOUNTING PLATE then thread and securely tighten the SET SCREW using 2mm HEX.

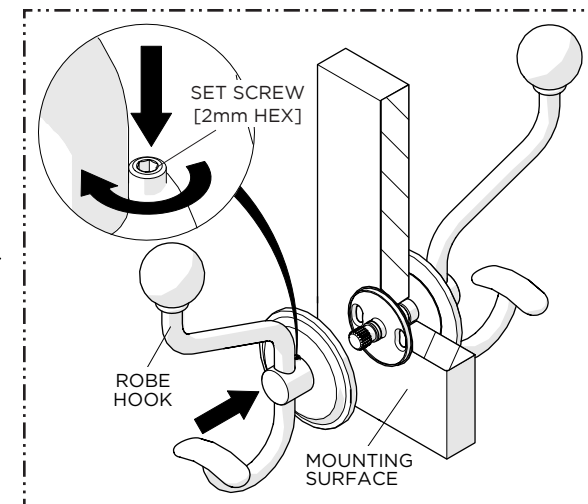

7. Repeat Step 6 for installing the ROBE HOOK on other side.