




- STYLE No. CYLV01**
Oval Single Glazed 18 1/4" x 13 1/4" x 7 1/4"
- STYLE No. CYLV02**
Oval Double Glazed 18 1/4" x 13 1/4" x 7 1/4"

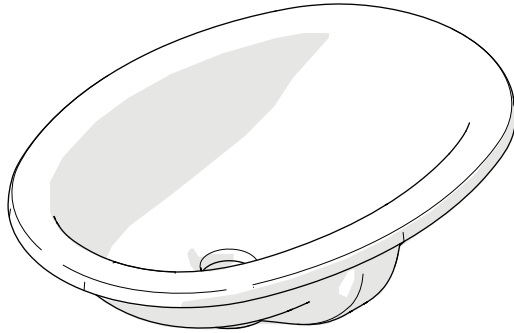

- STYLE No. CYLV10**
Oval Single Glazed 19 11/16" x 16 1/8" x 7 11/16"
- STYLE No. CYLV12**
Oval Double Glazed 19 11/16" x 16 1/8" x 7 11/16"

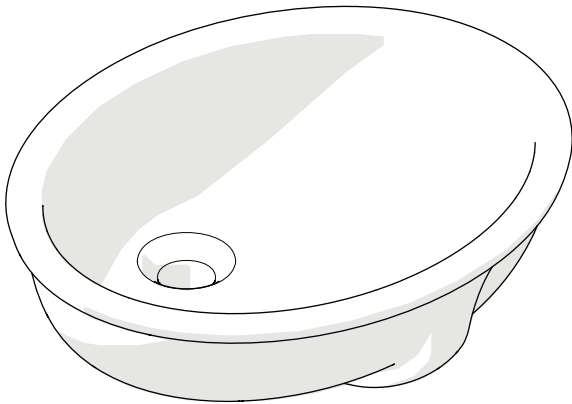

- STYLE No. CYLV20**
Rectangular Single Glazed 20 1/16" x 14 1/8" x 8"
- STYLE No. CYLV22**
Rectangular Single Glazed 20 1/16" x 14 1/8" x 8"

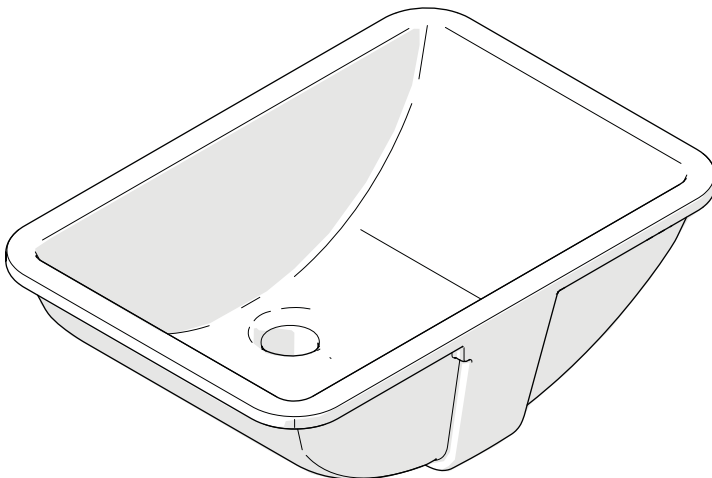

SPECIFICATIONS:

Drain Hole Depth: 1-3/4" [25mm]
Drain Hole Diameter: Ø1-3/4" [Ø41mm]
Installation Type: Undermount
Overflow Opening: Yes
Drain Included: No
Mounting Hardware Included: No
Cutout Template Included: No

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor. Be sure your installation conforms to all federal, state, and local codes.
- All dimensions are based on original specifications and are subject to change and variation. Due to dimensional variations of Vitreous China, Clara sinks should be installed before templating countertops for undermount applications. Dimensions taken for the purposes of cutting templates should always be taken from each product directly. For flush/no reveal or reveal installations, the physical sink is required due to sink tolerances.
- Ensure that the cabinet is properly sized for the sink being used. The cabinet must be plumbed, level, and securely installed prior to installing the sink.
- The use of certain plumber's putty may stain stone or tile surfaces.

UNDERMOUNT INSTALLATION:

- **The sink cutout and placement must be determined by the owner/user of this product.**
- **A cutout template is NOT provided.**

1. Create the sink cutout based on user preference.

IMPORTANT: The COUNTERTOP manufacturer or installer must have the actual SINK in order to create the sink cutout.

2. Dry fit the SINK to the COUNTERTOP making sure it aligns properly with the cutout.
3. Check COUNTERTOP, SINK, and cabinet dimensions to ensure adequate space for supply kit, faucet fitting, drain, and p-trap connections.
4. Determine the best placement for the MOUNTING CLIPS (not provided), and mark their locations. See Figure - 01.

NOTE: If possible, the COUNTERTOP manufacturer should pre-install any necessary mounting hardware (i.e. ANCHORS - not provided).

These guidelines have been prepared for the professional contractor to aid in the installation of:
Clara Oval Undermount Vitreous China Lavatory Sink 18-1/4" X 13-1/4" X 7-1/4" (Style No. CYLV01, CYLV02).
Clara Oval Undermount Vitreous China Lavatory Sink 19-11/16" X 16-1/8" X 7 11/16" (Style No. CYLV10, CYLV12) and
Clara Rectangular Undermount Vitreous China Lavatory Sink 20-1/16" x 14-1/8" x 8" (Style No. CYLV20, CYLV22).
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

WATERWORKS

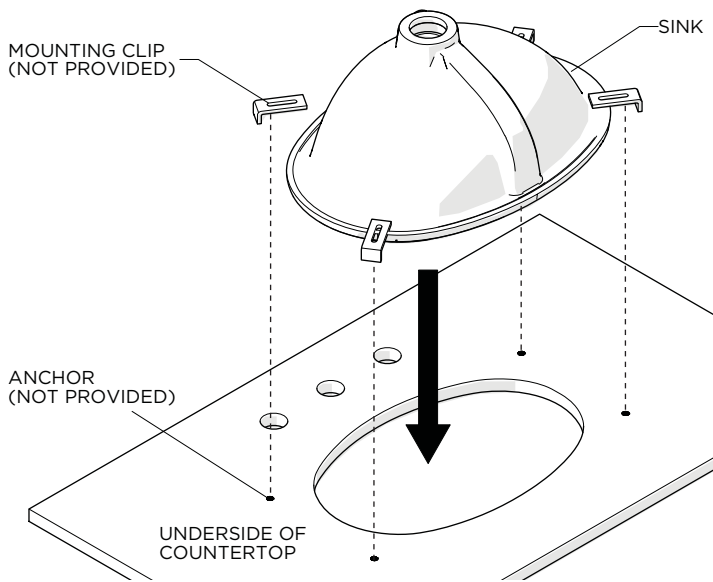


FIGURE - 01

5. Loosely install the MOUNTING CLIPS (not provided) per the manufacturer's instructions. See Figure - 02.

NOTE: If possible, the COUNTERTOP manufacturer should pre-install any necessary mounting hardware (i.e. ANCHORS - not provided).

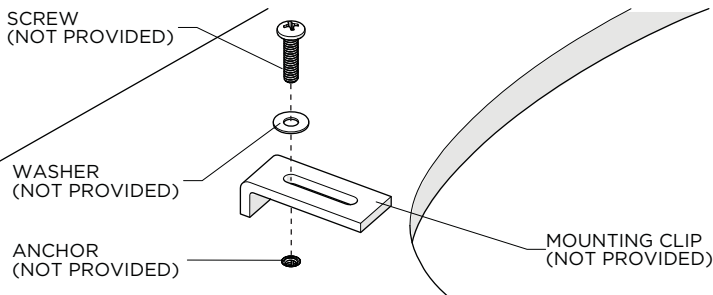


FIGURE - 02

6. Apply a continuous bead of clear adhesive silicone to the top of the SINK. Do NOT use putty. See Figure - 03.

NOTE: The use of certain plumber's putty may stain stone or tile surfaces.

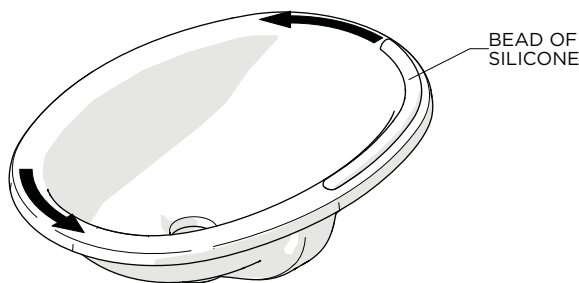


FIGURE - 03

7. Ensure the underside of the COUNTERTOP is clean and free of debris then hold the SINK against the underside making sure it is properly aligned with the hole.

NOTE: If possible, attach the SINK to the COUNTERTOP before installing the COUNTERTOP to the cabinet.

8. Secure the SINK to the COUNTERTOP by securely and evenly tightening the MOUNTING CLIPS (not provided) per the manufacturer's instructions. See Figure - 04.

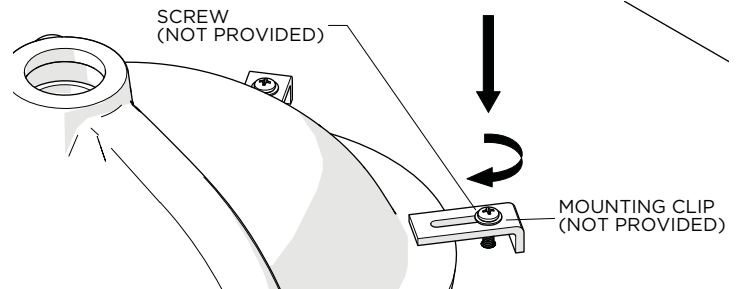


FIGURE - 04

9. Wipe away any excess silicone around the inside of the SINK immediately.

FINISH AND INSPECT THE INSTALLATION:

10. Follow the manufacturer's instructions to finish the COUNTERTOP, supply kit, faucet fitting, drain, and p-trap installations.

NOTE: If possible, attach the drain to the SINK before installing the COUNTERTOP to the cabinet.

11. Turn on the water supply and allow water to run into the SINK and check all connections for leaks.

12. Cover the SINK surface with a liner or other form of protection until construction is completed.

- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 7pm EST.

These guidelines have been prepared for the professional contractor to aid in the installation of:
Clara Oval Undermount Vitreous China Lavatory Sink 18-1/4" X 13-1/4" X 7-1/4" (Style No. CYLV01, CYLV02).
Clara Oval Undermount Vitreous China Lavatory Sink 19-11/16" X 16-1/8" X 7 11/16" (Style No. CYLV10, CYLV12) and
Clara Rectangular Undermount Vitreous China Lavatory Sink 20-1/16" x 14-1/8" x 8" (Style No. CYLV20, CYLV22).
 All dimensions are based on original specification and are subject to change and variation.
 Please consult your Design Associate for current specifications.

WATERWORKS