


GUSD00

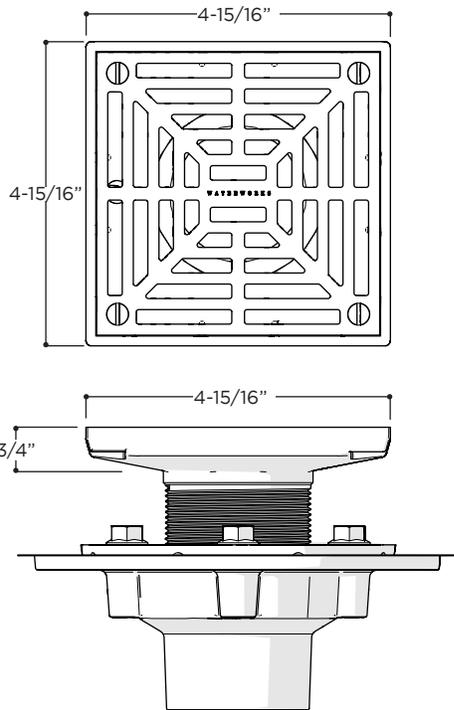

IMPORTANT

- To ensure this product is installed properly, you must read and follow these guidelines.
- Be sure your installation conforms to local codes.
- Inspect this product to assure you have all parts required for proper installation.

1. Strainer
2. Strainer body: 1" of adjustment.
3. Clamping collar: secured with four bolts.
4. Waterproof membrane: clamped between clamping collar (3) and drain body (5). Rubber membrane or a copper pan can be used (see figure 1). In the case of copper shower pans, insulation must protect the copper from conducting substances with 15 pound asphalt felt or its equivalent. This includes the drain body and clamping collar.
5. 2" no hub drain body.
6. Concrete slab: illustration only, material can be plywood where applicable.
7. Tile floor.
8. Mud bed: illustration only, can be tile setting material. Broken pieces of tile or gravel around strainer body will prevent weep holes from being clogged with the mud bed.

If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-7pm EST).


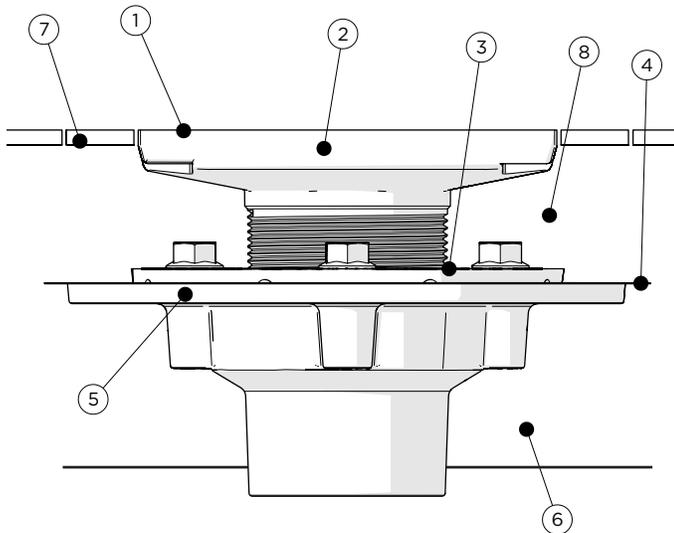


FIGURE 1

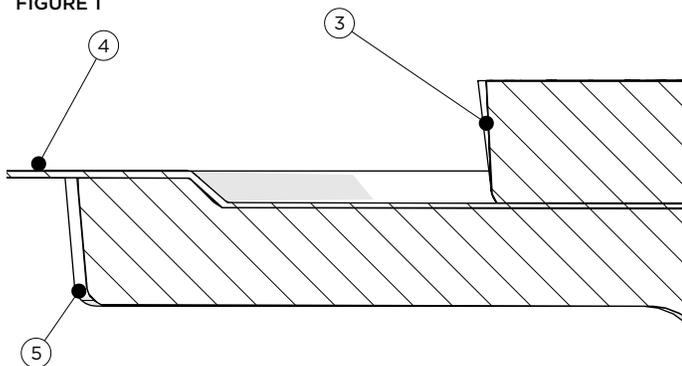

26/06 These guidelines have been prepared for the professional contractor to aid in the installation of **SHOWER DRAIN (GUSD00)**

All dimensions are based on original specification and are subject to change and variation. Please consult your Design Associate for current specifications.

WATERWORKS