


INSTALLATION GUIDELINES

WASHSTAND

R.W. ATLAS METAL TWO LEG SINGLE WASHSTAND 40" X 23" X 31 3/4" - BASE ONLY WITH MRLVCU SINK AND 5CM 40 1/4" RADIUS SLAB, BACKSPLASH, AND SIDE RAILS

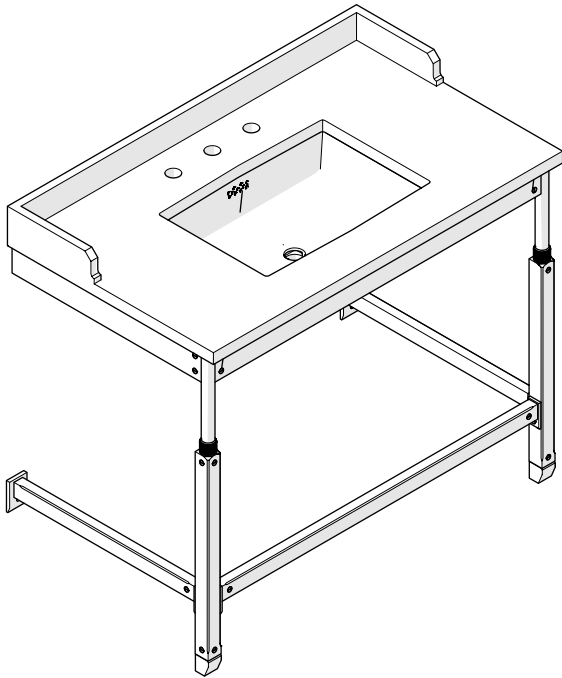

STYLE
RWWS40

WARNING:

- This product is extremely heavy. It is STRONGLY recommended that 2 or more persons install this product.
- If no blocking has been installed STOP this installation until structural blocking is available.
- This installation and hardware is for wood stud installation ONLY.
- Ensure the blocking is able to hold up to 300lbs.
- For metal studs, additional wood blocking must be installed.

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Inspect this product to ensure you have all the parts required for proper installation.
- Product is **sold partially** assembled but shown fully disassembled for illustrative and service purposes only.
- **CAUTION:** Use only a strap wrench or protected/smooth-jaw wrench on ANY finished surface.
- The use of certain plumber putty and silicone may stain stone or tile surfaces.
- **CAUTION:** Take caution when applying the silicone and only use the necessary amount to ensure it won't cause staining.
- Use painter's tape to ensure a clean application.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.

SUGGESTED HARDWARE:

STYLE	DESCRIPTION
KSSS99	Universal Clips and Supports

TECHNICAL DETAILS:

DETAIL	SPECIFICATION
DRAIN HOLE DEPTH	1-7/16" [49mm]
DRAIN HOLE DIAMETER	Ø1-3/4" [44mm]
FITTING HOLE DIAMETER	Ø1-3/8" [35mm]
OVERFLOW OPENING	YES
ROUGH-IN WASTE HEIGHT	18" [457mm] RECOMMENDED
WEIGHT	260lbs [118kg]


INSTALLATION GUIDELINES

WASHSTAND


ROUGH IN:

- 2" [50mm] x 4" [107mm] blocking to secure the SINK to the wall is required.
- Jack or Trimmer Studs are required to properly install the SUPPORT and ANGLE BRACKETS and to secure the SINK to the wall.
- Ensure that the lavatory drain vent piping is properly installed according to applicable building codes and does not interfere with the stud or blocking materials.
- SUPPORT BRACKETS must be installed directly onto wall studs and prior to the installation of the finished wall.
- The dimensions shown detail a 33" [840mm] SINK height installation.
- LAVATORY VALVE and associated TRIM **sold separately**.

BRACKET LOCATION:

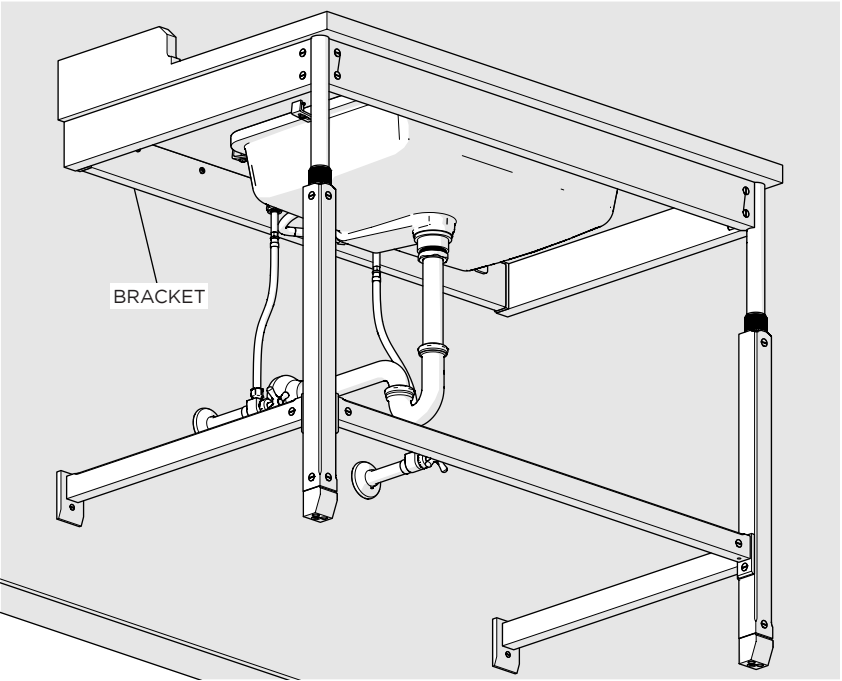

ROUGH-IN:

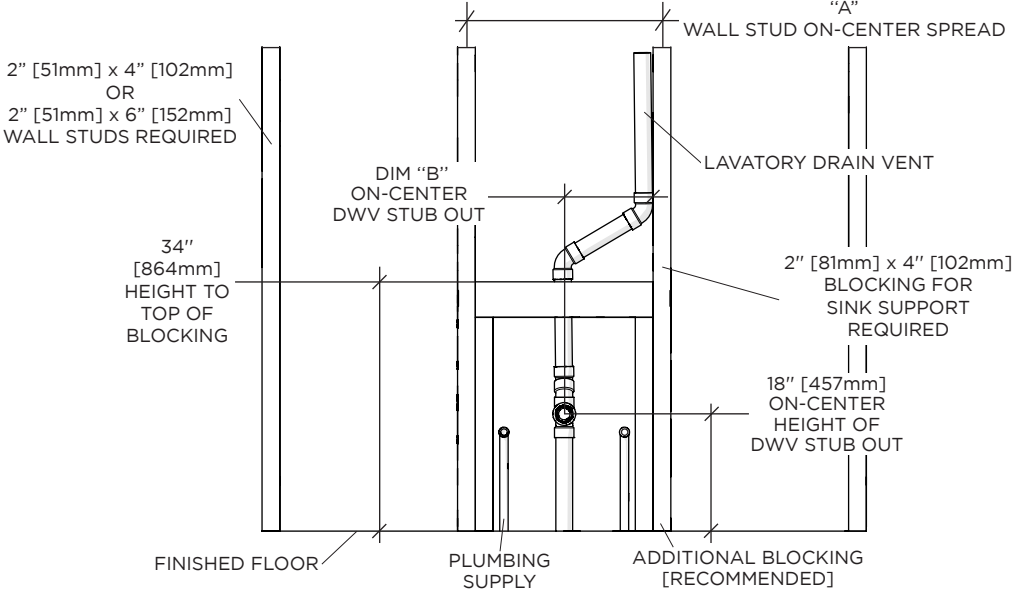


DIM "A"	24" [610mm]
DIM "B"	11" [279mm]

NOTE: This blocking scheme installs the sink top 34" [864mm] from the floor.

INSTALLATION GUIDELINES


WASHSTAND

WATERWORKS

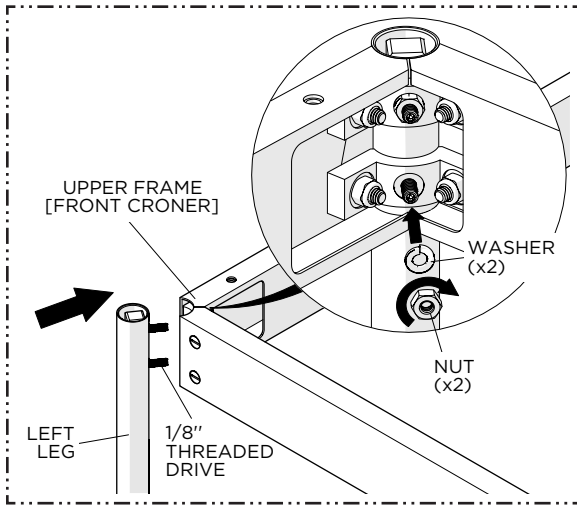


1. Position the UPPER FRAME onto the LEFT LEG, aligning the mounting holes. Secure using the supplied WASHERS and HEX NUTS on the 1/8" THREADED DRIVES.

➤ Repeat the same step for other LEG.

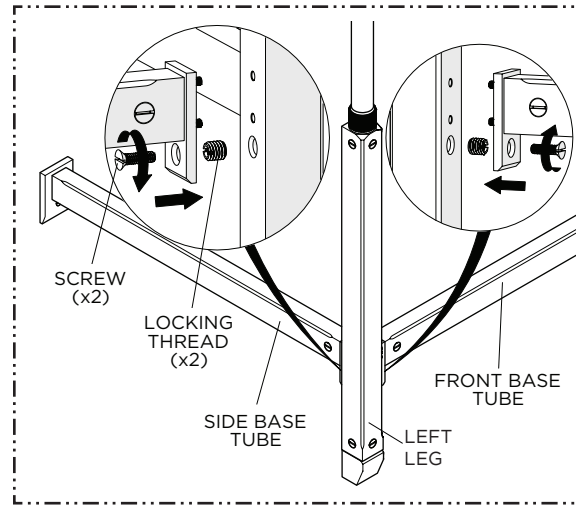


2. Insert the LOCKING THREADS into the LEFT LEG, then position the FRONT BASE TUBE and SIDE BASE TUBE and secure the assembly using the supplied SCREWS.


➤ Repeat the same step for other LEG.

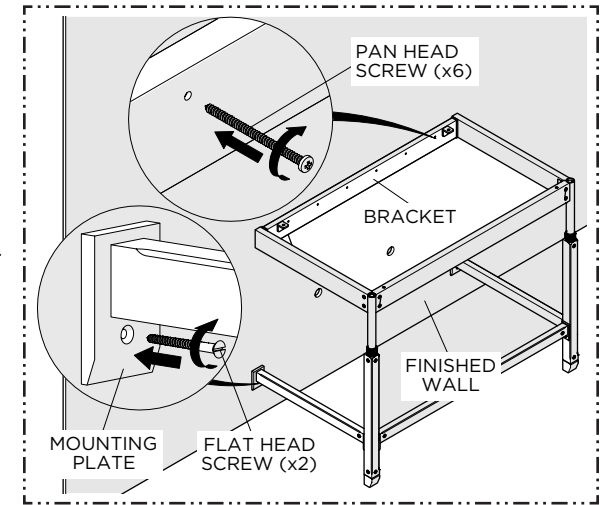


3. Position the WASHSTAND FRAME against the FINISHED WALL, drill the mounting holes, then secure the BRACKET using the supplied PAN HEAD SCREWS and the MOUNTING PLATES using the supplied FLAT HEAD SCREWS.

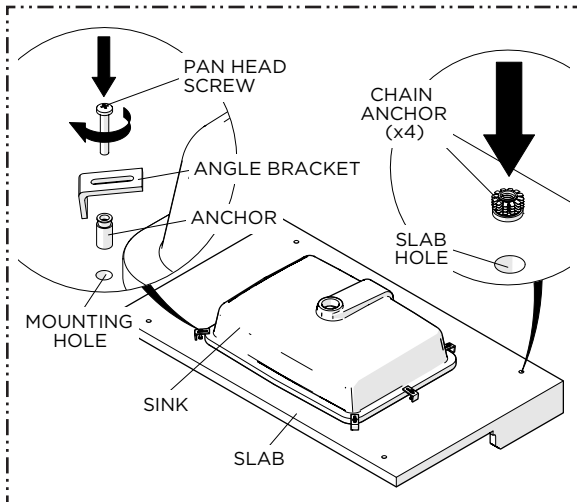

4. Invert the SLAB and SINK, align the MOUNTING HOLES, and secure the SINK using the ANGLE BRACKETS, ANCHORS, and PAN HEAD SCREWS, then insert the CHAIN ANCHORS into the remaining SLAB HOLES.

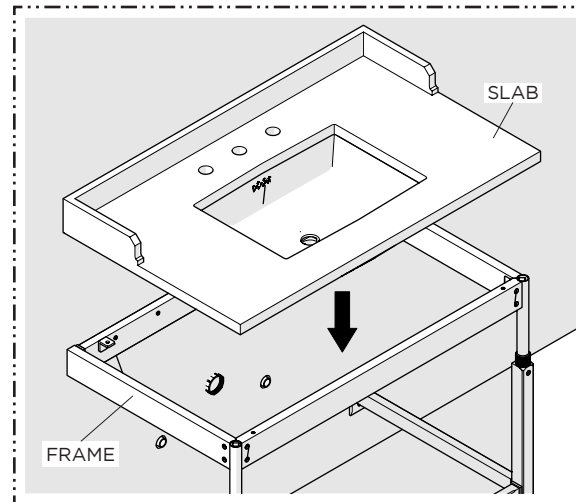

5. Position the assembled SLAB and SINK onto the FRAME and align with the mounting holes.

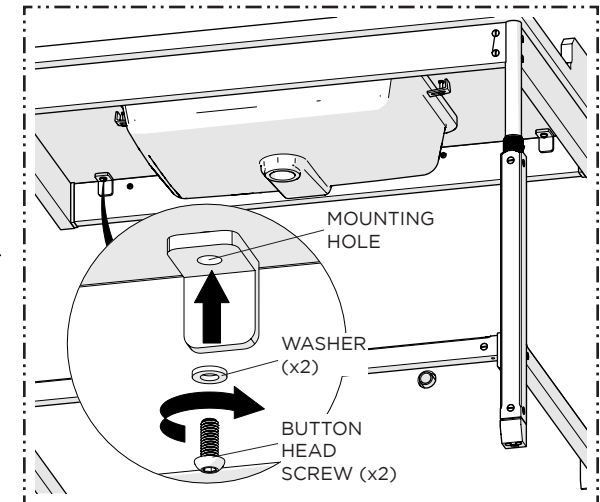


6. Place the WASHERS over the MOUNTING HOLE, insert the BUTTON HEAD SCREWS through the washer into the BRACKET, and tighten securely.



INSTALLATION GUIDELINES

WASHSTAND

WATERWORKS


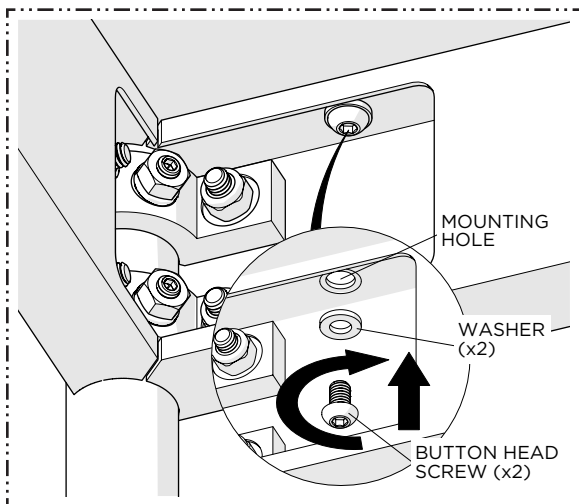


- Place the WASHERS over the MOUNTING HOLE, insert the BUTTON HEAD SCREWS through the washer into the SLAB and tighten securely.

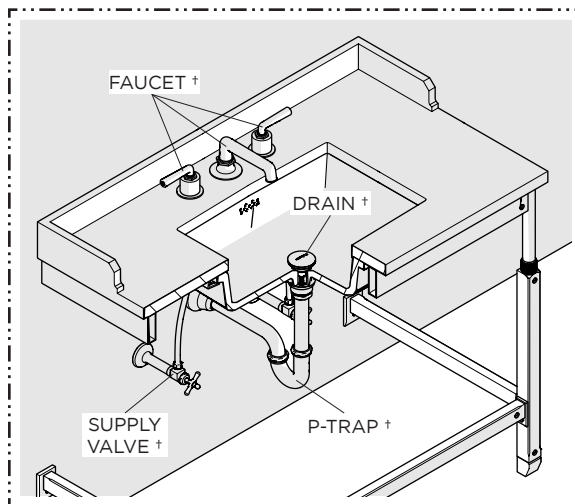


- Install the FAUCET, DRAIN and P-TRAP and SUPPLY VALVE [All sold separately].

NOTE: The use of certain plumber's putty may stain stone or tile surfaces.

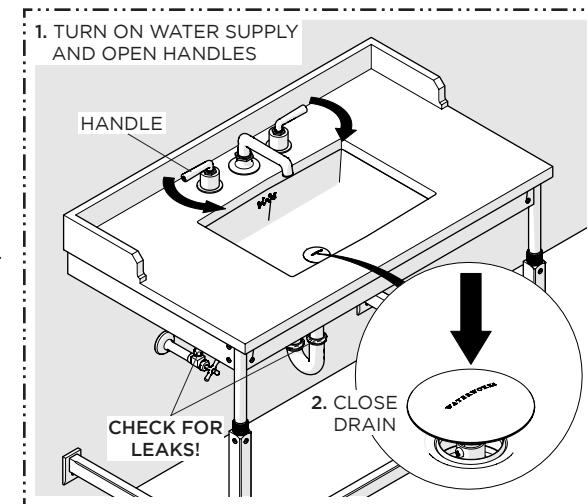

- Turn on the water supply and open the HANDLES to flush out the SUPPLY LINES, inspect all connections for **leaks** then close the DRAIN to ensure it functions properly.

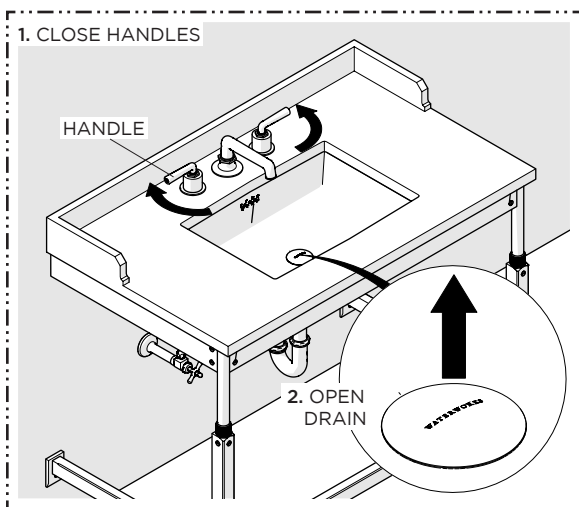

- Close the HANDLES, open the DRAIN to drain the water.