


STYLE No. RWKM30[†]

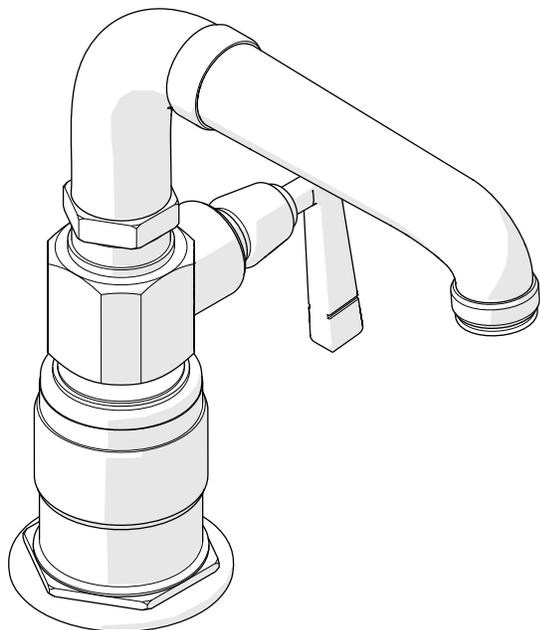

SPECIFICATIONS:

Deck Thickness Maximum: 2-11/16" (68mm)
Fittings Hole Diameter: Ø1-3/8" (35mm)
Handle Turn Angle: Half Turn
Inlet Connection Size: 3/8"
Inlet Connection Type: Compression Connection Hoses[†]
Restricted Maximum Flow Rate: 2.2gpm (8.3liters/min)
Spout Reach: 6-11/16" (170mm)
Spout Swivel: No
Water Pressure Minimum: 20 psi (1.4 Bar)
Water Pressure Maximum: 80 psi (5.5 Bar)
Water Pressure Recommended: 45 psi (3 Bar)

[†] UK Style No. **RW30KM** is supplied with 2 **BSP** adapters, assembly required.

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference..
- This product must be installed by a professional licensed contractor.
- Be sure your installation conforms to all federal, state, and local codes.
- In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.

- Refer to the specification and assembly drawings attached. Product is sold partially assembled but shown fully disassembled for illustrative and service purposes only.
- Inspect the product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- **DO NOT** use putty. Putty contains oil and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.

INSTALLATION:

1. Remove the NUT, METAL WASHER, and RUBBER WASHER from the THREADED ROD. See FIGURE - 01. Do **NOT** remove the O-RING beneath the ESCUTCHEON.

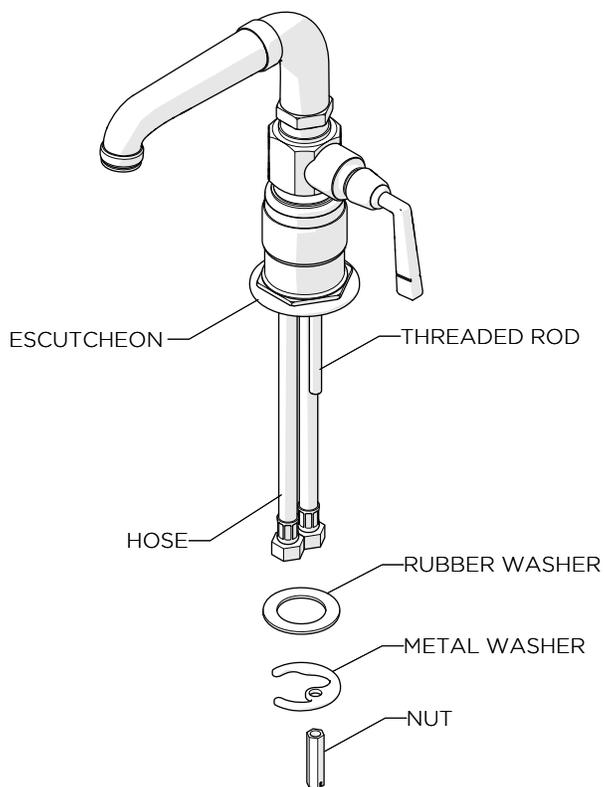


FIGURE - 01

2. Ensure that the HOSES and THREADED ROD are securely tightened to the VALVE BODY, then insert the HOSES and THREADED ROD through the Ø1-3/8" (35mm) hole on the mounting surface making sure the O-RING is beneath the ESCUTCHEON.
- **NOTE:** The SPOUT **must** be installed with the HANDLE on the right side of the SPOUT. The SPOUT cannot swivel and the HANDLE rotates clockwise 180° to open.

These guidelines have been prepared for the professional contractor to aid in the installation of:
R.W. ATLAS ONE HOLE BAR FAUCET WITH METAL LEVER HANDLE (STYLE No. RWKM30, RW30KM UK).
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

WATERWORKS

3. Re-install the RUBBER WASHER, METAL WASHER and NUT. Securely tighten the NUT to secure the SPOUT to mounting surface.
4. Connect the HOSES to the water supplies making sure they are not pinched or kinked.

FINISH AND INSPECT THE INSTALLATION:

5. Remove the AERATOR from the SPOUT using a quarter sized, coin then open the hot and cold supplies and carefully turn the HANDLE to flush out any debris in the supply lines.
6. Inspect all connections for leaks.
7. Shut the water off and re-install the AERATOR.

SERVICING THE PRODUCT:

- Refer to FIGURE - 02 for steps 8 & 9.
- 8. To remove the SPOUT, unthread the UNION NUT then pull the SPOUT up to remove.
- 9. To access the CARTRIDGE, remove the HANDLE by unthreading the GLAND COVER then unthread the RETAINING COLLAR to expose the CARTRIDGE.

* Putty contains oil and can cause permanent discoloration on certain materials such as marble, granite and any porous surface.

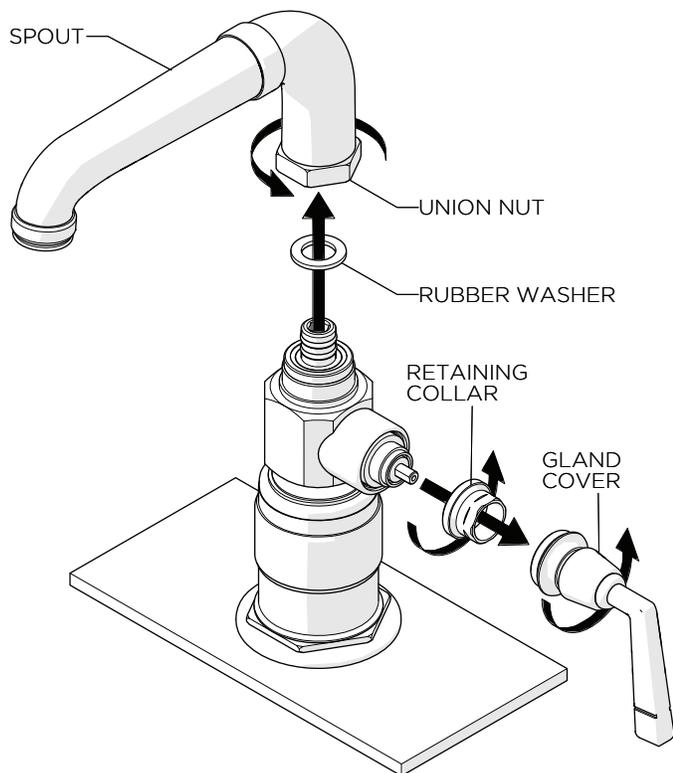


FIGURE - 02

- If further assistance is required, please contact Product Support at 1-800-927-2120 Ext 2 Monday through Friday, 8am - 6pm EST.

These guidelines have been prepared for the professional contractor to aid in the installation of:
R.W. ATLAS ONE HOLE BAR FAUCET WITH METAL LEVER HANDLE (STYLE No. RWKM30, RW30KM UK).
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.

W A T E R W O R K S