


# INSTALLATION GUIDELINES


## WALL MOUNTED LAVATORY FAUCETS

### FINOT WALL MOUNTED LAVATORY FAUCET WITH SINGLE HANDLE

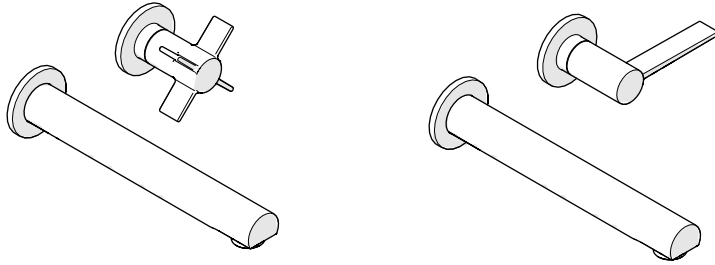

| STYLES         |                |        |
|----------------|----------------|--------|
| NLS310 [SHOWN] | NLS320 [SHOWN] | NLS360 |

### FINOT WALL MOUNTED LAVATORY FAUCET

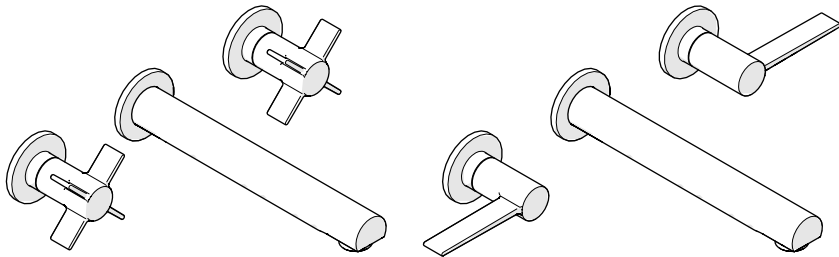

| STYLES         |                |        |
|----------------|----------------|--------|
| NLS710 [SHOWN] | NLS720 [SHOWN] | NLS760 |

### IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product must be installed by a professional licensed contractor and must be on-site prior to rough-in. This allows the installer to visualize the installation.
- Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- This product is sold partially assembled but shown fully disassembled for illustrative and service purposes only. Inspect this product to ensure you have all the parts required for proper installation.
- Check COUNTERTOP and SINK measurements to ensure the FAUCET projects far enough over the SINK.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- The use of certain plumber's putty may stain stone or tile surfaces.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

### REQUIRED PLUMBING DETAILS:

- ViaWorks 1/2" Lavatory Wall Mounted Valve for Single Handle  
**STYLE No.** GULV29
- ViaWorks 1/2" Lavatory Wall Mounted Valve (Used with Lever Handle Lavatory Faucets)  
**STYLE No.** GULV25, GU25LV<sup>†</sup>
- ViaWorks 1/2" Lavatory Wall Mounted Valve (Used with Cross or Wheel Handle Lavatory Faucets)  
**STYLE No.** GULV27, GU27LV<sup>†</sup>

### TECHNICAL DETAILS:

| DETAIL                     | SPECIFICATION                |
|----------------------------|------------------------------|
| DRAIN DEPTH MAXIMUM        | 2" [51mm] MAXIMUM            |
| DRAIN DEPTH MINIMUM        | 3/8" [10mm] MINIMUM          |
| DRAIN HOLE DIAMETER        | Ø1-3/4" [44mm]               |
| DRAIN STYLE                | PUSH-TOUCH                   |
| INLET CONNECTION           | 1/2" FEMALE NPT <sup>†</sup> |
| SPOUT REACH                | 7-15/16" [201mm]             |
| WATER PRESSURE MAXIMUM     | 85psi [6.0 bar]              |
| WATER PRESSURE MINIMUM     | 20psi [1.5 bar]              |
| WATER PRESSURE RECOMMENDED | 45psi [3.0 bar]              |


<sup>†</sup> For **INTERNATIONAL USE ONLY**, a 1/2" NPT MALE x 1/2" MALE BSPP ADAPTER is provided. The BSPP end of the ADAPTER may be field cut.

# INSTALLATION GUIDELINES

## WALL MOUNTED LAVATORY FAUCET WITH GULV25/27

### ROUGH-IN AND VALVE PREPARATION:

- Refer to the Installation Guidelines provided with the VALVE for complete rough-in installation details and related information.
  - Remove and discard the TILE GUARDS only when the finished wall surface (TILE or SLAB) is completed and the FAUCET is ready to be installed.
- CAUTION:
  - Mark and remove the THREADED TUBES before cutting. Do NOT cut the end with the internal threads.
  - Mark and remove the CARTRIDGES using a 21/32" [17mm] shower valve socket wrench (not provided) before cutting.
- ROUGH-IN DEPTH
  - The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall and must be between 5-3/8" [137mm] MAXIMUM and 3" [76mm] MINIMUM.
- ROUGH-IN HEIGHT
  - The rough-in height must allow for a MINIMUM of 1-1/2" [38mm] air gap between the end of the SPOUT and the flood level rim of the SINK or FIXTURE the SPOUT is being installed over.
  - The rough-in height must provide the HANDLES enough clearance to fully open. This will vary depending on the TRIM being used.

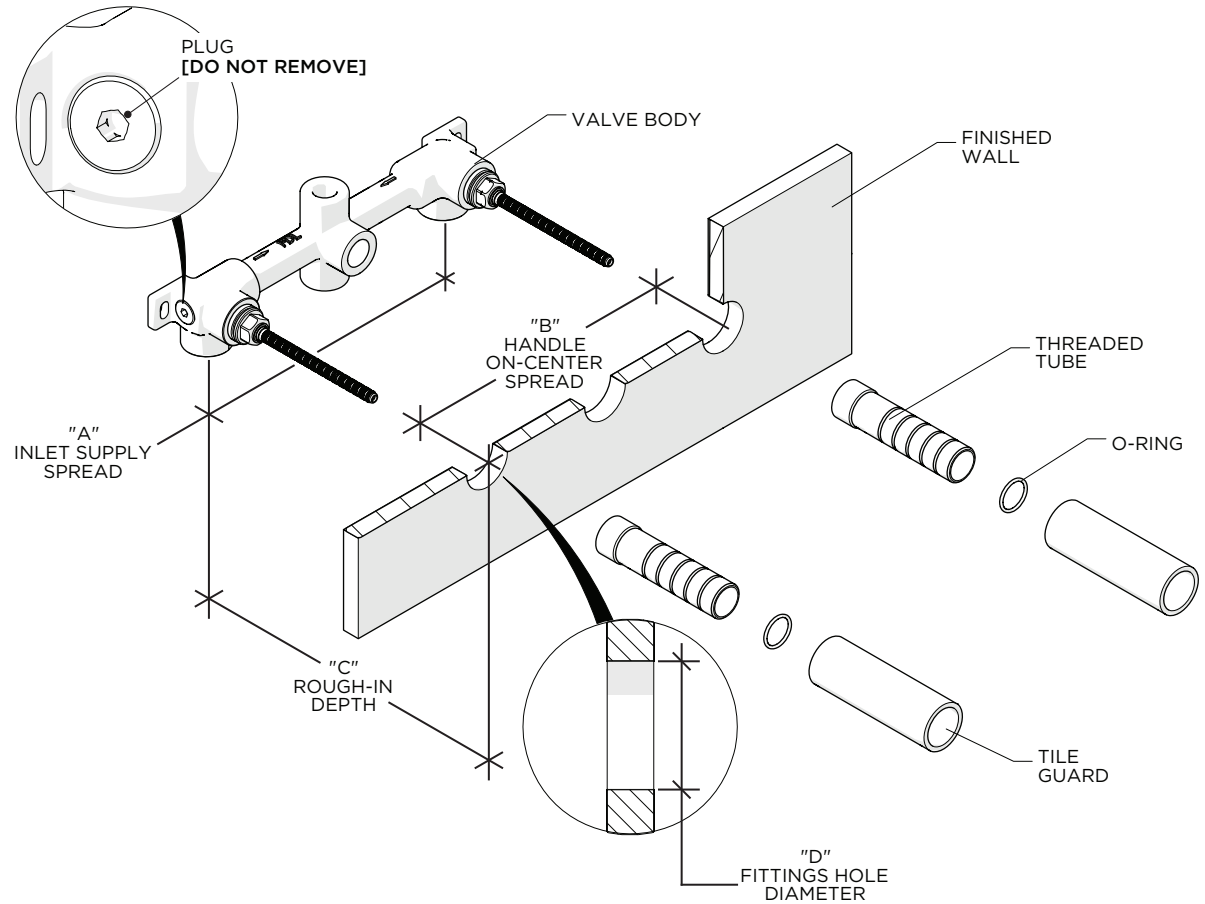


| DIM | VALUE                                       |
|-----|---|
| A   | 8" [203mm]<br>[NOT ADJUSTABLE]              |
| B   | 8" [203mm]<br>[NOT ADJUSTABLE]              |
| C   | 5-3/8" [137mm] MAXIMUM<br>3" [76mm] MINIMUM |
| D   | Ø1-3/8" [35mm]                              |

# INSTALLATION GUIDELINES

## WALL MOUNTED LAVATORY FAUCET WITH GULV29

### HANDLE OPERATION:

- The GULV29 [SOLD SEPARATELY] is equipped with a PROGRESSIVE MIXING CARTRIDGE which incorporates tactile feedback.
  - The user will feel slight haptic feedback as they operate the HANDLE.
  - This feedback indicates when the VALVE is at full cold and warm water temperatures.
- The HANDLE rotates a 1/4 turn counterclockwise through cold, warm, and hot water temperatures as shown below.
  1. OFF
  2. 1/8 TURN [FULL COLD]
  3. 3/16 TURN [MIXED]
  4. 1/4 TURN [FULL HOT]

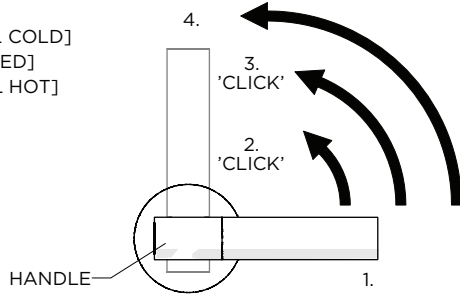


### ROUGH-IN AND VALVE PREPARATION:

- The GULV29 can be roughed-in horizontally with the HANDLE on the right or left side and vertically with the HANDLE above.

| OPTION             | VALVE ORIENTATION | SPOUT POSITION AND HANDLE OPERATION |
|--------------------|-------------------|-------------------------------------|
| 1<br>[RECOMMENDED] |                   |                                     |
| 2                  |                   |                                     |
| 3                  |                   |                                     |


- **CAUTION: DO NOT APPLY DIRECT HEAT TO THE VALVE!**
- **WARNING: The inlet supply spread of the GULV29 is NOT ADJUSTABLE!**
- Run well supported 1/2" hot and cold supply lines.
- **ROUGH-IN DEPTH**
  - The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall and must be between 5" [127mm] **MAXIMUM** and 2-3/4" [70mm] **MINIMUM**.
- **ROUGH-IN HEIGHT**
  - The rough-in height must allow for a **MINIMUM** of 1-1/2" [38mm] air gap between the end of the SPOUT and the flood level rim of the SINK or FIXTURE the SPOUT is being installed over.
  - The rough-in height must provide the HANDLES enough clearance to fully open. This will vary depending on the TRIM being used and the VALVE orientation.

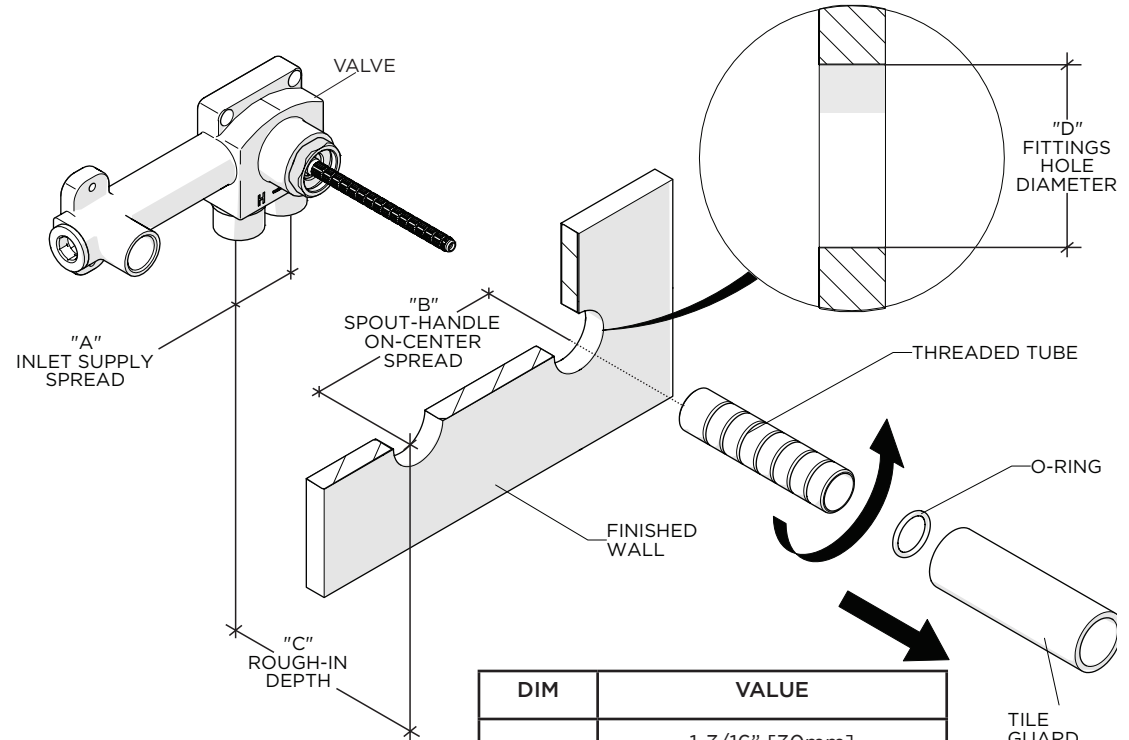


| DIM | VALUE   |
|-----|---|
| A   | 1-3/16" [30mm]<br><b>[NOT ADJUSTABLE]</b>                 |
| B   | 4-1/2" [114mm]<br><b>[NOT ADJUSTABLE]</b>                 |
| C   | 5" [127mm] <b>MAXIMUM</b><br>2-3/4" [70mm] <b>MINIMUM</b> |
| D   | Ø1-3/8" [35mm]  |

# INSTALLATION GUIDELINES


## WALL MOUNTED LAVATORY FAUCETS

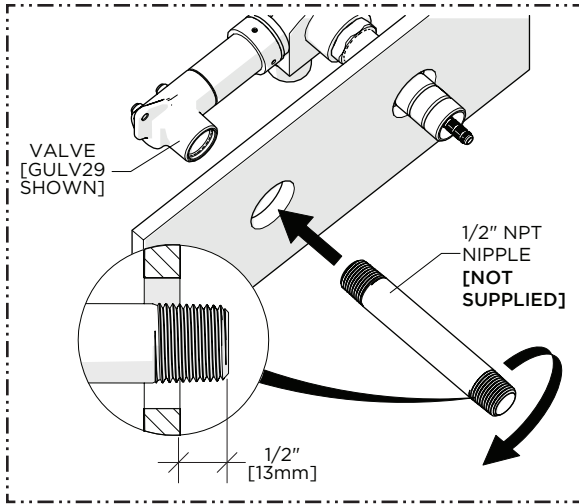


1. Thread a 1/2" NPT NIPPLE [not supplied] of appropriate length into the VALVE making sure it protrudes 1/2" [13mm] from the finished wall.

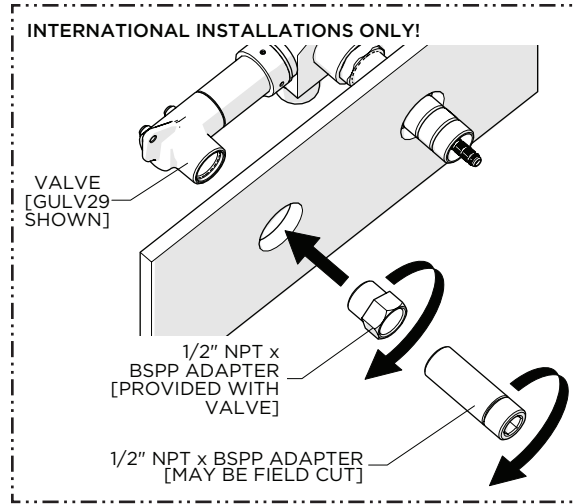


- FOR INTERNATIONAL INSTALLATIONS ONLY:**
2. A BSPP ADAPTER is provided with the VALVE and a BSPP ADAPTER, which may be field cut, is provided with the FAUCET. Thread and securely tighten the ADAPTERS into the VALVE.

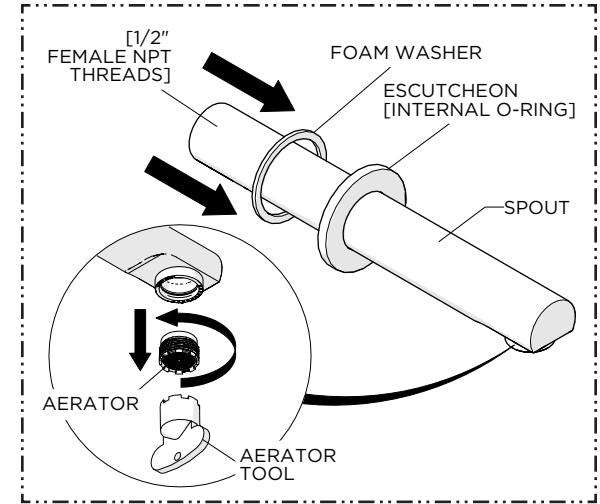


3. Using the tool provided, remove the AERATOR from the SPOUT then carefully slide the ESCUTCHEON and FOAM WASHER up the SPOUT.

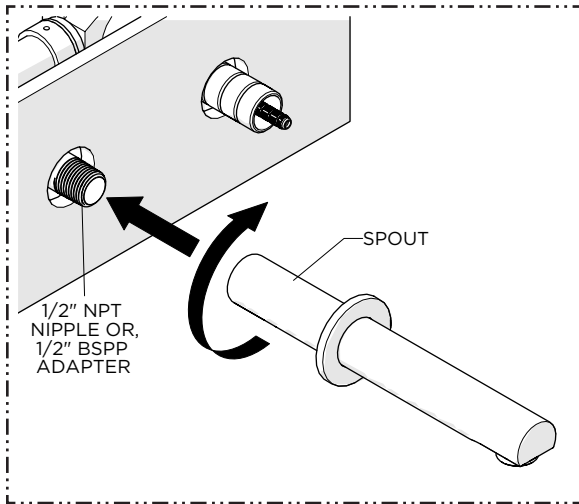

4. Thread and securely tighten the SPOUT onto the NPT NIPPLE OR, 1/2" BSPP ADAPTER.

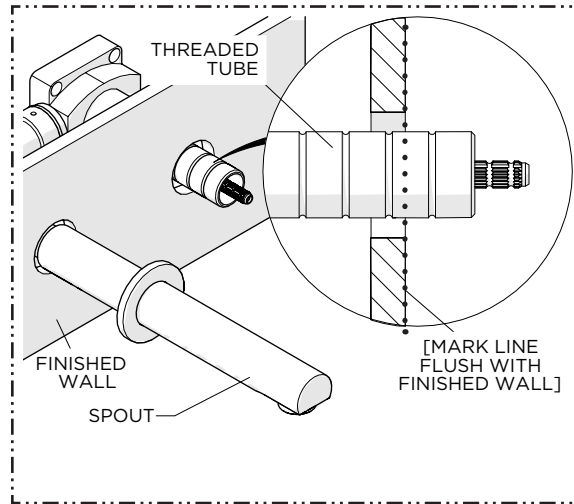


5. Mark the THREADED TUBE where it protrudes past the finished wall.  
**NOTE:** A straight edge (not supplied) can be used to mark the TUBE.

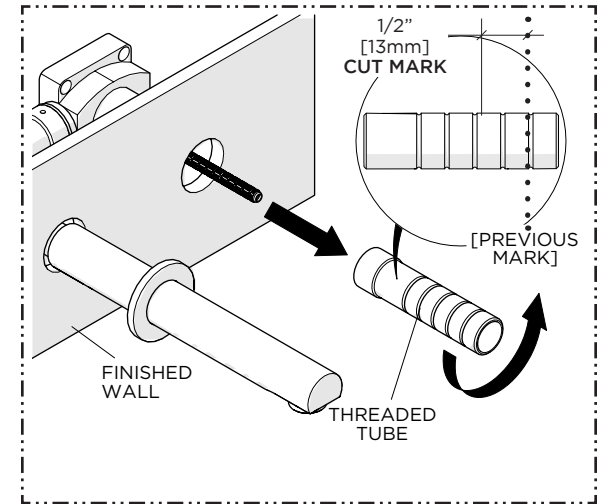

6. Remove the THREADED TUBE then cut it 1/2" [13mm] behind the previous mark.  
**NOTE [GULV25/27 ONLY]:** Do NOT cut the end of the THREADED TUBE with the female threads.


# INSTALLATION GUIDELINES

## WALL MOUNTED LAVATORY FAUCETS

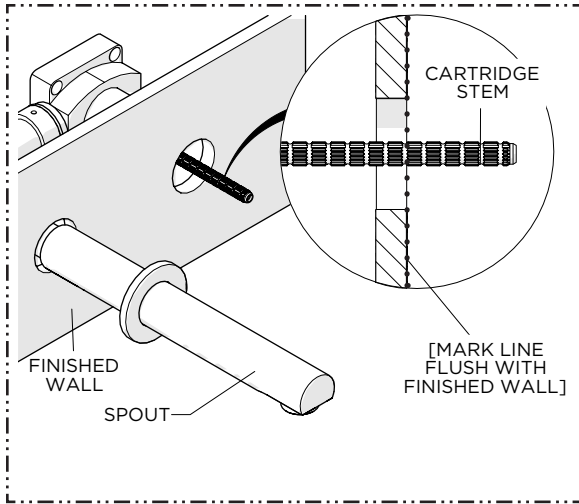


7. Mark the CARTRIDGE STEM where it protrudes past the finished wall.

**NOTE:** A straight edge (not supplied) can be used to mark the CARTRIDGE STEM.

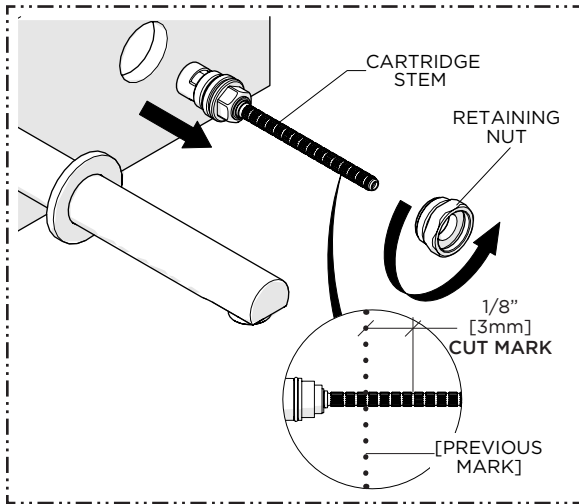


**STEPS 10 - 11 FOR GULV29 ONLY:**

10. Remove the RETAINING NUT and CARTRIDGE then cut the CARTRIDGE STEM 1/8" [3mm] in front of the previous mark.

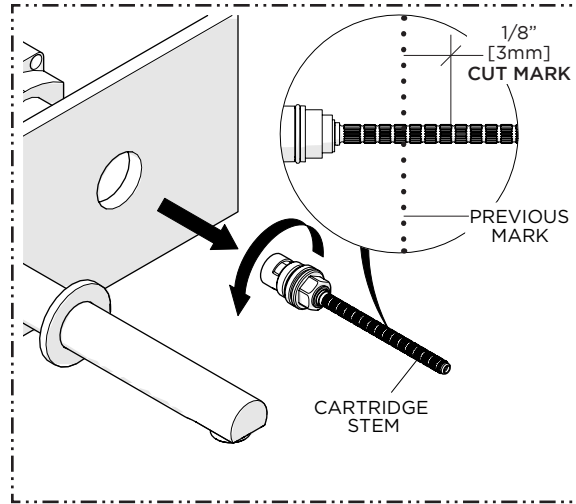


**STEPS 8 - 9 FOR GULV25/27 ONLY:**

8. Remove the CARTRIDGE using a 21/32" [17mm] shower valve socket wrench (not provided) then cut the STEM 1/8" [3mm] in front of the previous mark.

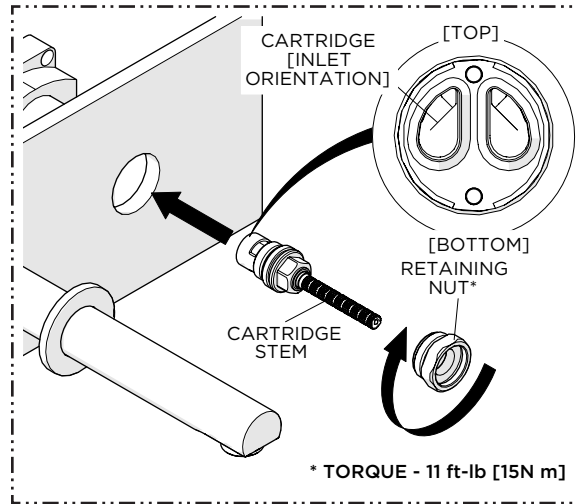


11. Insert the CARTRIDGE back into the VALVE in the proper orientation then thread and securely tighten the RETAINING NUT.

**NOTE:** The NUT requires a torque of 11 ft-lb [15N•m]. Exceeding this torque will damage the CARTRIDGE.

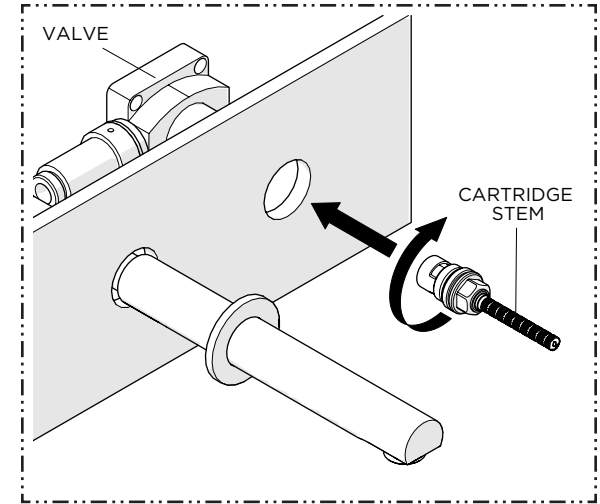

9. Thread and securely tighten the CARTRIDGE back into the VALVE.


➤ **REPEAT STEPS 5 - 9 FOR THE SECOND HANDLE.**

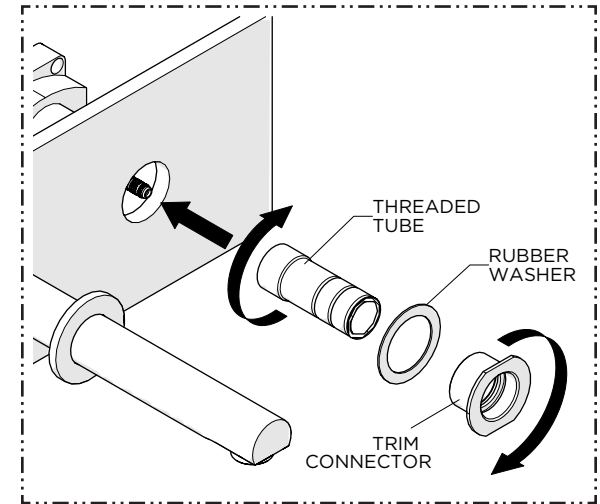


12. Thread the THREADED TUBE back onto the VALVE until snug then thread and securely tighten the TRIM CONNECTOR onto the THREADED TUBE using the RUBBER WASHER provided.

# INSTALLATION GUIDELINES


## WALL MOUNTED LAVATORY FAUCETS

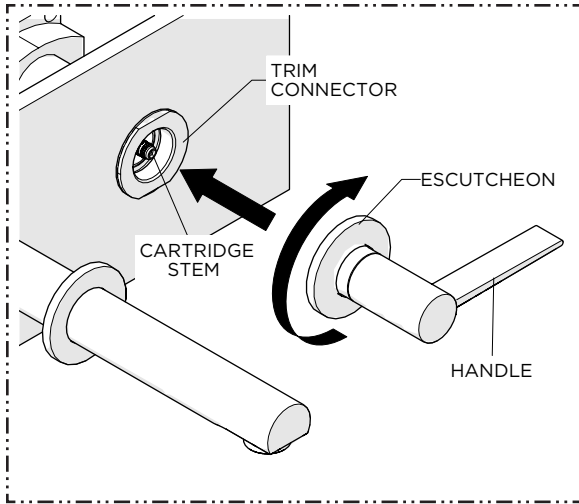

13. Place the HANDLE over the CARTRIDGE STEM then thread the ESCUTCHEON into the TRIM CONNECTOR until snug.

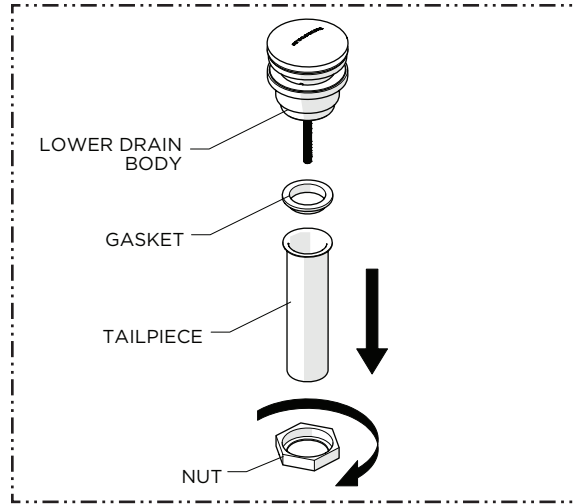


14. Unthread and remove the NUT, TAILPIECE, and GASKET from the LOWER DRAIN BODY.

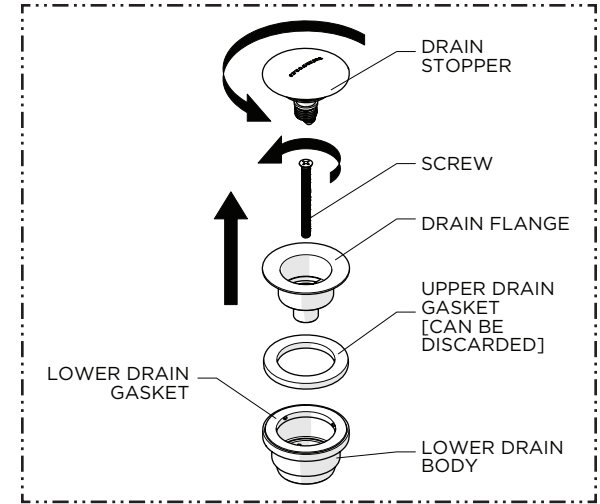


15. Remove the DRAIN STOPPER from the DRAIN FLANGE then unthread the SCREW from the LOWER DRAIN BODY.


**NOTE:** Do **NOT** remove or discard the LOWER DRAIN GASKET.

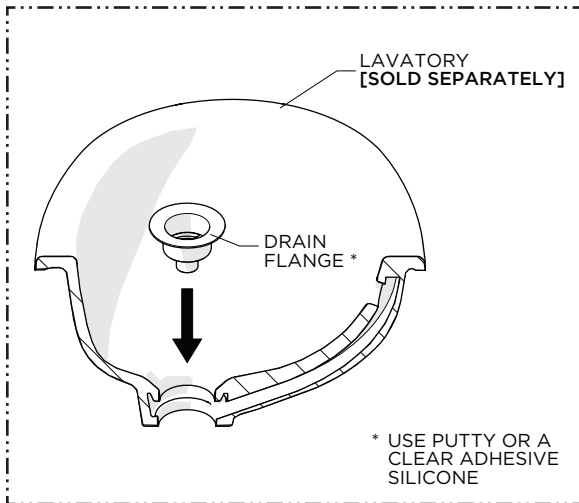

16. Set the DRAIN FLANGE into the lavatory (**sold separately**) using putty or a clear adhesive silicone.

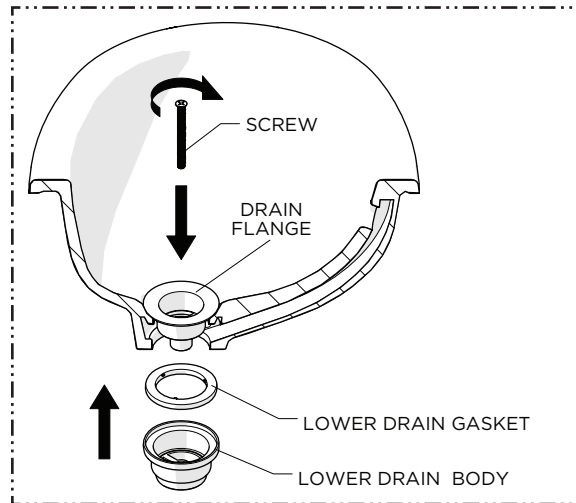

17. Insert the SCREW provided into the FLANGE then thread and securely tighten the SCREW into the LOWER DRAIN BODY making sure the LOWER DRAIN GASKET makes a full seal on the underside of the LAVATORY.

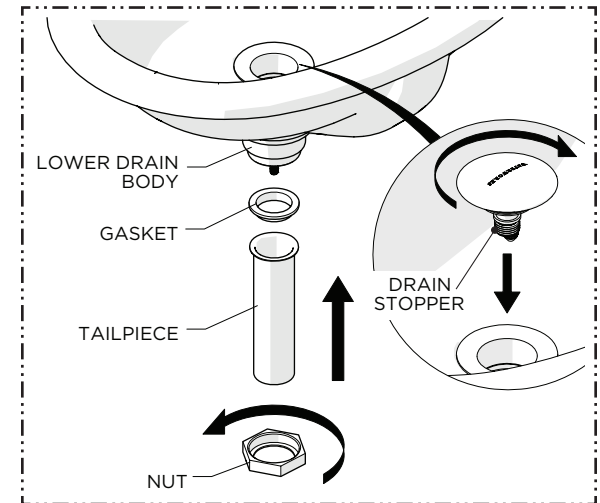


18. Re-install the DRAIN STOPPER and TAILPIECE using the GASKET and NUT provided.


# INSTALLATION GUIDELINES

## WALL MOUNTED LAVATORY FAUCETS


# WATERWORKS

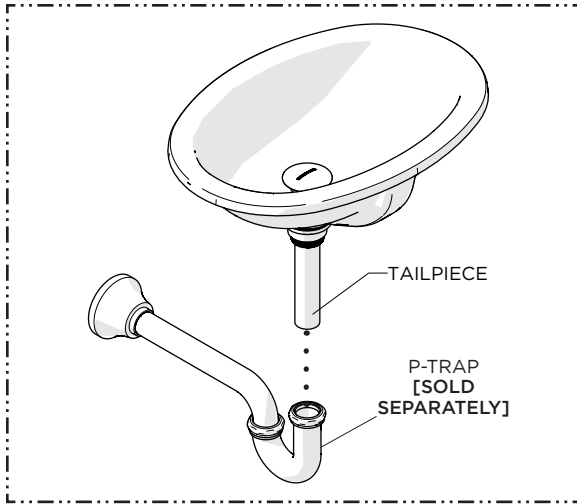


19. Make final P-TRAP (sold separately) connections.

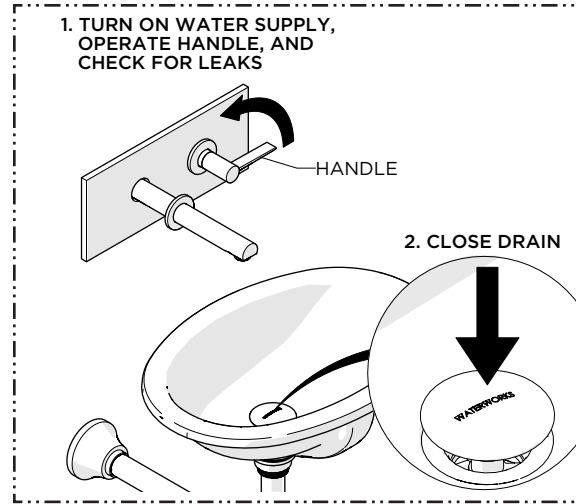

20. Turn on the water supply and operate the HANDLE(S) to flush out the supply lines, and inspect all connections for leaks then close the DRAIN to ensure it functions properly.

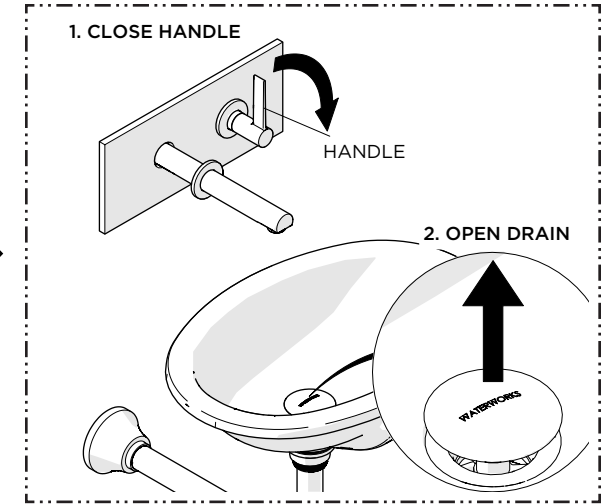

21. Close the HANDLE(S) then open the DRAIN to drain the water.

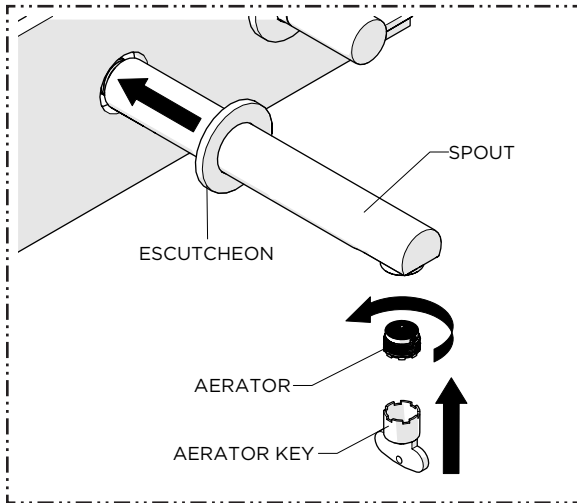

22. Re-install the AERATOR using the tool provided then slide the ESCUTCHEON down the SPOUT until it contacts the finished wall.