


WATERWORKS

INSTALLATION GUIDELINES

STYLE No. GUTH78, GU78TH

ViaWorks 3/4" Thermostatic Valve with 7" Tile Guard

STYLE NO. GUTH78, GU78TH†

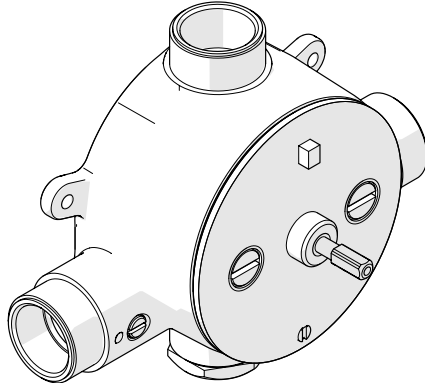

IMPORTANT:

- To ensure this VALVE is installed properly, you must read and follow these guidelines.
- The owner/user of this VALVE must keep this information for future reference.
- This VALVE and associated TRIM (SOLD SEPARATELY) must be installed by a professional licensed contractor and must be onsite prior to rough-in. This allows the installer to visualize the installation.
- **CAUTION:** The VALVE rough-in depth is measured from the center of the inlets to the surface of the finished wall and **VARIES** depending on the TRIM being used.
- This VALVE is sold partially assembled but shown fully disassembled for illustrative and service purposes only. Inspect the VALVE to ensure you have all the parts required for proper installation.
- Be sure your installation conforms to all federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- Supply fittings are designed in accordance with pressure and temperature ratings specified in ASME A112.18.1/B125.
- If this VALVE will remain unused for an extended period of time (over 3 months), then the water to the VALVE should be shut off (via service stops or system control valve) and a diverter or wall valve(s) should be opened to allow the water in the THERMOSTATIC VALVE to evaporate. This is to keep the CARTRIDGE from being exposed to stagnant or hard water, which can cause the VALVE to malfunction.

- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am - 6pm EST.
- Refer to the separate Service Parts Documents for available replacement parts.

VALVE FUNCTION:

- This VALVE only mixes hot and cold water, it does not have an on/off/volume control function. Mixed water flows out at a fixed volume to a separate diverter or wall valve which **MUST BE** installed for each fitting that will have water flowing to it.
- **WARNING:** This VALVE features anti-scald protection. The risk of scalding exists until the installer has properly calibrated/adjusted the temperature limiting device during final TRIM installation.
- The temperature limiting device is integrated into the associated TRIMS listed below.

PTTH58

- This VALVE has an optional bottom outlet port that can be used to supply water to additional fittings which will require separate diverter or wall valves and trims.
- **ALL VALVES AND TRIMS SOLD SEPARATELY.**

TECHNICAL DETAILS:


DETAIL	SPECIFICATION
INLET/OUTLET CONNECTIONS	3/4" FEMALE NPT †
UNRESTRICTED MAX FLOW RATE @ 45 PSI [3 bar]	15 GPM [56L/min]
WATER PRESSURE MAXIMUM	85psi [6.0 bar]
WATER PRESSURE MINIMUM	20psi [1.5 bar]
WATER PRESSURE RECOMMENDED	45psi [3.0 bar]

† Style No. **GU78TH** is provided with 3/4" FEMALE BSPP threaded inlet and outlet connections.


WATERWORKS INSTALLATION GUIDELINES

STYLE No. GUTH78, GU78TH


ViaWorks 3/4" Thermostatic Valve with 7" Tile Guard

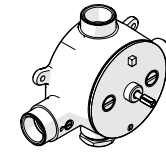

ROUGH-IN AND VALVE PREPARATION:

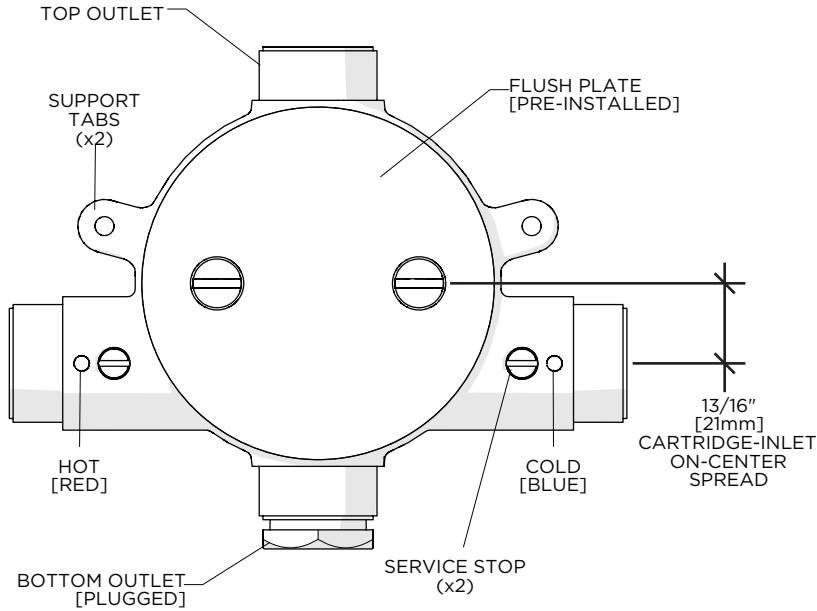


- Check incoming water pressure.
- The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall and **VARIES** depending on the TRIM being used.
- **CAUTION: DO NOT APPLY DIRECT HEAT TO THE VALVE.** Pre-solder any connections to prevent damage to the SERVICE STOP SEALS, THERMOSTATIC CARTRIDGE, and other internal components.
- This VALVE is shipped with a pre-installed FLUSH PLATE and is ready for flushing the lines.
- Before installing the THERMOSTATIC CARTRIDGE, the supply lines **MUST BE** flushed out to prevent clogging of the FILTER SCREENS.
- Failure to flush the lines will permanently damage the CARTRIDGE and **VOID** the warranty. Repeat the flushing process as needed prior to final TRIM installation.
- This VALVE includes integrated SERVICE STOPS. Make sure the TILE GUARDS are in place prior to finished wall installation to ensure future access for servicing.

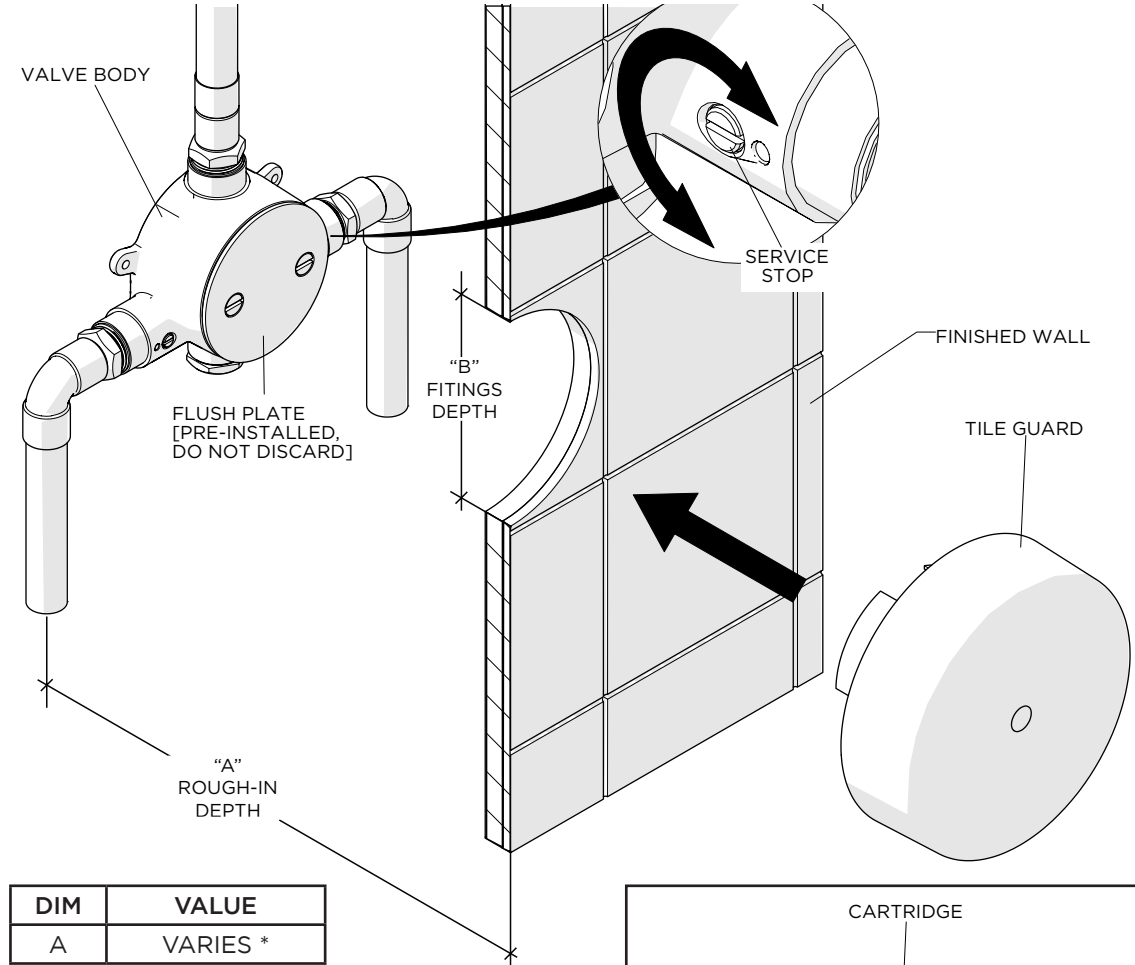


DIM	VALUE
A	VARIES *
B	Ø6-5/8" - Ø7" [168mm-178mm]

* Refer to the Installation Guidelines of the specific TRIM being used for the **MAXIMUM** and **MINIMUM** rough-in depth dimensions.

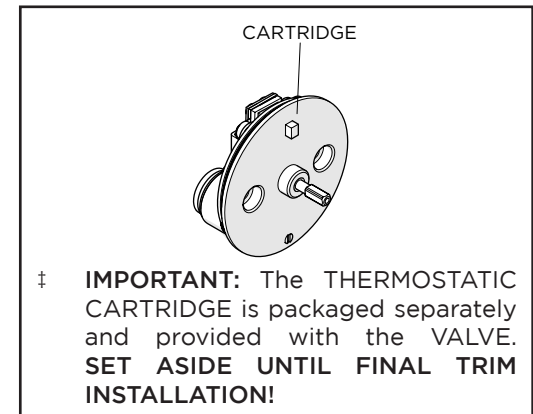


WATERWORKS INSTALLATION GUIDELINES

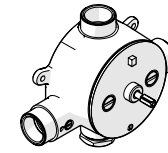


STYLE No. GUTH78, GU78TH

ViaWorks 3/4" Thermostatic Valve with 7" Tile Guard

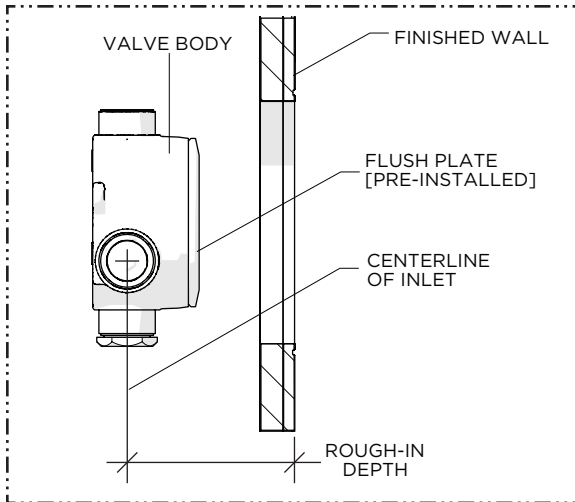


1. See the Installation Guidelines of the specific TRIM (sold separately) being used for the **MAX** and **MIN** rough-in depth dimensions.

NOTE: The rough-in depth is measured from the centerline of the inlets to the surface of the finished wall.

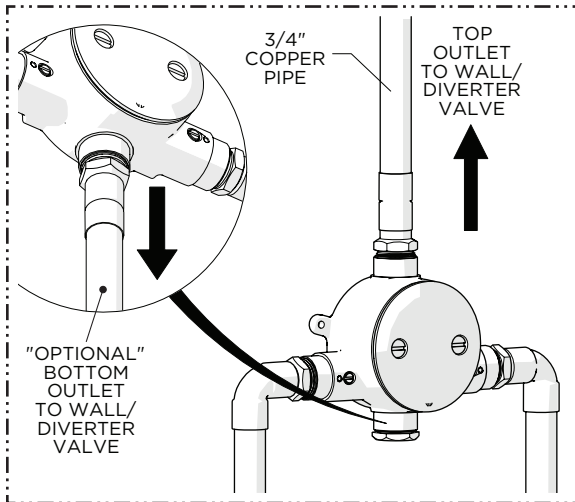


4. Run a 3/4" copper line from the top outlet and bottom outlet, if used, to a diverter/wall valve (sold separately) making sure to secure all piping and fittings.

NOTE: A diverter/wall valve **must be** installed for each fitting that will have water flowing to it.

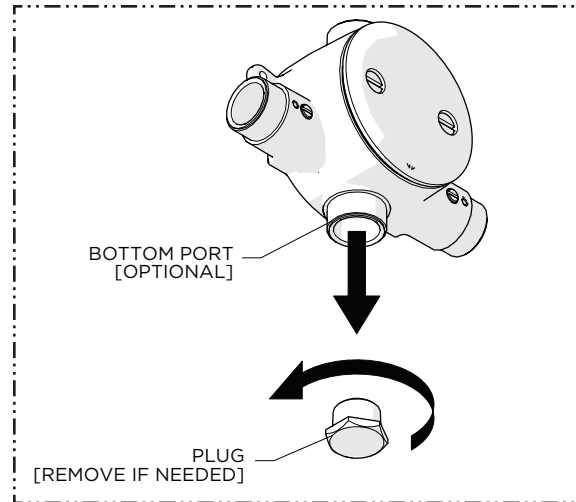


2. OPTIONAL BOTTOM PORT

- a. If port **WILL BE** used to supply water to an additional fitting, remove the PLUG or,
- b. If port **WILL NOT BE** used, make sure the PLUG is securely tightened into the VALVE BODY using a pipe thread sealant.

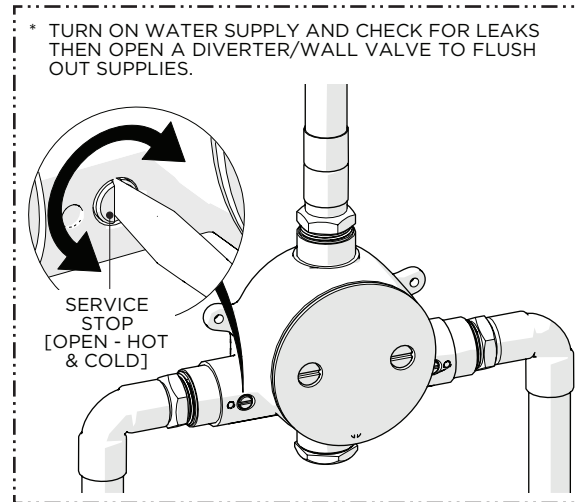


5. Turn on the water supplies then open the SERVICE STOPS (hot & cold) and open a diverter/wall valve to flush out the lines and check for leaks.

CAUTION: FAILURE TO FLUSH THE SUPPLY LINES WILL PERMANENTLY DAMAGE THE CARTRIDGE AND VOID THE WARRANTY!

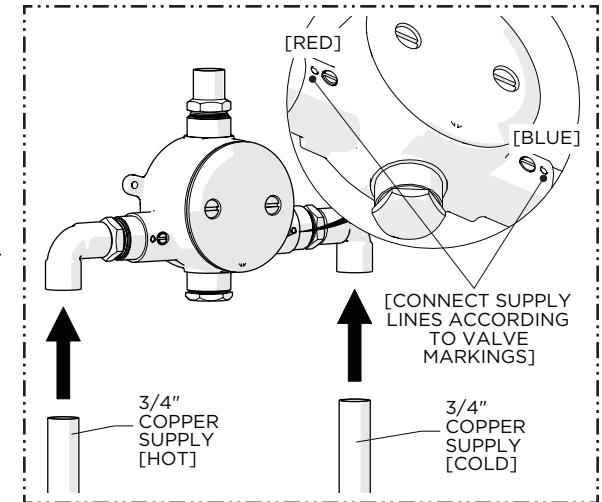


3. Run 3/4" copper supply lines to the proper height and depth of the VALVE INLETS making sure they are piped according to the VALVE markings and all piping and fittings are properly secured.

NOTE: Style No. **GU78TH** is provided with 3/4" FEMALE BSSP threaded inlets and outlets.

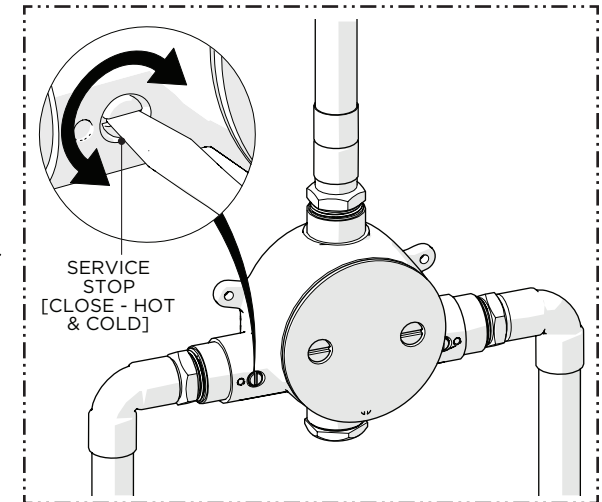


6. After the supply lines have been fully flushed, turn off the water and close the SERVICE STOPS (hot & cold).

WATERWORKS INSTALLATION GUIDELINES

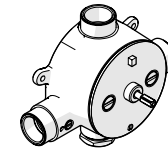



STYLE No. GUTH78, GU78TH

ViaWorks 3/4" Thermostatic Valve with 7" Tile Guard

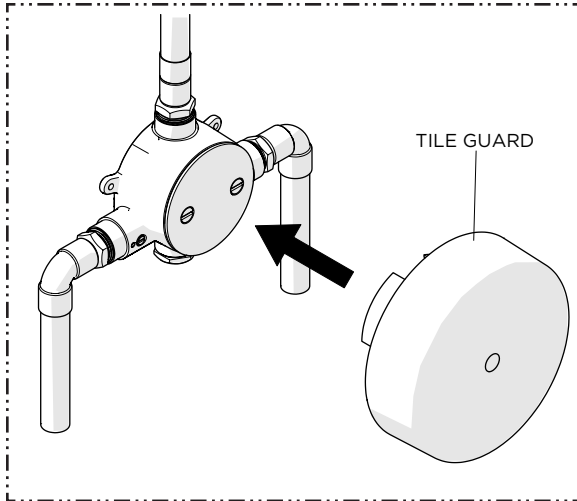

7. Place the TILE GUARD onto the VALVE making sure it is FULLY seated and do NOT remove it until construction is completed.

NOTE: This will ensure the exact opening to allow access to the SERVICE STOPS is created. Access is required for future servicing.

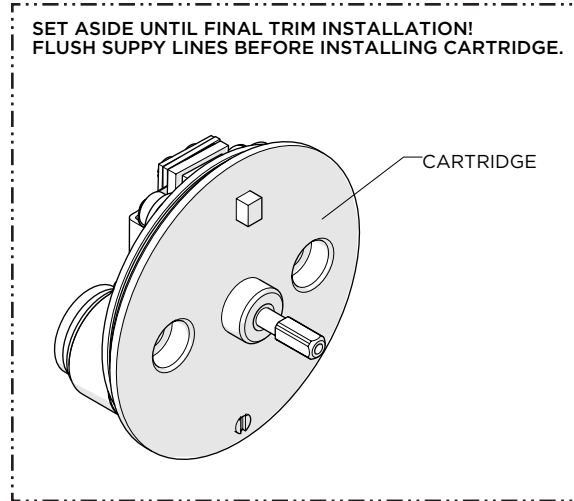

IMPORTANT

8. SET ASIDE THE THERMOSTATIC CARTRIDGE, UNTIL FINAL TRIM INSTALLATION MAKING SURE TO REPEAT THE FLUSHING PROCESS AS NEEDED BEFORE INSTALLING THE CARTRIDGE.