



Metal Wheel Handle
Style No. RWXS01

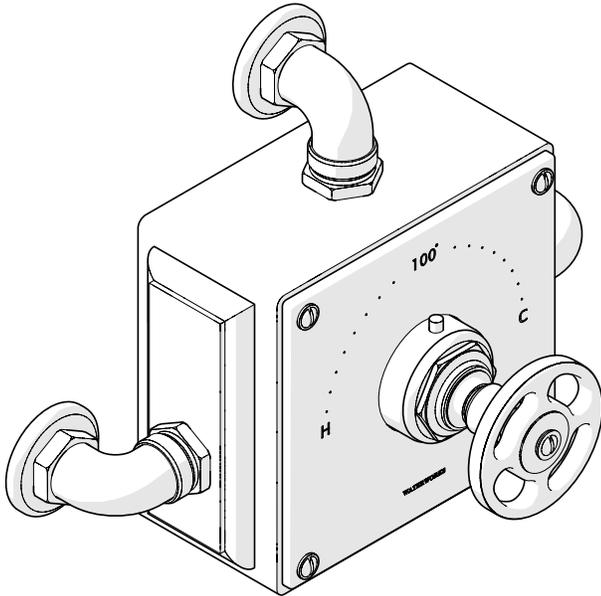

Metal Lever Handle
Style No. RWXS10

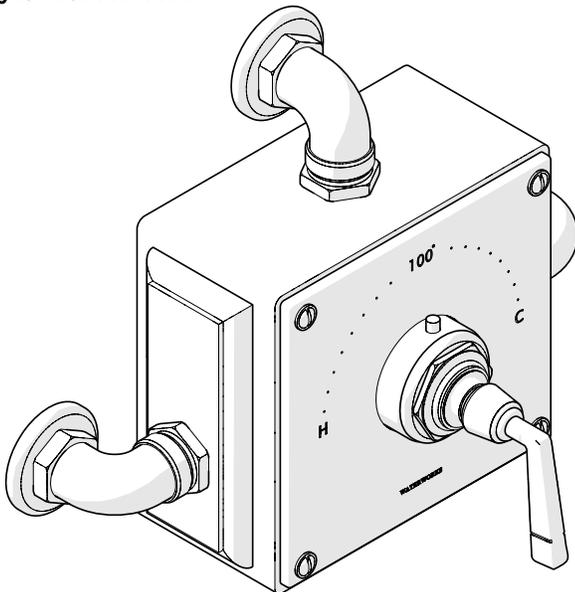

SPECIFICATIONS:

Connection Type: $\frac{3}{4}$ " Copper Compression
Inlet Spread: $11\frac{1}{2}$ " MIN - $11\frac{3}{4}$ " MAX
Outlet Spread (From Inlets): $5\frac{7}{8}$ " MIN - 6" MAX
Recommended Pressure: 45 psi

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- The owner/user of this product must keep this information for future reference.
- This product is supplied with the Waterworks Universal Thermostatic Valve (STYLE # GUTH37) which features anti-scald protection. The risk of scalding exists until the installer has properly calibrated/adjusted the temperature setting during final trim installation. Refer to the Installation Guidelines of the thermostatic valve for additional information.
- Be sure your installation conforms to federal, state, and local codes. In the State of Massachusetts, all installations must comply with the rules and regulations set forth within 248 CMR.
- **This exposed thermostatic valve only mixes hot and cold water. It does not have volume control or shut-off capabilities. A diverter or wall valve (sold separately) control on/off/volume and must be installed for each fitting that will have water flowing to it. This valve cannot be used directly with a diverting tub spout.**
- This product must be installed by a professional licensed contractor and must be onsite prior to rough-in, this allows the installer to visualize the installation.
- Proper blocking in the wall is required.
- Inspect this product to ensure you have all the parts required for proper installation.
- Use only a strap wrench or protected/smooth-jaw wrench on any finished surface.
- Install accessible hot and cold service stop valves to facilitate servicing.
- **DO NOT use putty on fittings.**


These guidelines have been prepared for the professional contractor to aid in the installation of:
**RW ATLAS EXPOSED THERMOSTATIC VALVE WITH METAL WHEEL HANDLE (STYLE# RWXS01)
& METAL LEVER HANDLE (STYLE # RWXS10)**
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.
SEE SERVICE PART DOCUMENT FOR PART ORDERING, AVAILABLE ON WATERWORKS.COM

WATERWORKS

ROUGH IN:

- See Figure - 01 for Steps 1-4.
1. Run well supported 3/4" hot and cold copper supply lines for maximum flow.
 2. Determine the ideal location of the valve, based on user preferences. Install blocking to properly secure the valve body.
 3. Verify the supplies and outlet are secure and level. The inlets must have a spread of 11-1/2"MIN to 11-3/4"MAX. The outlet must be 5-7/8"MIN to 6" MAX vertically from the inlets and centered horizontally between the two inlets. Make sure the hot supply is on the left and the cold supply is on the right. Cap off supplies and outlet and check for leaks.
 4. Cut the copper lines so they extend 15/16" from the finished wall.

Figure - 01

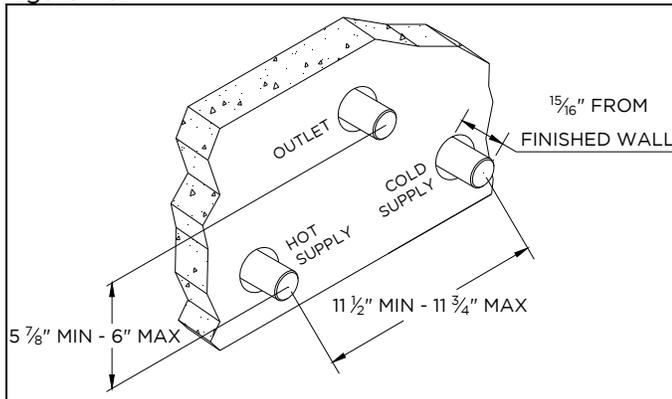
**EXPOSED VALVE INSTALLATION:**

- See Figure - 02 for Steps 5-13.
5. Unthread and remove the compression nuts and compression rings, along with escutcheons and o-rings from each elbow.
 6. Slide the o-ring, escutcheon, compression nut and compression ring over each connection tube, making sure the threading on the compression nut is facing outwards.
 7. Loosen the knurled collars and thread the elbows into the valve body until they stop, then un-thread enough so that they align with the supply tubes and outlet tube (MAXIMUM 3 ROTATIONS). Note that the elbow seal is created by internal o-rings and NOT by fully tightening the elbow.
 8. Position the valve body assembly onto the supplies and outlet until they are fully seated into the elbow and then **hand tighten** the compression nuts. Slide the escutcheon back towards the wall; and if the gap

is too large, as to where the escutcheon slides off the compression nut, cut the supply and outlet tubes accordingly.

9. With the valve level and up against the wall, mark the 4 mounting hole locations through the holes that are on the back plate of the valve body.
10. Loosen the compression nuts and remove the valve body.
11. Drill the wall for the 4 wall anchors provided and install them.
12. Re-install the valve onto the supply and outlet tubes, then, using a wrench, tighten the compression nuts fully. Tighten the knurled collars so that they are tight against the side of the valve body. Make sure the escutcheons are against the wall, with the o-ring behind it.
13. Install the screws, through the valve body and into the wall anchors to fully secure the assembly.

Figure - 02

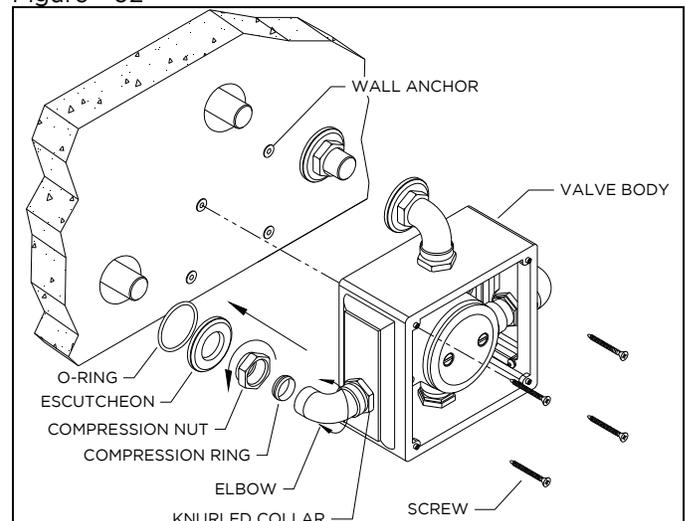


These guidelines have been prepared for the professional contractor to aid in the installation of:
RW ATLAS EXPOSED THERMOSTATIC VALVE WITH METAL WHEEL HANDLE (STYLE# RWXS01)
& METAL LEVER HANDLE (STYLE# RWXS10)
 All dimensions are based on original specification and are subject to change and variation.
 Please consult your Design Associate for current specifications.
SEE SERVICE PART DOCUMENT FOR PART ORDERING, AVAILABLE ON WATERWORKS.COM

WATERWORKS

FLUSH OUT THE SYSTEM:


- Wall valves and/or diverters and all shower fittings, must be fully plumbed and installed prior to flushing the system. (ALL SOLD SEPARATELY).
 - The supply lines must be flushed out to prevent clogging of the filter screens. Failure to flush the lines will permanently damage the cartridge and void the warranty.
 - See Figure - 03 for Steps 14-18.
14. The exposed wall valve comes pre-installed with the flush plate and is ready for flushing the lines.
 15. Remove the showerhead and/or handshower (any fitting with a flow regulator).
 16. Turn on the water supply to flush out the lines, then inspect all connections for leaks.
 17. After the lines are flushed, turn off the water supply and remove the flush plate.
 18. Install the cartridge using the 2 cover screws and turn the service stops off.

Figure - 03

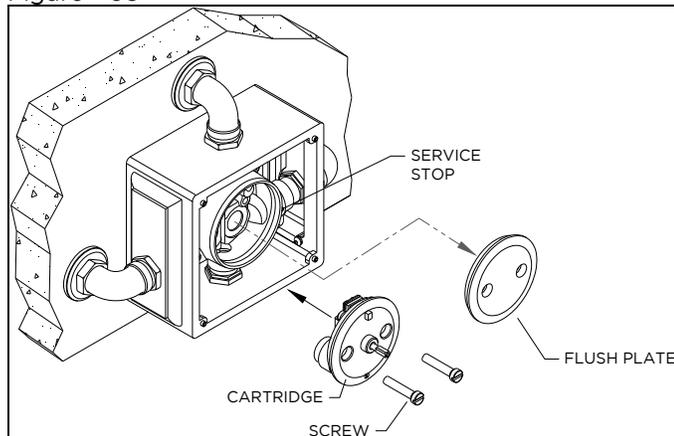**TRIM PLATE INSTALLATION:**

- See Figure - 04 for steps 19 - 21.
19. Attach trim plate to valve body using the 4 screws, making sure the gasket is behind the plate. Note: USE A LARGE SLOTTED SCREWDRIVER TO AVOID DAMAGING SCREWS.
 20. Thread the all thread adapter onto the cartridge until it stops and insert the square tube over the cartridge stem.
 21. Thread the trim nut onto the all thread adapter until it stops. Note: DO NOT OVER-TIGHTEN.

Figure - 04

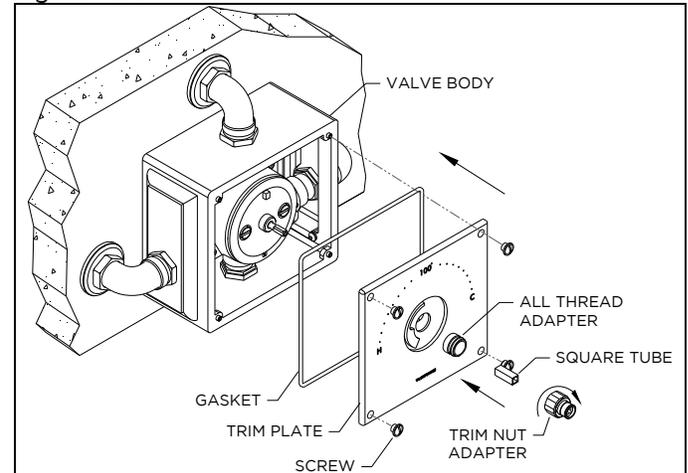
**TEMPERATURE CALIBRATION:**

- The risk of scalding exists until the installer has properly calibrated the temperature setting.
 - See Figure - 05 for steps 22 - 26.
22. Turn on the water supply and a wall valve to run water through the valve and insert a bladed screw driver into the square tube.
 23. Slowly rotate the square tube clockwise to attain full cold, then rotate it counter-clockwise to attain full hot. Verify a full range of temperature exists. Note: It is approximately 2 complete rotations from full cold to full hot.
 24. With water running, rotate the square tube to adjust the temperature to the maximum desired bathing temperature, verified with a thermometer. Turn the water off and make sure not to change this temperature setting.
 25. Unthread the handle assembly from the limit stop assembly and loosen the 4 set screws on the limit stop.
 26. Insert the limit stop assembly onto the trim nut making sure the limit stop pin (shown removed) makes contact with the limit stop on the trim plate, then tighten the 4 set screws.

These guidelines have been prepared for the professional contractor to aid in the installation of:
**RW ATLAS EXPOSED THERMOSTATIC VALVE WITH METAL WHEEL HANDLE (STYLE# RWXS01)
 & METAL LEVER HANDLE (STYLE# RWXS10)**
 All dimensions are based on original specification and are subject to change and variation.
 Please consult your Design Associate for current specifications.
SEE SERVICE PART DOCUMENT FOR PART ORDERING, AVAILABLE ON WATERWORKS.COM

WATERWORKS

Figure - 05

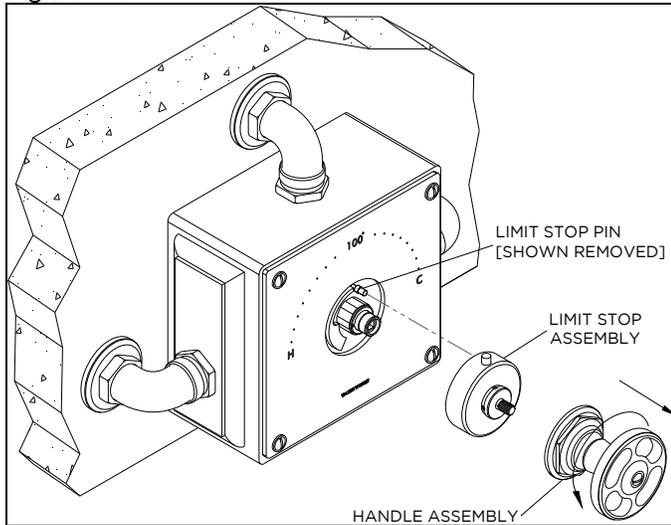

INSPECT THE INSTALLATION:

27. Turn the limit stop clockwise then turn the water on and confirm the limit stop is functioning properly by turning it counter-clockwise at which point it should stop.
 28. Verify the temperature to be the maximum temperature set in Step 24. If it is not the correct temperature, repeat the calibration procedures in Steps 22-26.
 29. To get a hotter temperature, press and hold the limit stop button, then rotate the limit stop until it stops. It is NOT recommended to exceed a safety limit stop of 110 degrees.
 30. Re-attach the handle assembly to the limit stop.
- If further assistance is required, please contact Product Support at 1-800-927-2120 (8am-6pm EST).
 - See service part document for parts ordering, available on WATERWORKS.COM.

These guidelines have been prepared for the professional contractor to aid in the installation of:
**RW ATLAS EXPOSED THERMOSTATIC VALVE WITH METAL WHEEL HANDLE (STYLE# RWXS01)
& METAL LEVER HANDLE (STYLE # RWXS10)**
All dimensions are based on original specification and are subject to change and variation.
Please consult your Design Associate for current specifications.
SEE SERVICE PART DOCUMENT FOR PART ORDERING, AVAILABLE ON WATERWORKS.COM


WATERWORKS



ESTB. 1978


WATERWORKS

SERVICE PARTS

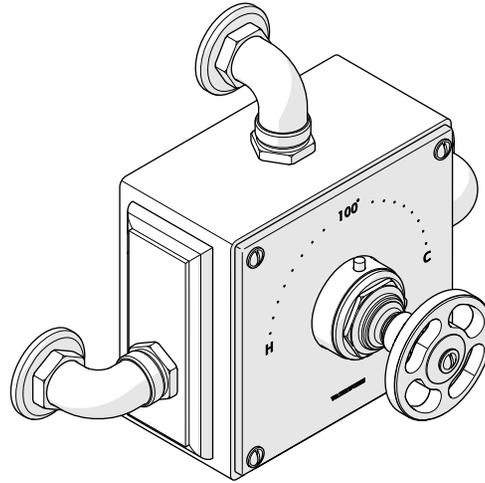

STYLE RWXS01

R.W. Atlas Exposed Thermostatic Valve with Metal Wheel Handles

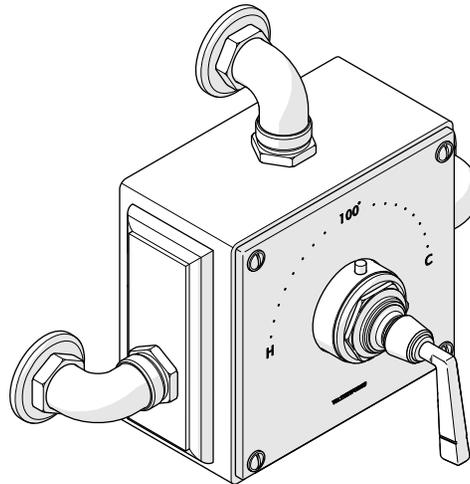

STYLE RWXS10

R.W. Atlas Exposed Thermostatic Valve with Metal Lever Handles

WELCOME TO

WATERWORKS

For over three decades, Waterworks has transformed the bath through an absolute commitment to design authenticity, innovation and quality. A blend of scholarly appreciation and applied experience guarantees mechanical integrity, meticulous craftsmanship, and timeless designs.

**TO ORDER PARTS CALL
1 (800) 927-2120 (EXT 2)**

Order by part number and specify color, finish, or other options if required.

PRODUCT SUPPORT

Our Product Support team provides troubleshooting and technical problem resolution, including replacement parts and installation recommendations throughout the life of your product.

Product Support is available Monday through Friday, 8AM-6PM EST.

**LIMITED LIFETIME
WARRANTY**

Our warranty covers repair and replacement of Waterworks products if within the applicable coverage period and deemed defective by Waterworks. Waterworks will, at its option, repair or replace such products; this does not include installation costs, labor charges, or other incidental or consequential costs.

To obtain your complete warranty or inquire about warranty service, please visit us at www.waterworks.com or contact our Product Support Team.



ESTB. 1978

WATERWORKS

MAIN KITS

STYLES: RWXS01, RWXS10


103806*
UNION

103795*
EXPOSED THERMO VALVE

103806*
UNION

103805*
EXPOSED VALVE UNION PLUG

812191
TRIM CONNECTOR

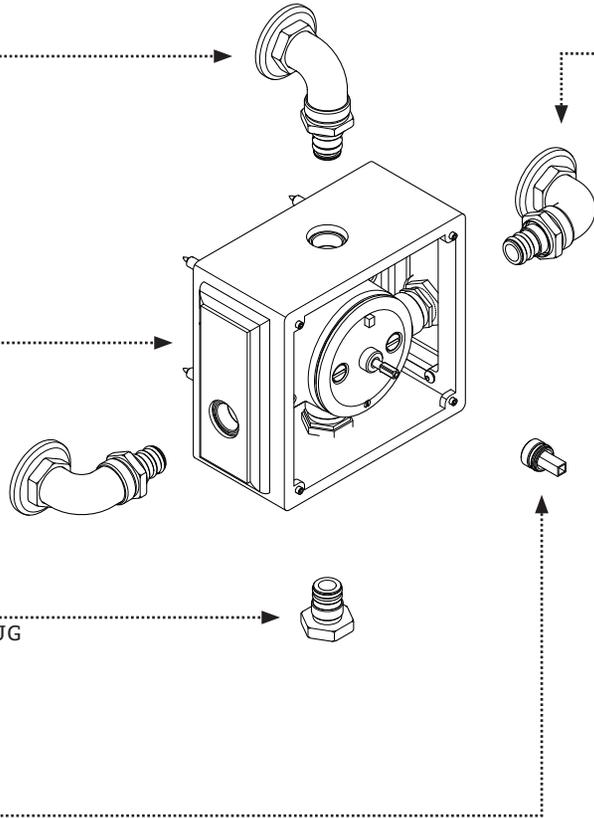

*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

103806*
UNION


103800*
FACEPLATE TRIM

594565
TRIM NUT

103708*
LIMIT STOP

103799*
WHEEL HANDLE

103804*
LEVER HANDLE

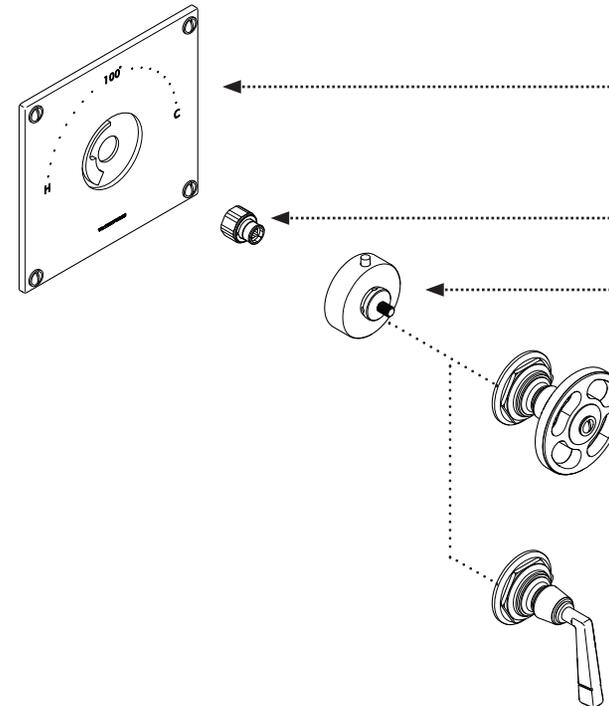



ESTB. 1978


WATERWORKS

KIT COMPONENTS


STYLES: RWXS01, RWXS10

103795*

EXPOSED THERMO VALVE

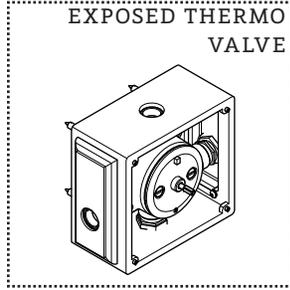

103796
MOUNTING
HARDWARE

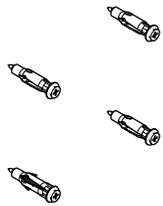


COVER

103803
VALVE BODY SCREW

103802
VALVE BODY ADAPTER

GUTH37
3/4" THERMO ROUGH VALVE

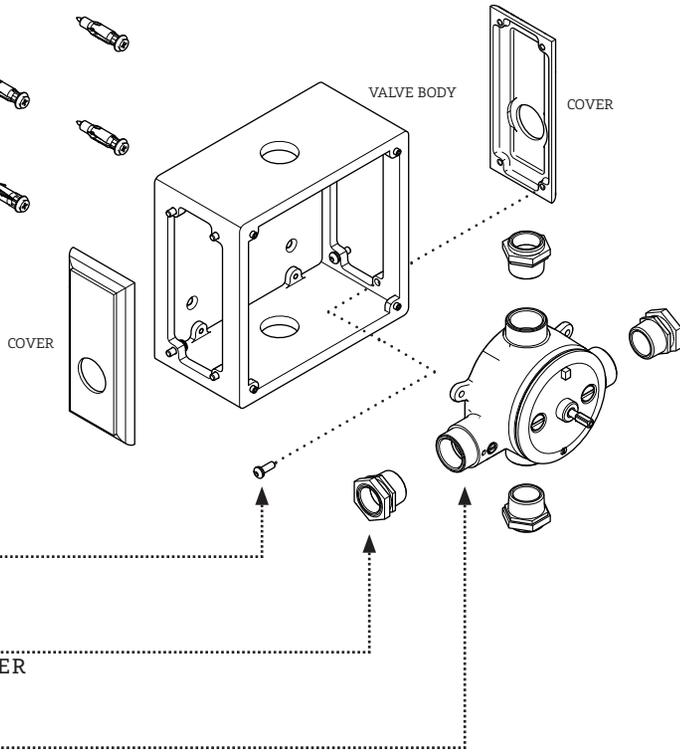


*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR


KIT COMPONENTS

GUTH37

3/4" THERMO ROUGH VALVE

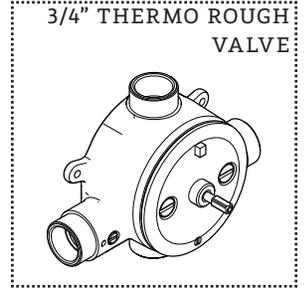

VALVE BODY

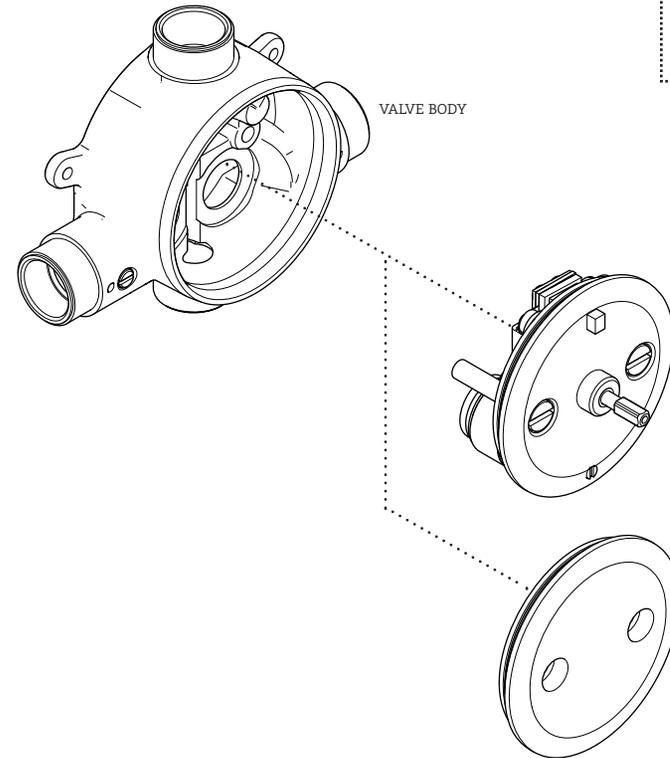

855191
3/4" THERMO
CARTRIDGE

337012
THERMO FLUSH
COVER PLATE



ESTB. 1978



WATERWORKS

KIT COMPONENTS

STYLES: RWXS01, RWXS10

855191

**3/4" THERMO
CARTRIDGE**

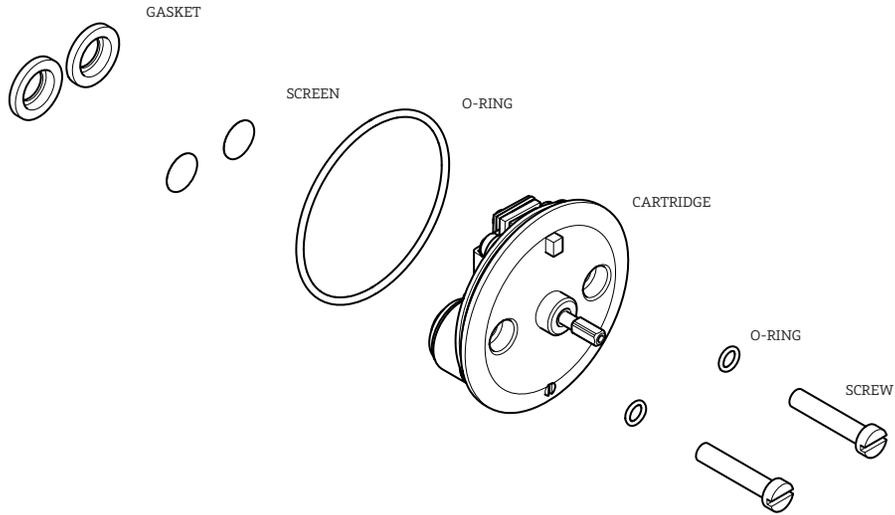
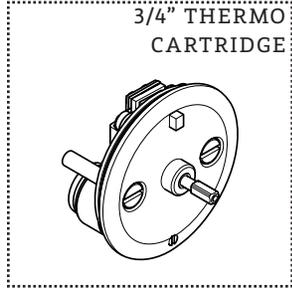


*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

KIT COMPONENTS

337012

**THERMO FLUSH
COVER PLATE**

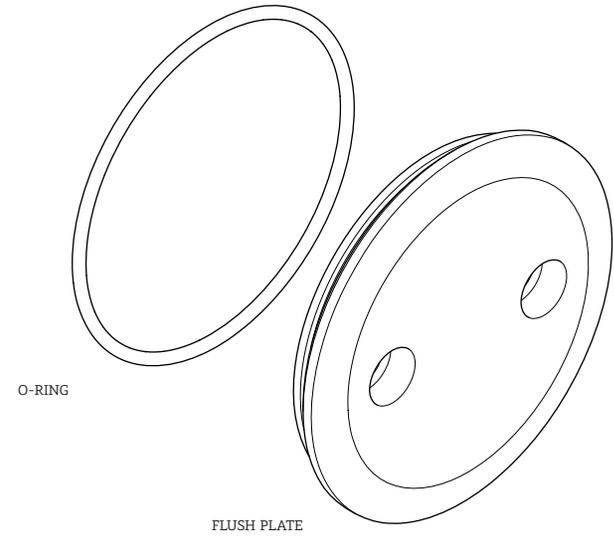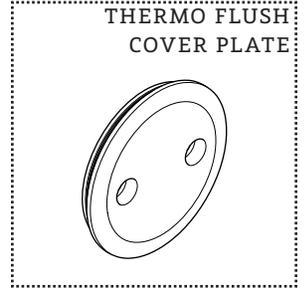



ESTB. 1978


WATERWORKS

KIT COMPONENTS


STYLES: RWXS01, RWXS10

103802


VALVE BODY ADAPTER

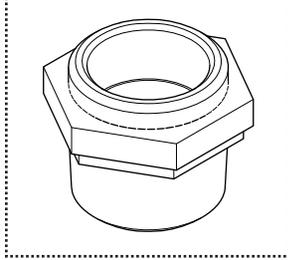

NUT

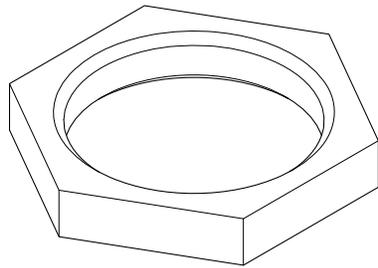

ADAPTER

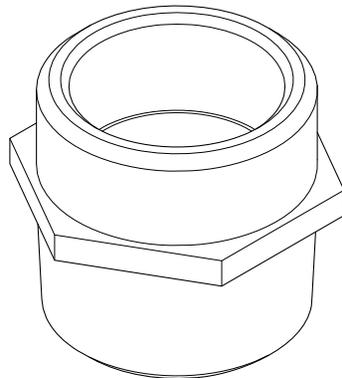


*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR


KIT COMPONENTS

103796


**MOUNTING
HARDWARE**

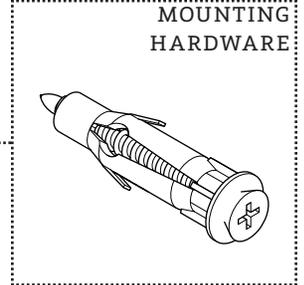


ANCHOR

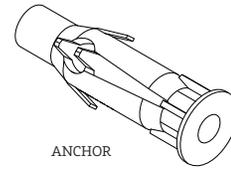


SCREW

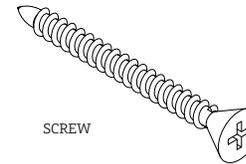

LOCK WASHER

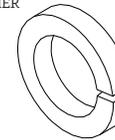


SCREW

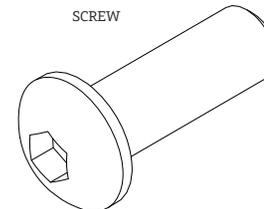

103803

VALVE BODY SCREW

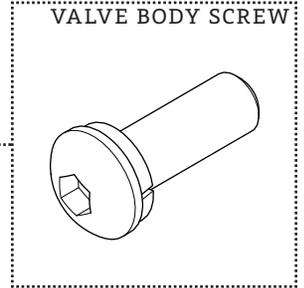




ESTB. 1978

WATERWORKS


KIT COMPONENTS

STYLES: RWXS01, RWXS10

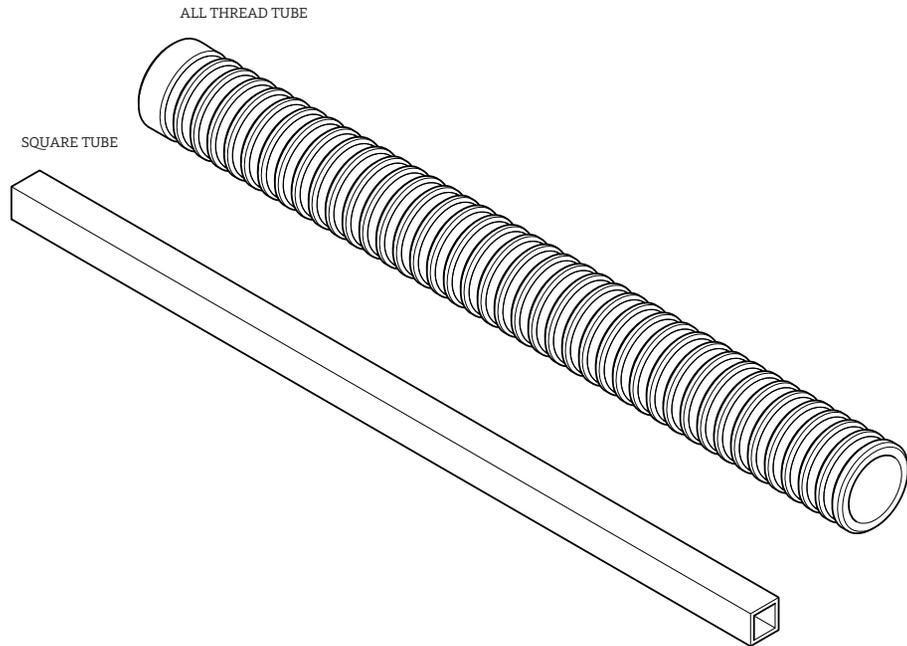

812191

TRIM CONNECTOR


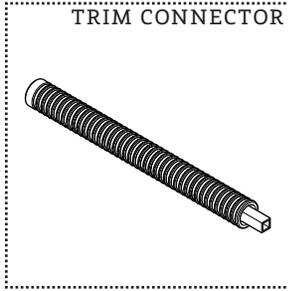


*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

KIT COMPONENTS

103800*

FACEPLATE TRIM

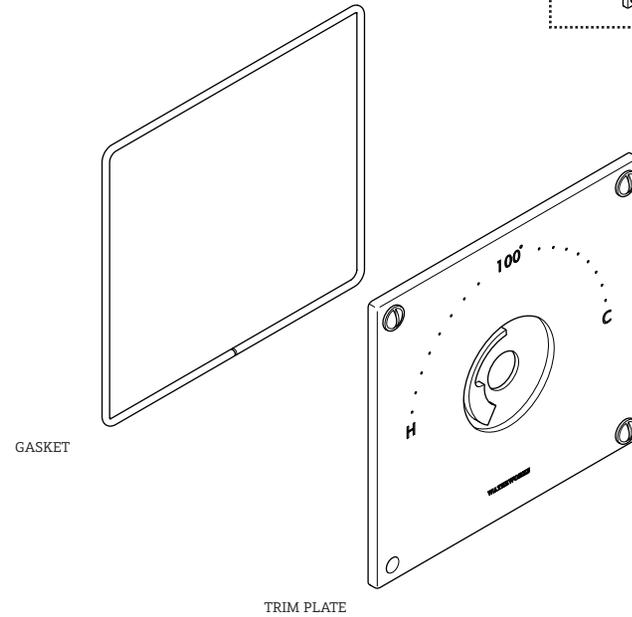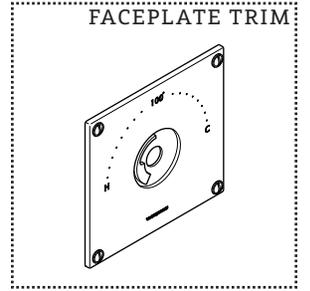

103710*
TRIM SCREW





ESTB. 1978

WATERWORKS

KIT COMPONENTS

STYLES: RWXS01, RWXS10

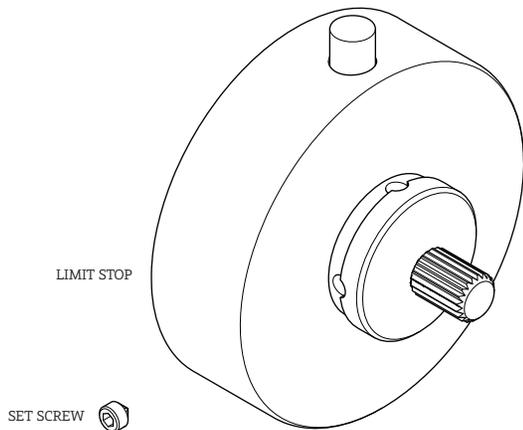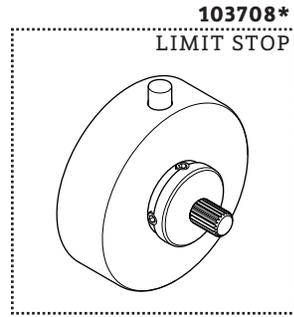

103746
FASTENING SET SCREW


*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

KIT COMPONENTS

103807*
ESCUTCHEON




103685*
UNION SEAL

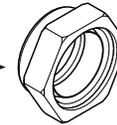


103806*
UNION




ELBOW

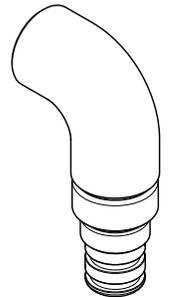

O-RING

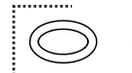

O-RING

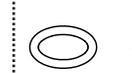

KNURLED
COLLAR



104261
SEAL KIT




ESTB. 1978

WATERWORKS


KIT COMPONENTS

STYLES: RWXS01, RWXS10

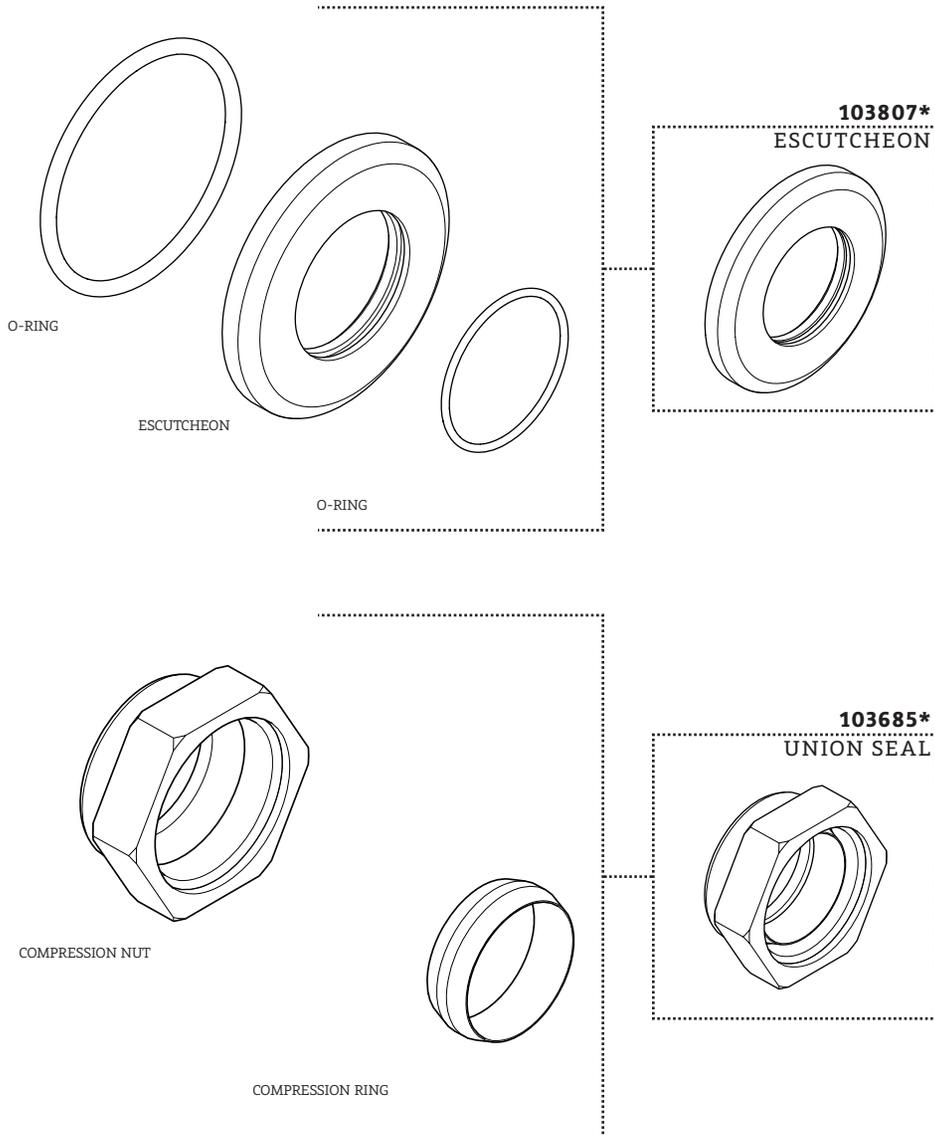

*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

KIT COMPONENTS

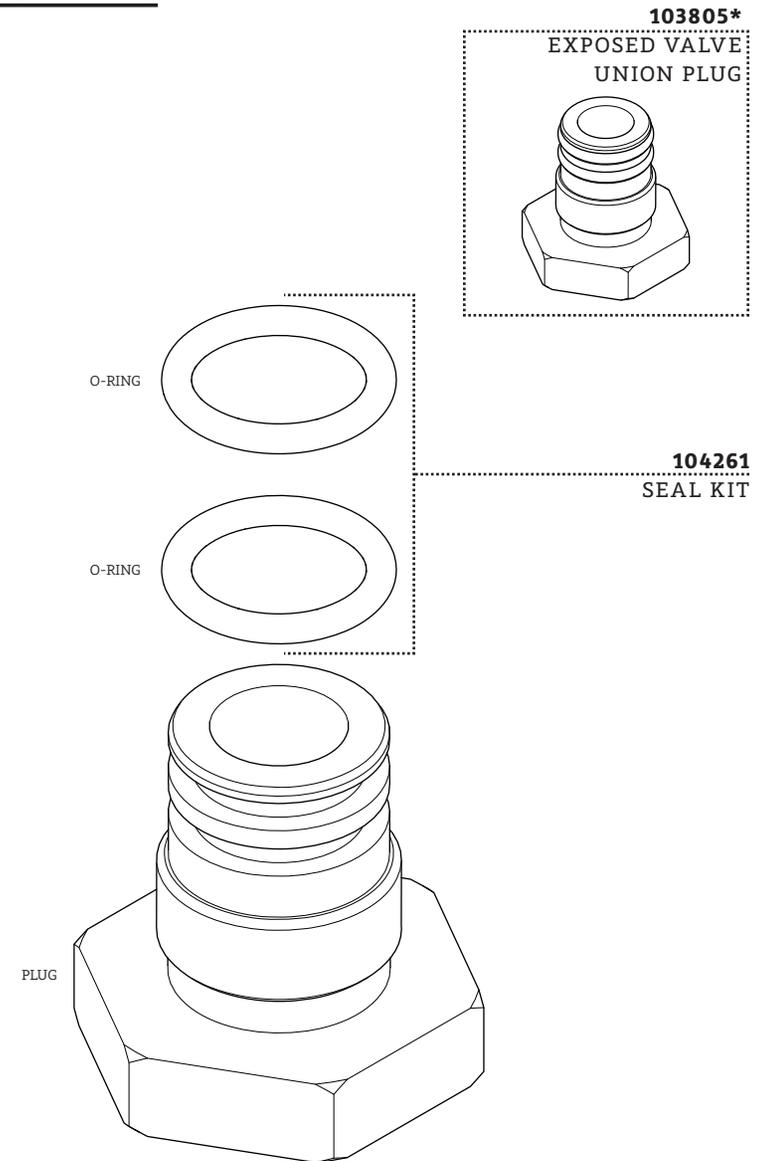



ESTB. 1978

W A T E R W O R K S

SERVICE PARTS INDEX

<u>STYLE</u>	<u>DESCRIPTION</u>	<u>PG</u>
855191	3/4" THERMO CARTRIDGE	6
GUTH37	3/4" THERMO ROUGH VALVE	5
103807*	ESCUTCHEON	14
103795*	EXPOSED THERMO VALVE	4
103805*	EXPOSED VALVE UNION PLUG	15
103800*	FACEPLATE TRIM	11
103746	FASTENING SET SCREW	12
103804*	LEVER HANDLE	3
103708*	LIMIT STOP	12
103796	MOUNTING HARDWARE	9
104261	SEAL KIT	15
337012	THERMO FLUSH COVER PLATE	7
812191	TRIM CONNECTOR	10
594565	TRIM NUT	3
103710*	TRIM SCREW	11
103806*	UNION	13
103685*	UNION SEAL	14
103802	VALVE BODY ADAPTER	8
103803	VALVE BODY SCREW	9
103799*	WHEEL HANDLE	3

DOCUMENT: SPRW10_REV01

*FINISH/COLOR MUST BE SPECIFIED WHEN ORDERING
++SUPPLIED AS A PAIR

NOTES



ESTB. 1978

WATERWORKS

PRODUCT SUPPORT

60 BACKUS AVENUE
DANBURY, CT 06810

1 (800) 927-2120 (EXT 2)

WWW.WATERWORKS.COM